




Dell Latitude E6420 Screen Replacement

How to replace a Dell Latitude E6420 screen.

Written By: Madysen Eames

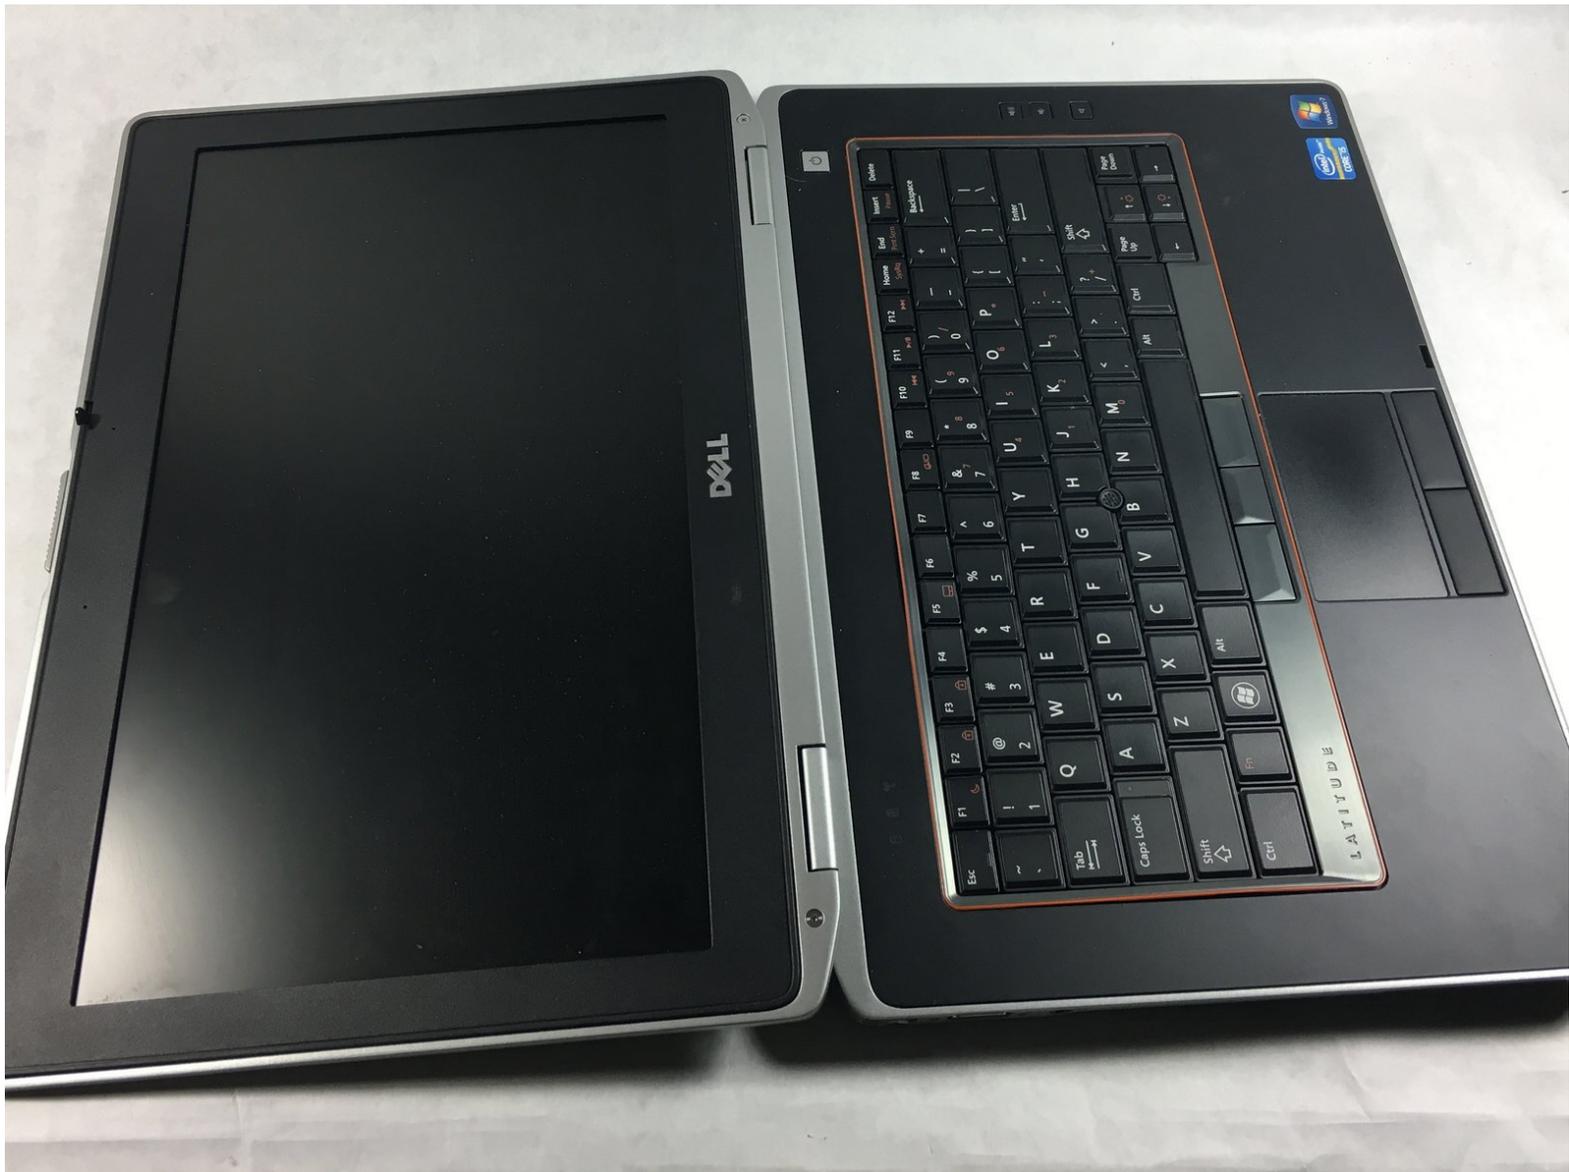


INTRODUCTION

Laptop screens can crack or stop displaying picture. This guide will show users how to replace the screen.

TOOLS:

- [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery

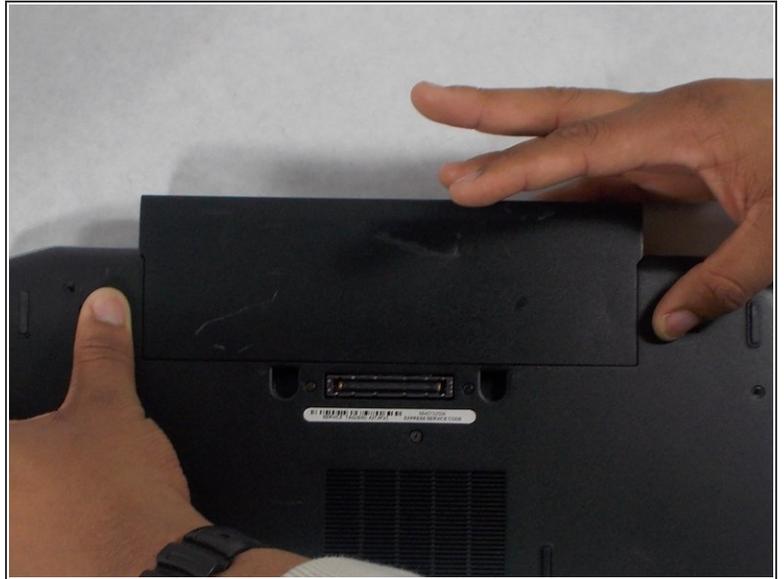


- Push the tabs on the left and right of the battery out towards the edge of the case.

Step 2



- While still pushing in the tabs, using your pinky finger, lift the battery out of the laptop.

Step 3 — Screen

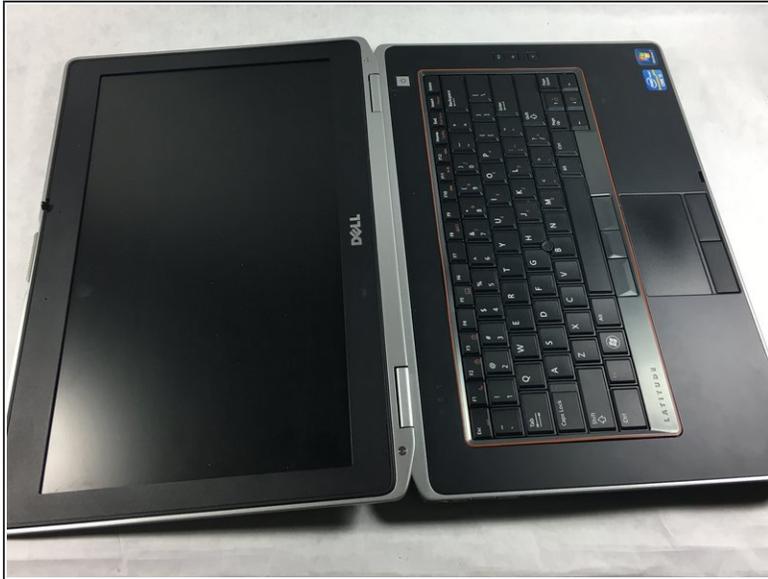

- Open the laptop and lay it flat on your work surface.
- Using the spudger, lift the bezel up from around the laptop screen.

Step 4




- Using the screwdriver, remove four 5mm Phillips #0 screws from the bottom of the laptop screen.
- Using the screwdriver, remove two 3mm Phillips #0 screws from the top of the laptop screen.
- Lift the screen.

Step 5




- Lift the laptop screen and flip it over to lay it on top of the keyboard.

Step 6

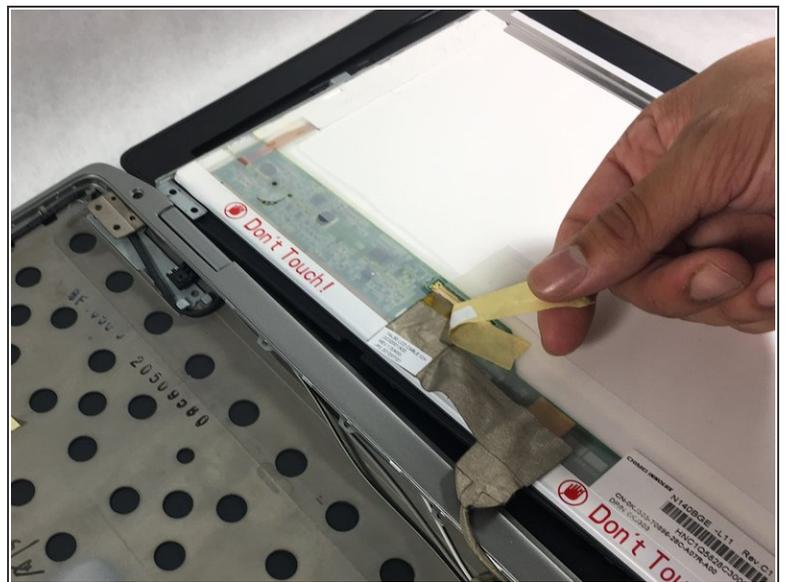

- Remove the piece of tape from the back of the LCD cable.

Step 7

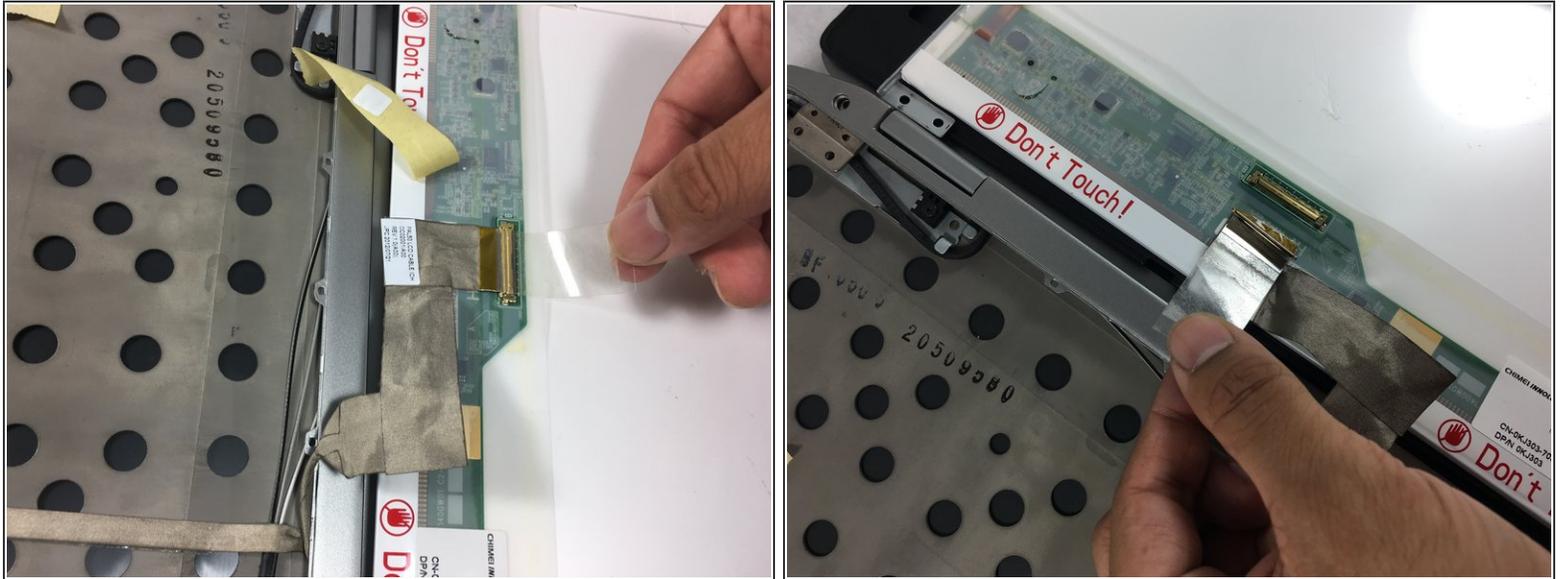

- Lift the piece of tape attached to the LCD cable.
- Once the tape has lifted, gently pull back to unplug the LCD cable.

To reassemble your device, follow these instructions in reverse order.