




# Lenovo ThinkPad X61 Hard Drive Replacement

Written By: Ryan McCarthy

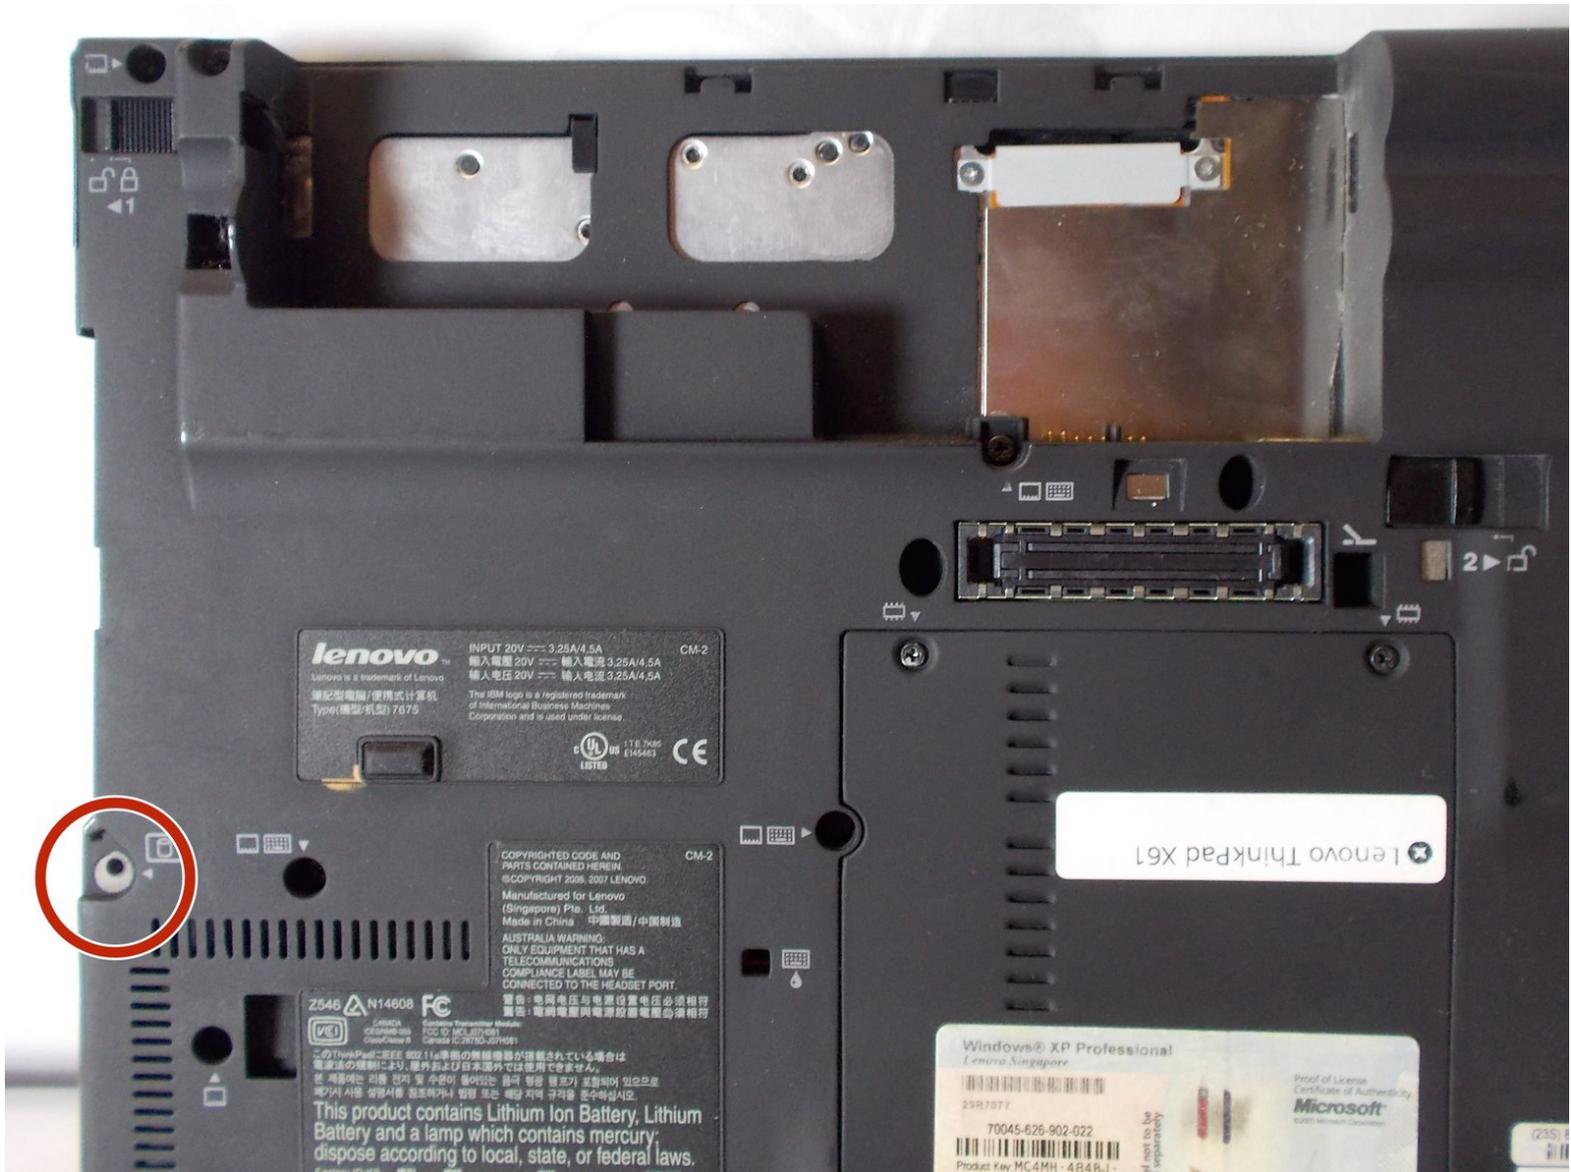


 **TOOLS:**

- [Phillips #00 Screwdriver \(1\)](#)

 **PARTS:**


- [1 TB SSD \(1\)](#)
- [250 GB SSD \(1\)](#)
- [Crucial MX500 500 GB SSD \(1\)](#)
- [Crucial MX500 2 TB SSD \(1\)](#)

## Step 1 — Hard Drive

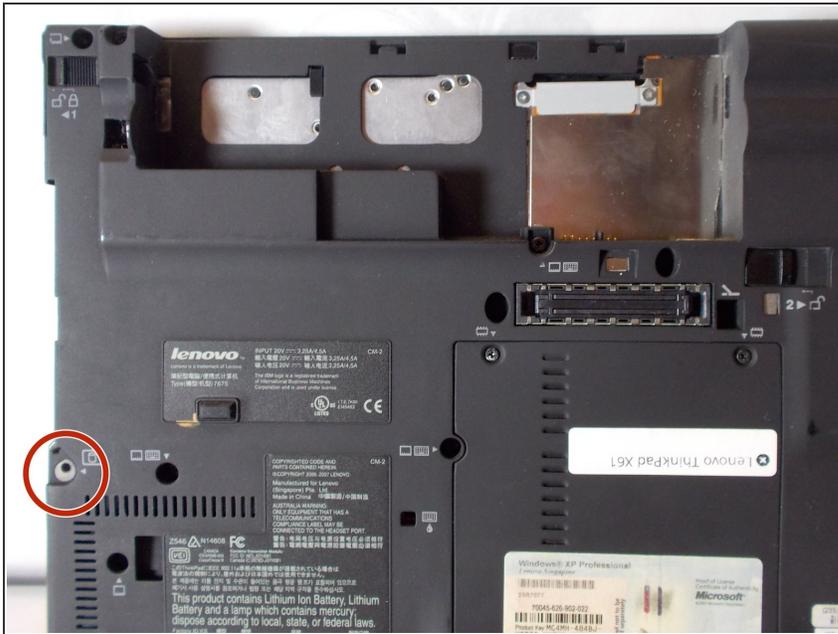

- First flip the device so its bottom side is face up, and locate the Philip #00 screw that is marked in the image.

## Step 2

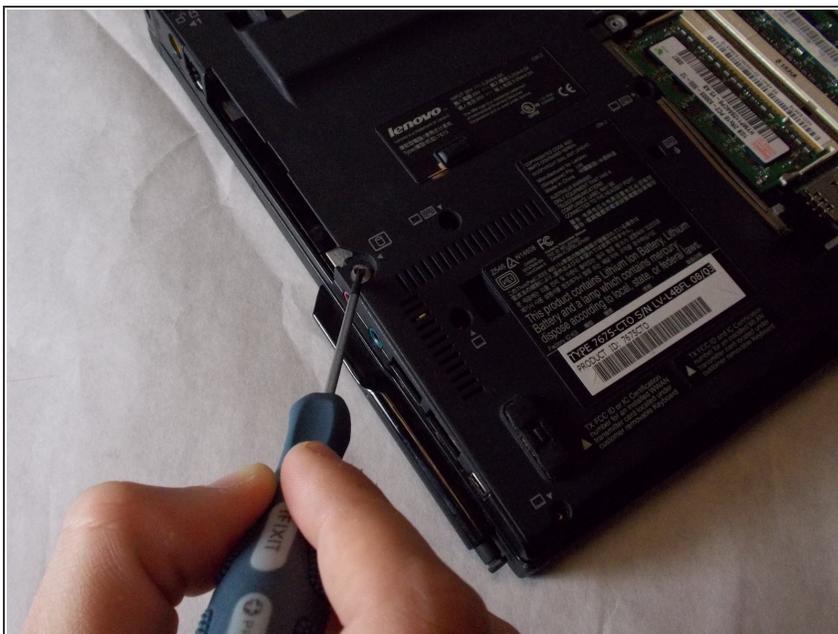

- Take out the screw that you have located in step 1.
- You can now remove the solid state drive and replace it with a new one.

To reassemble your device, follow these instructions in reverse order.