


## **Dell Studio 1557 Memory Module Replacement**


Written By: Johnathan Hammond



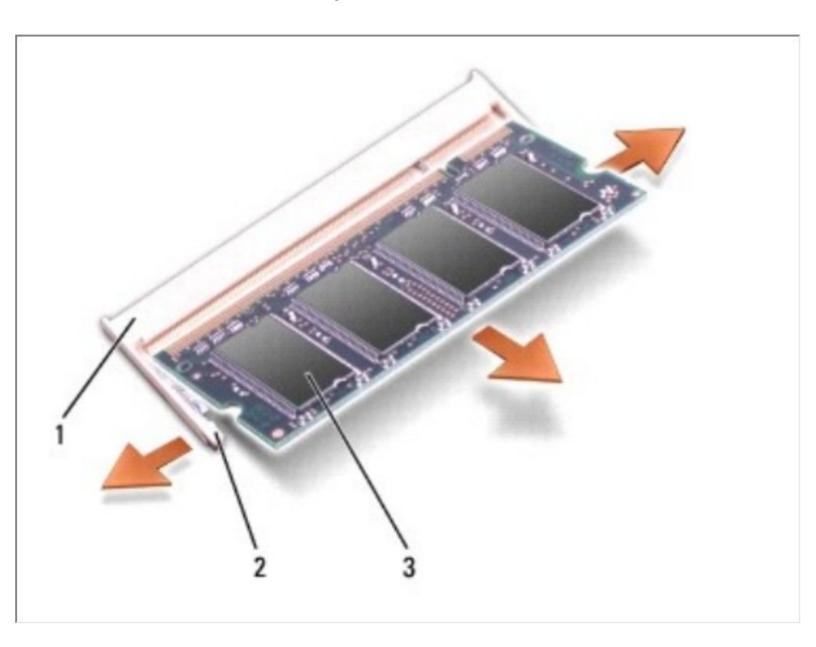


Phillips #0 Screwdriver (1)

## Step 1 — Battery

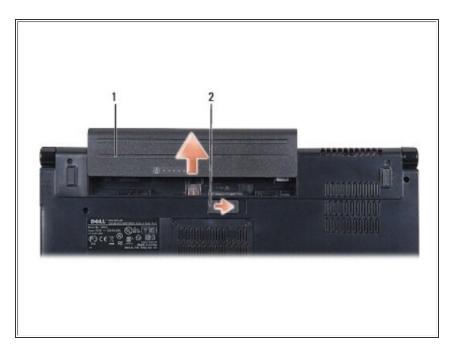


- Slide the battery release latch until it clicks into place.
- Slide the battery out of the battery bay.

## Step 2 — Base Cover

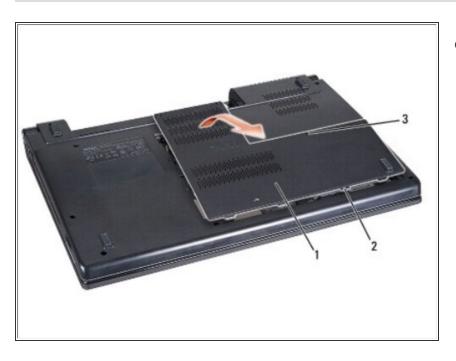

 Loosen the three captive screws on the base cover and lift the base cover off the computer at an angle as shown in the figure.

## Step 3 — Memory Module

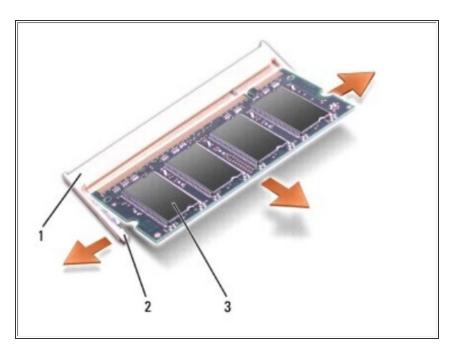

- Use your fingertips to carefully spread apart the securing clips on each end of the memory module connector until the module pops up.
- Remove the memory module from the memory module connector.

To reassemble your device, follow these instructions in reverse order.