


Dell Inspiron 13 7378 Battery Replacement

In this guide, we will show you how to remove...

Written By: Terrence15

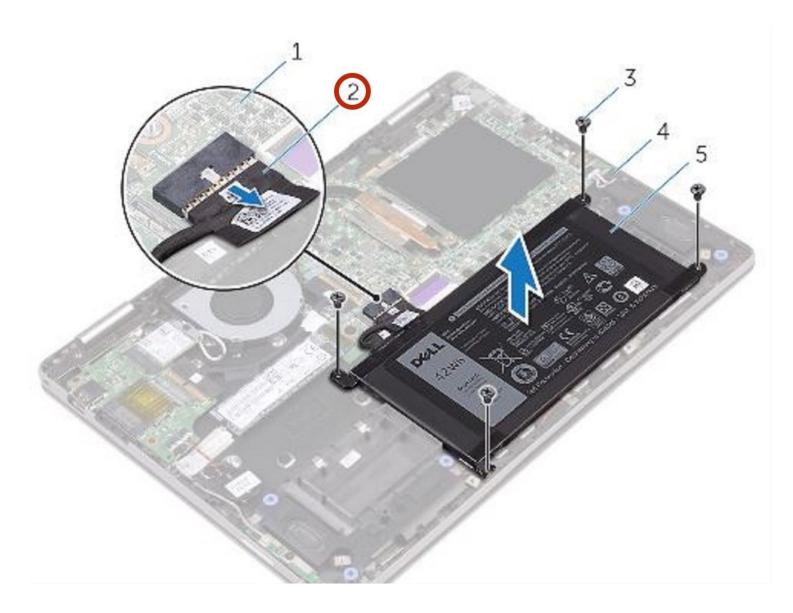

INTRODUCTION

In this guide, we will show you how to remove and replace the Battery.


TOOLS:

🌣 PARTS:

Phillips #0 Screwdriver (1)

Dell WDX0R Battery (1)


Step 1 — **Disconnecting the Battery Cable**

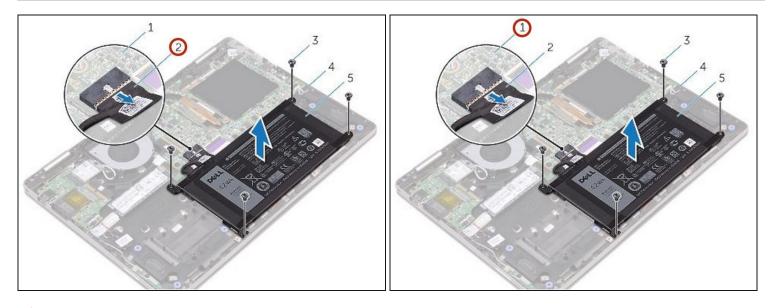

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before Working Inside Your</u> <u>Computer</u>. After working inside your computer, follow the instructions in <u>After</u> <u>Working Inside Your Computer</u>.


• Disconnect the battery cable from the system board.

Step 2 — Remove the Screws

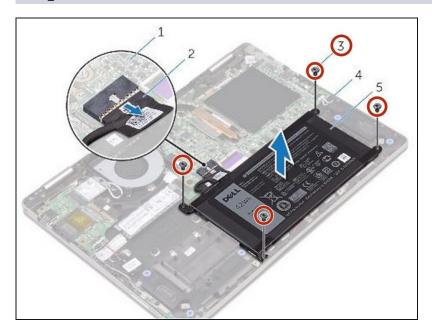

• Remove the screws that secure the battery to the palm-rest assembly.

Step 3 — Lifting the Battery

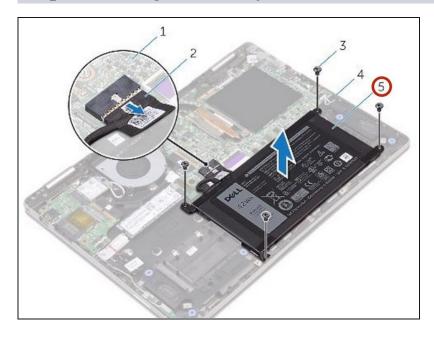


• Lift the battery off the palm-rest assembly.

Step 4 — Grounding the System Board




• Press and hold the power button for five seconds to ground the system board.

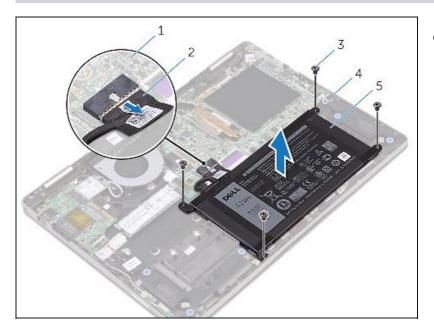

Step 5 — Align the Screw Holes


 Align the screw holes on the NEW battery with the screw holes on the palm-rest assembly.

Step 6 — Replace the Screws

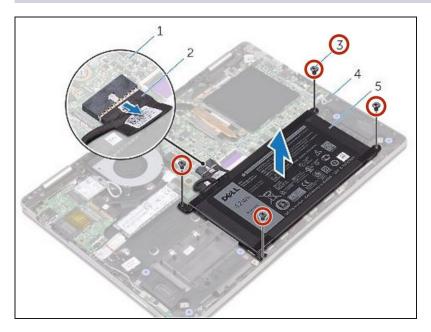

• Replace the screws that secure the battery to the palm-rest assembly.

Step 7 — Connecting the Battery Cable

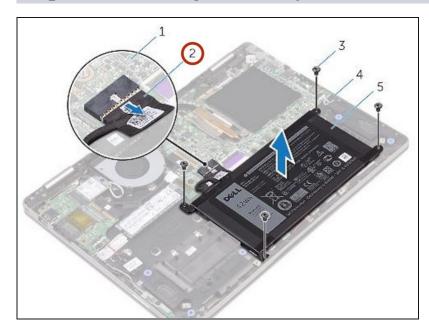

• Connect the battery cable to the system board.

To reassemble your device, follow these instructions in reverse order.