



# Dell Inspiron 13 N3010 Battery Replacement

Written By: Terrence15



---

## INTRODUCTION

In this guide, we will show you how to remove and replace the Battery.


---



### PARTS:

- [Dell Inspiron N3010, N4010, N5010 Replacement Laptop Battery \(1\)](#)
-

## Step 1 — Sliding the Battery Lock Latch

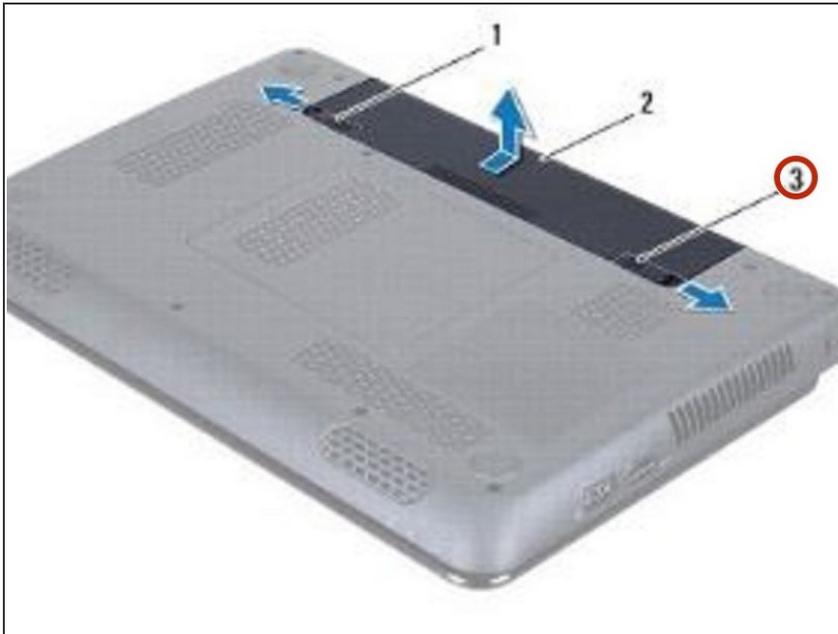


**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in [Before You Begin](#).

**⚠ CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer)


- Turn the computer over.
- Slide the battery lock latch to the unlock position.

## Step 2 — Sliding the Battery Release Latch

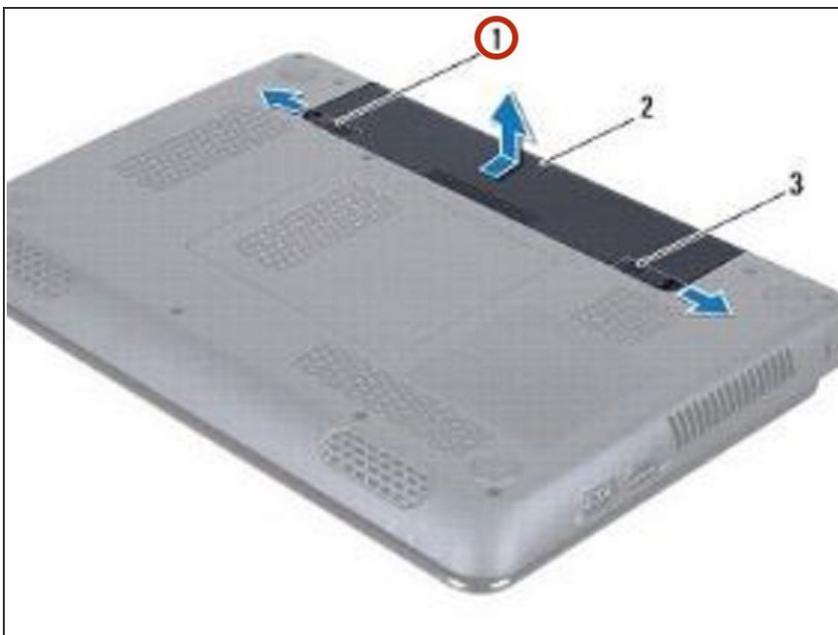


- Slide the battery release latch to the side.

### Step 3 — Lifting the Battery

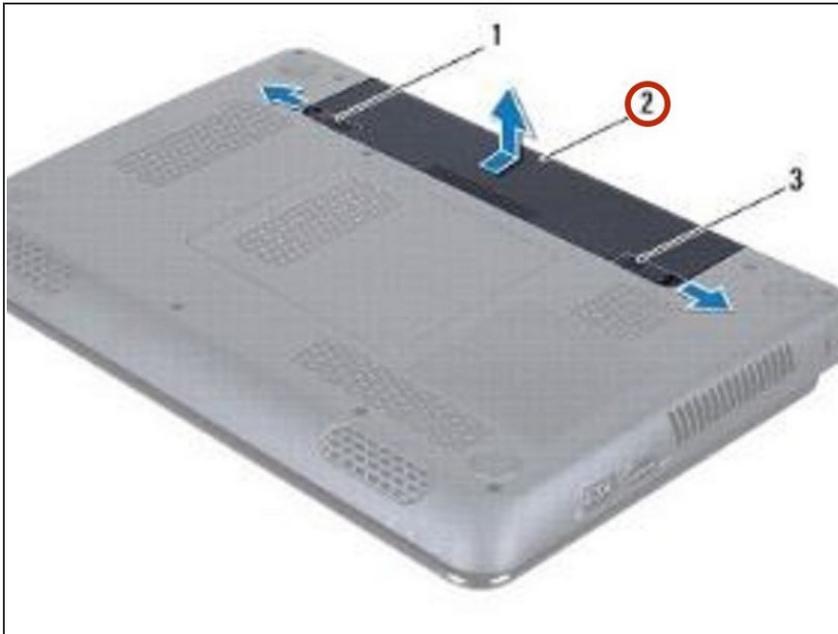


- Slide and lift the battery out of the battery bay.

### Step 4 — Sliding the Battery

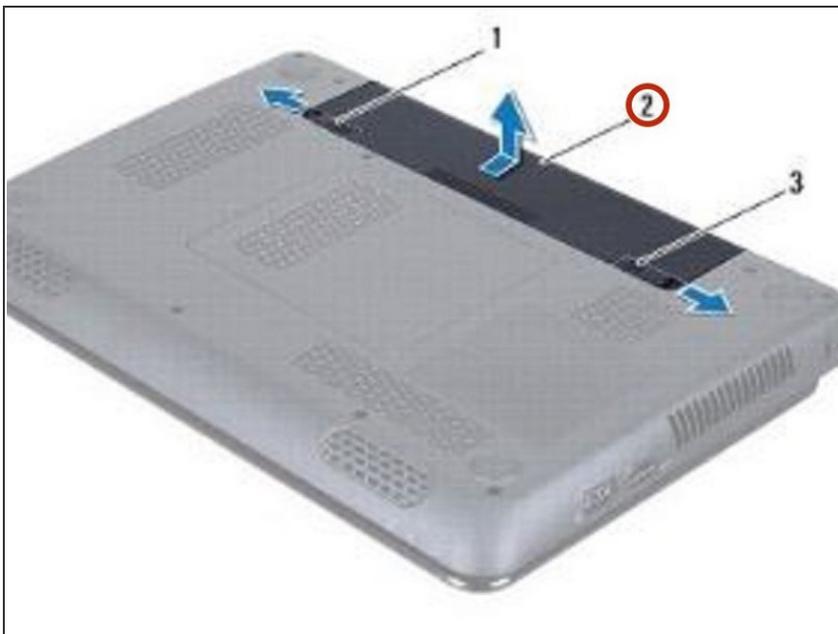

- Slide the **NEW** battery into the battery bay, until it clicks into place.

## Step 5 — Sliding the Battery Lock Latch

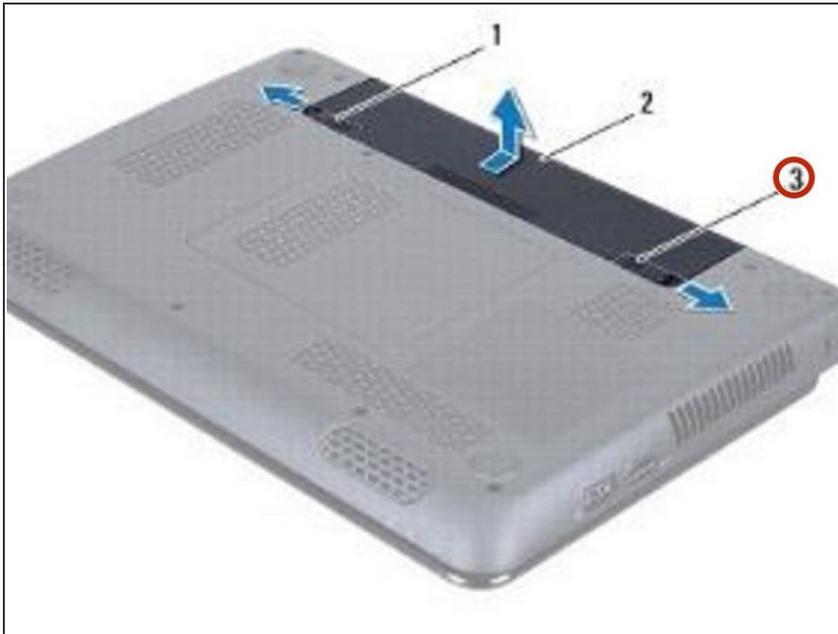

- Slide the battery lock latch to the lock position.

To reassemble your device, follow these instructions in reverse order.