




Dell Inspiron 1300 Battery


Written By: Terrence15

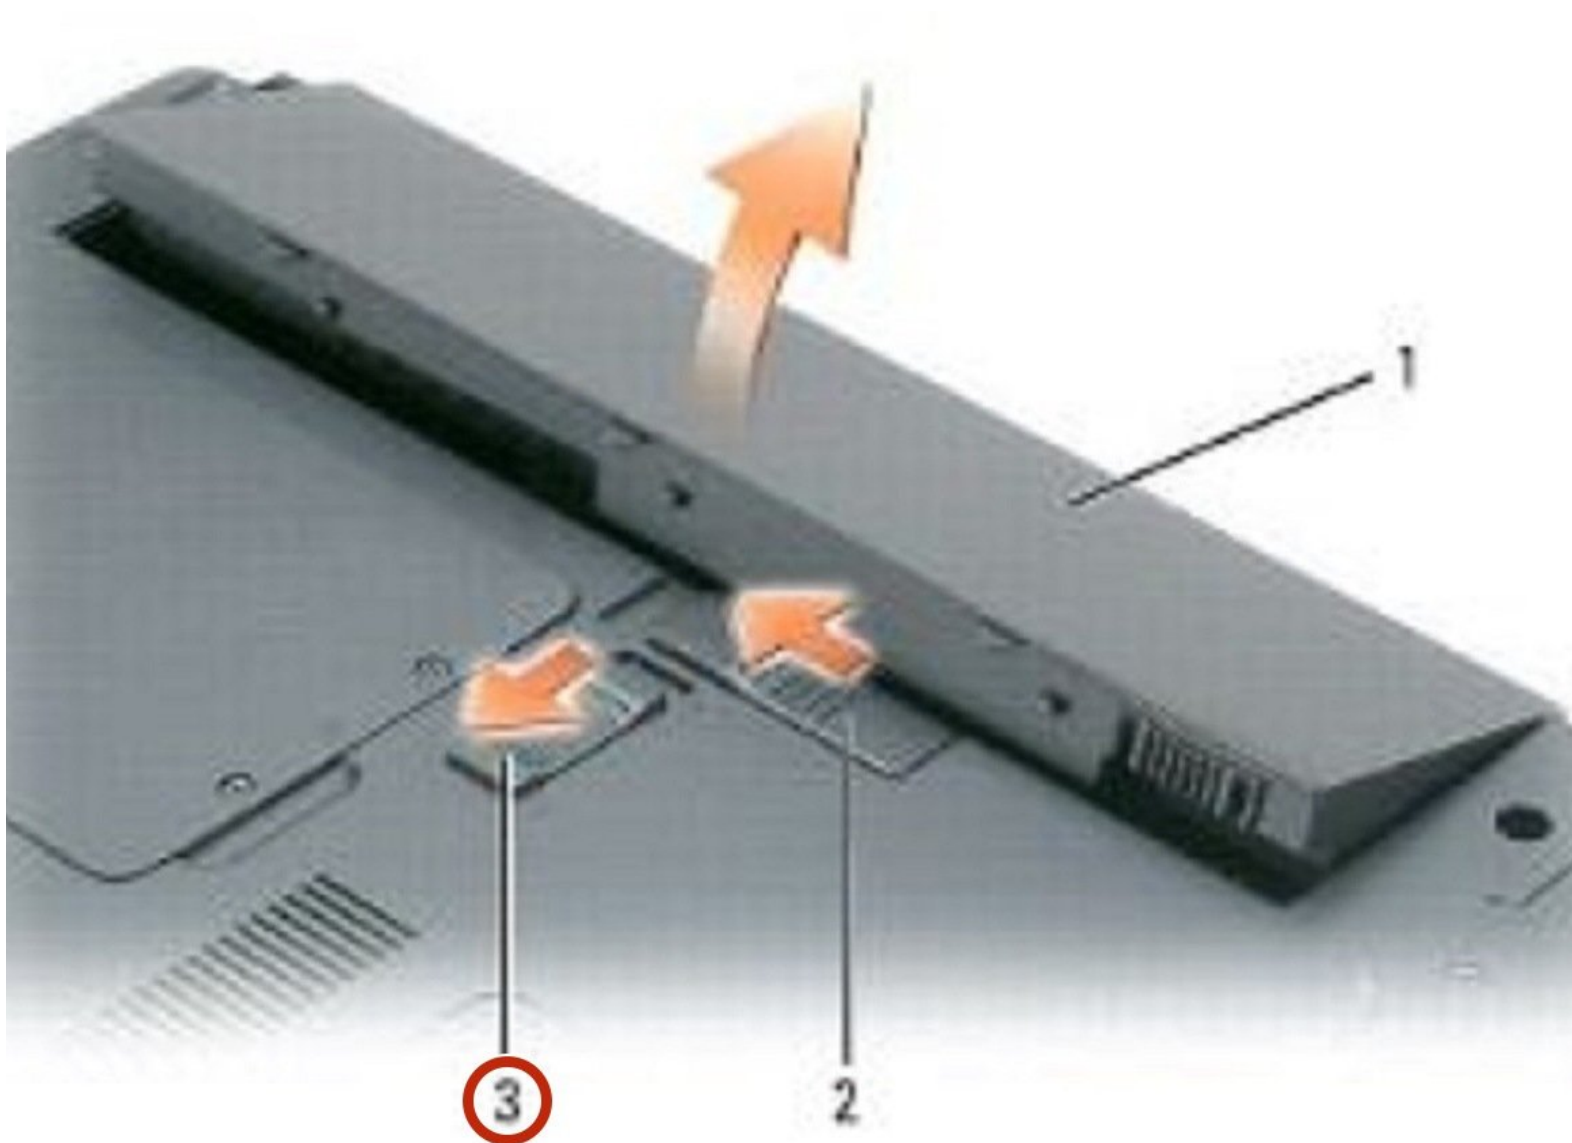

INTRODUCTION


In this guide, we will show you how to remove and replace the Battery.

Step 1 — Sliding the Battery Latch

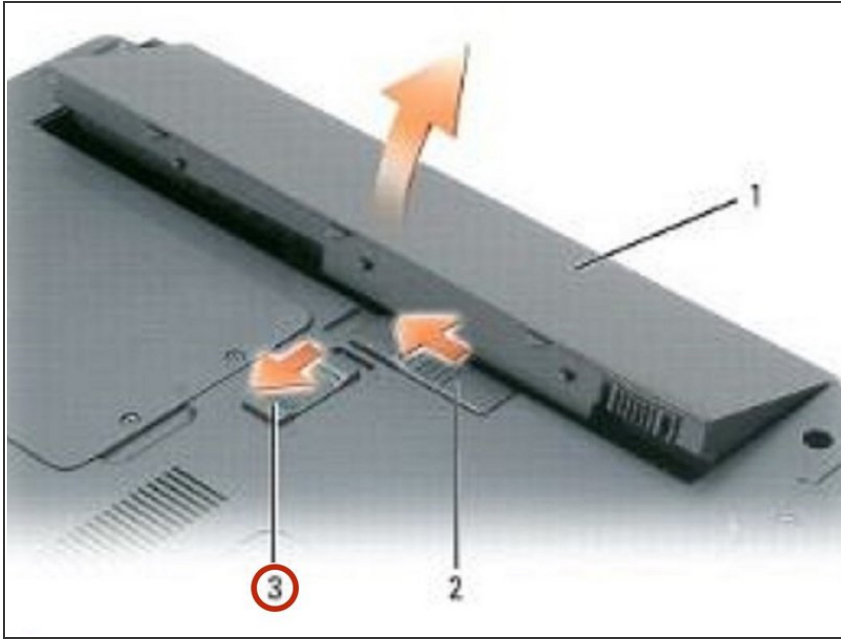

- Ensure that the computer is turned off.
- Turn over the computer.
- Slide the battery-bay latch release lock on the bottom of the computer away from the battery.

Step 2 — Remove the Battery

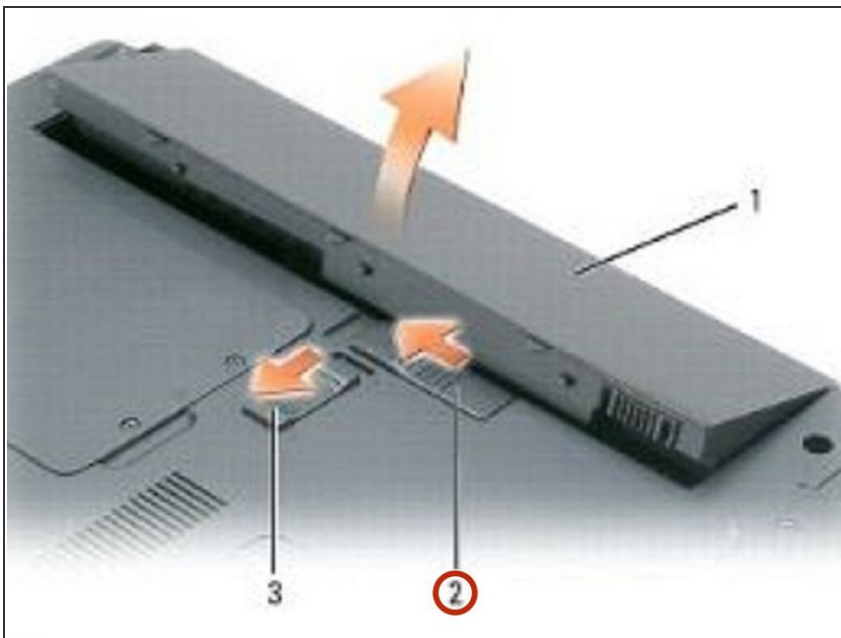

- Slide and hold the battery-bay latch release, and then remove the battery from the bay.

To reassemble your device, follow these instructions in reverse order.