


Dell Precision M3800 Memory Module Replacement

Written By: Johnathan Hammond

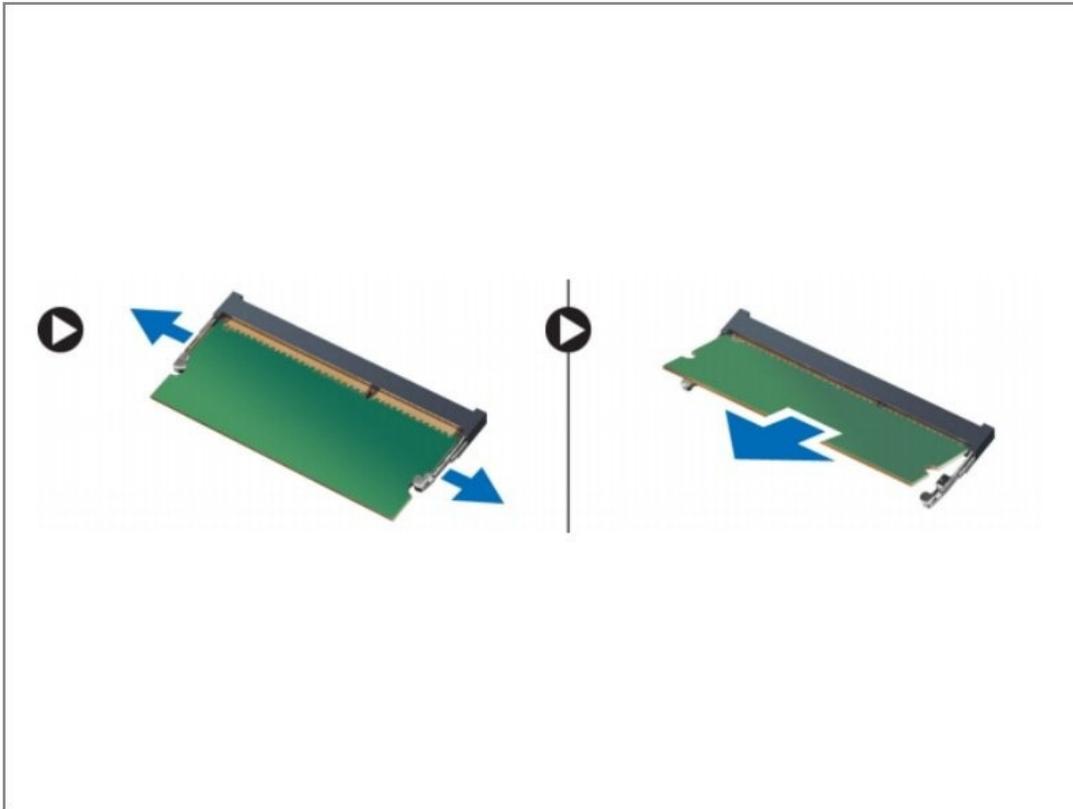

 **TOOLS:**

T5 Torx Screwdriver (1)


Phillips #0 Screwdriver (1)

Step 1 — Base Cover




- Turn the system badge flap over and place it on the base cover.
 - Remove the screws that secure the base cover to the computer. Release and remove the base cover from the computer.
- ⓘ NOTE: To remove the screws from the base cover, use a T5 Torx screwdriver.
- Lift up and remove the base cover from the computer.

Step 2 — Battery

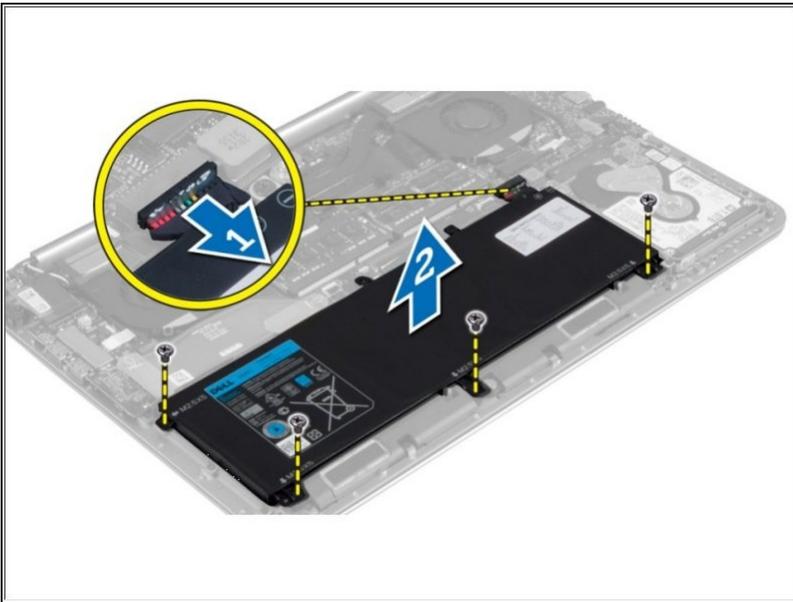

- Disconnect the battery cable from the system board [1].
- Use a Phillips screwdriver to remove the four screws securing the battery to the laptop.
- Lift the battery off the computer [2].

Step 3 — Memory Module

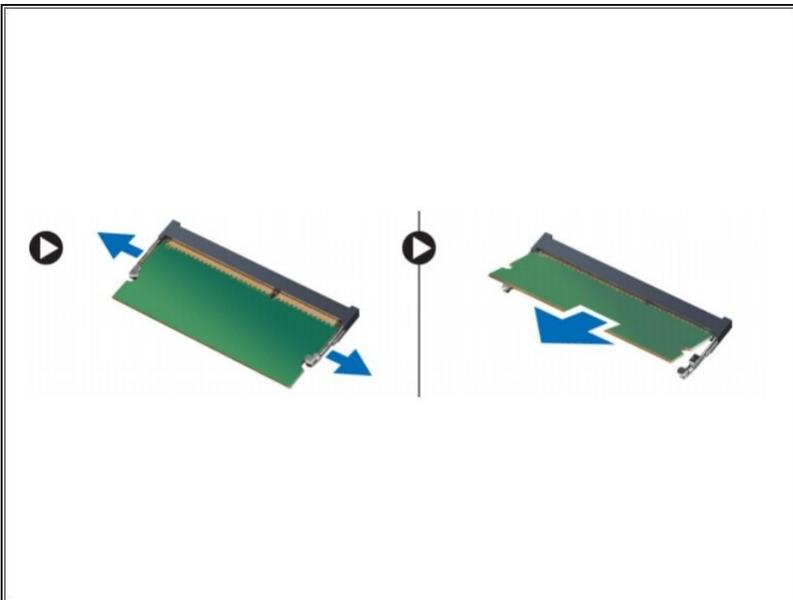

- Pry the securing clips away from the memory module until it pops-up. Remove the memory module from its connector on the system board.

To reassemble your device, follow these instructions in reverse order.