




Dell Precision 7720 Battery Replacement

Written By: Johnathan Hammond



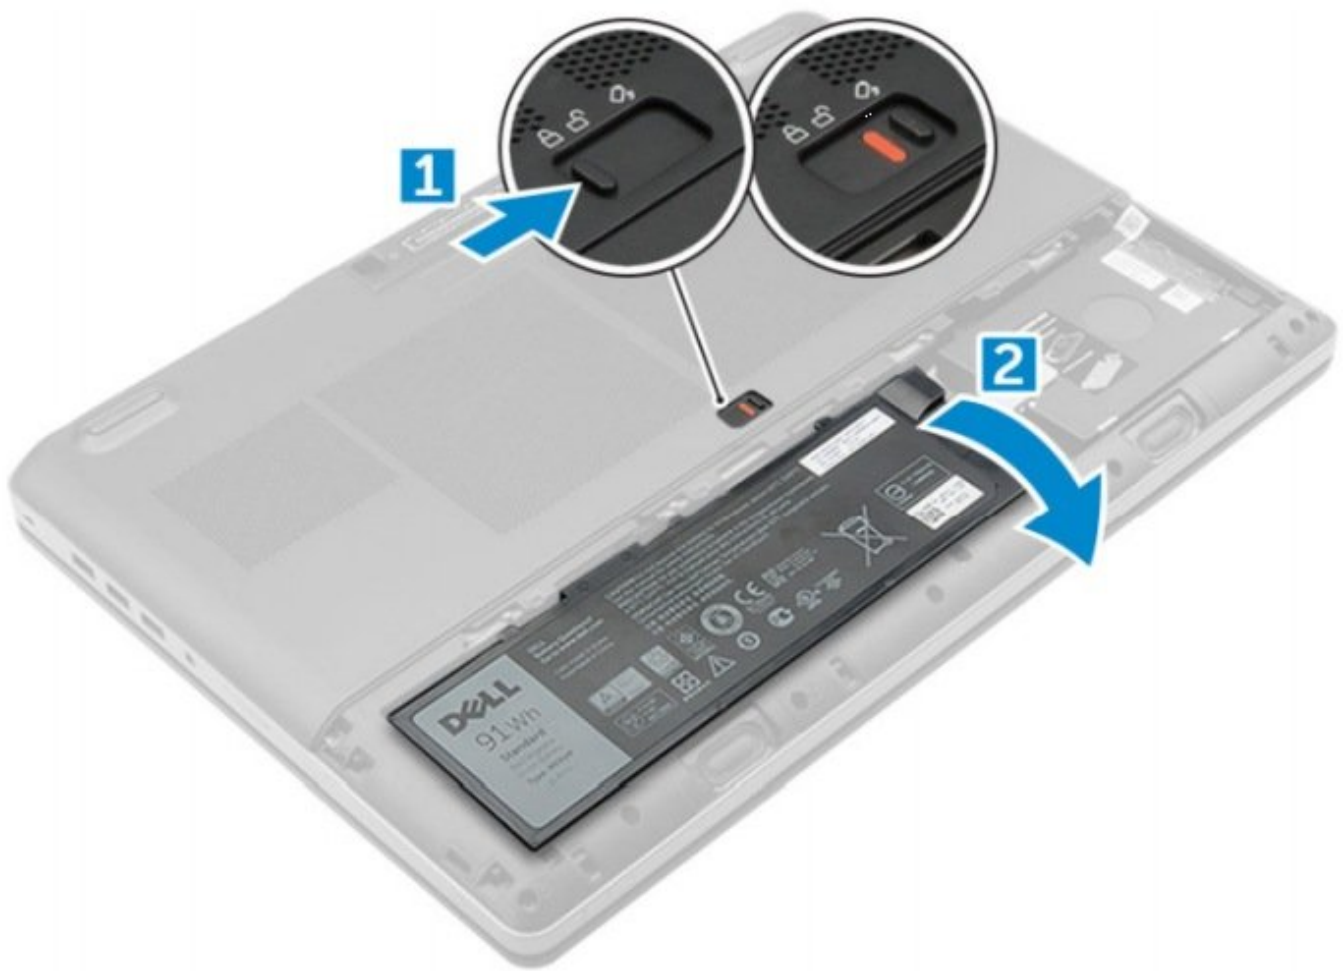

PARTS:


- [Dell 451-BBSD Laptop Battery](#) (1)
-

Step 1 — Battery Cover



- Slide the release latch towards the unlock icon to release the battery cover [1].
- Slide and lift the battery cover to remove it from the computer [2].

Step 2 — Battery

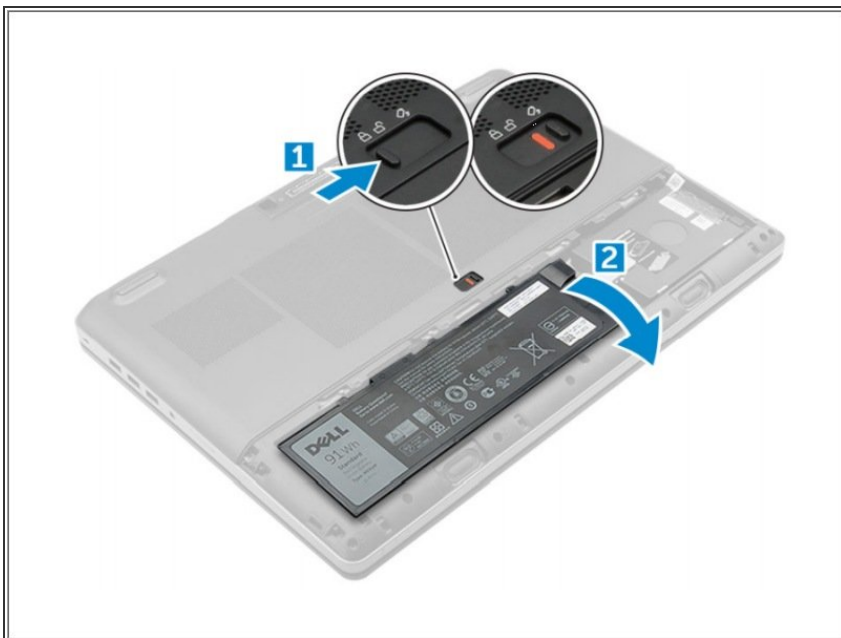

- Slide the release latch towards from the unlock icon to unlock the battery[1].
- Lift and remove the battery from the computer [2].

To reassemble your device, follow these instructions in reverse order.