



Xiaomi Air 12 Rear Casing Replacement

How to replace a Xiaomi Air 12 rear casing.

Written By: Nicholas Bishop



INTRODUCTION

Use this guide to remove the back of your Xiaomi Air 12.



TOOLS:



- [iFixit Opening Tools](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Rear Casing




- Orient the computer so the Xiaomi logo is at the bottom of the device.

Step 2

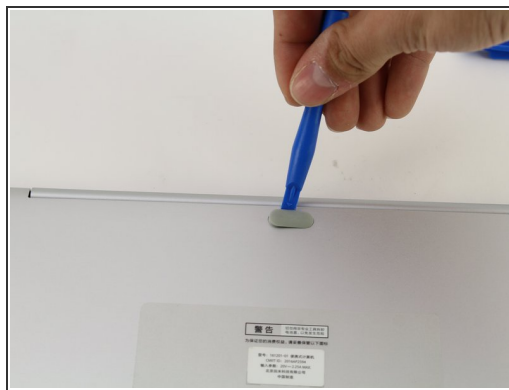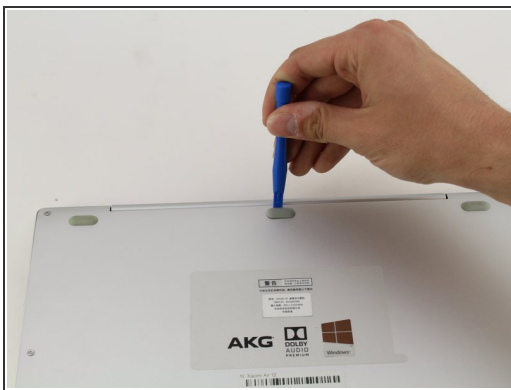

- Insert the plastic opening tool underneath the top-middle rubber covering and lift upwards to reveal the hidden screw.

Step 3

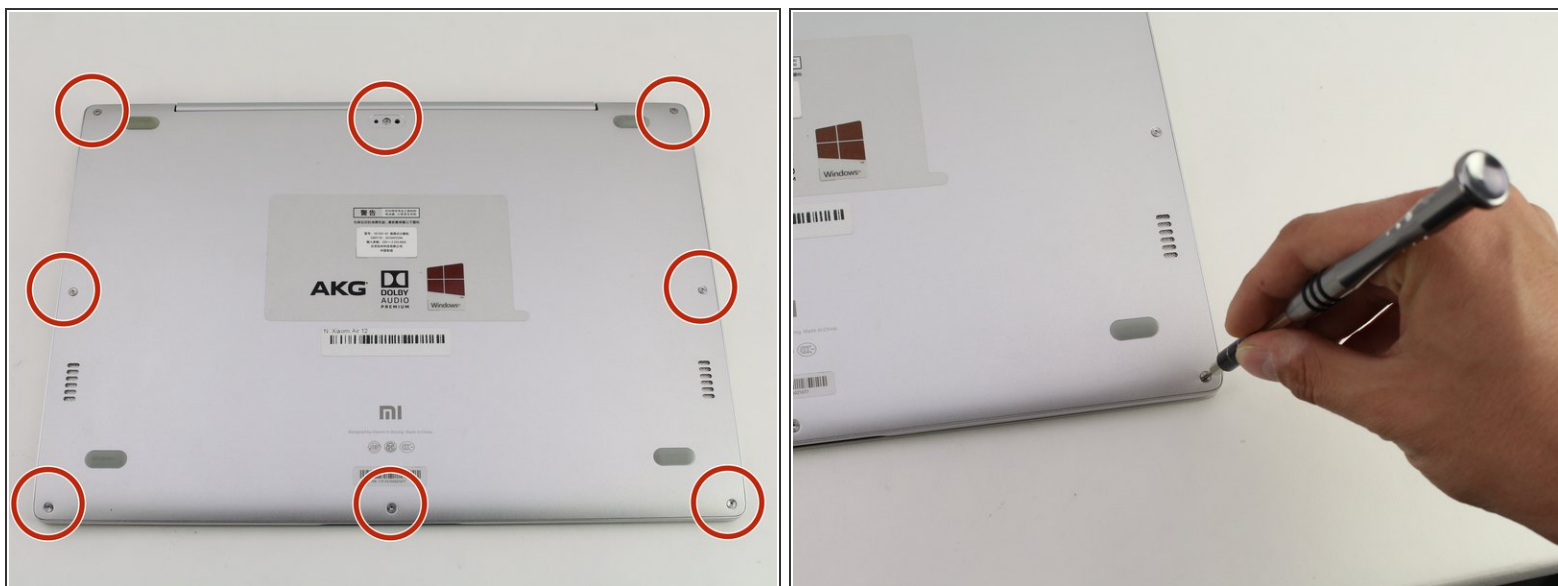


- Remove the eight 3 mm screws using the Torx T5 driver by inserting the screwdriver into each screw and rotating counterclockwise.

Step 4



- Insert the plastic opening tool into each side of the computer and push the tool downwards to pop open the back cover.
- ⓘ You will hear popping noises as you remove the cover.

Step 5

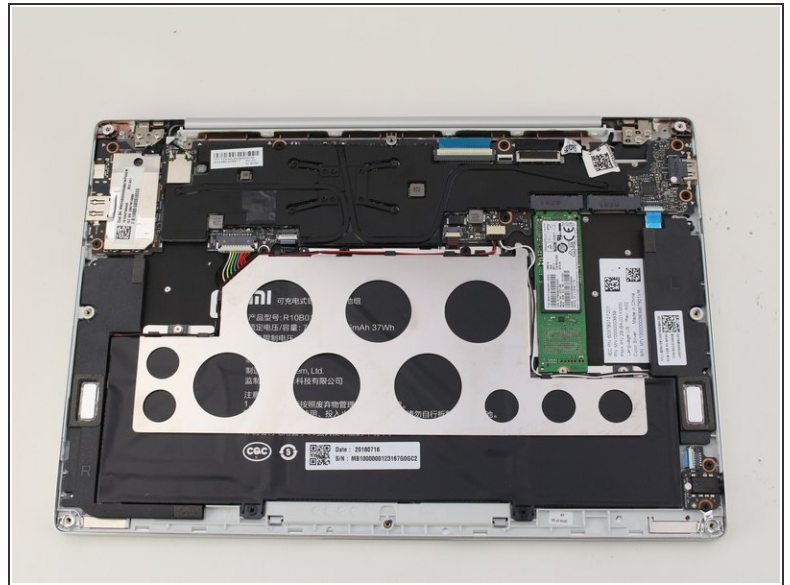

- Remove the back of the laptop by gently lifting the casing upwards.

To reassemble your device, follow these instructions in reverse order.