




Sony Xperia XZ Premium Front Camera Replacement

This guide covers the Sony Xperia XZ Premium...

Written By: Gelene Amog

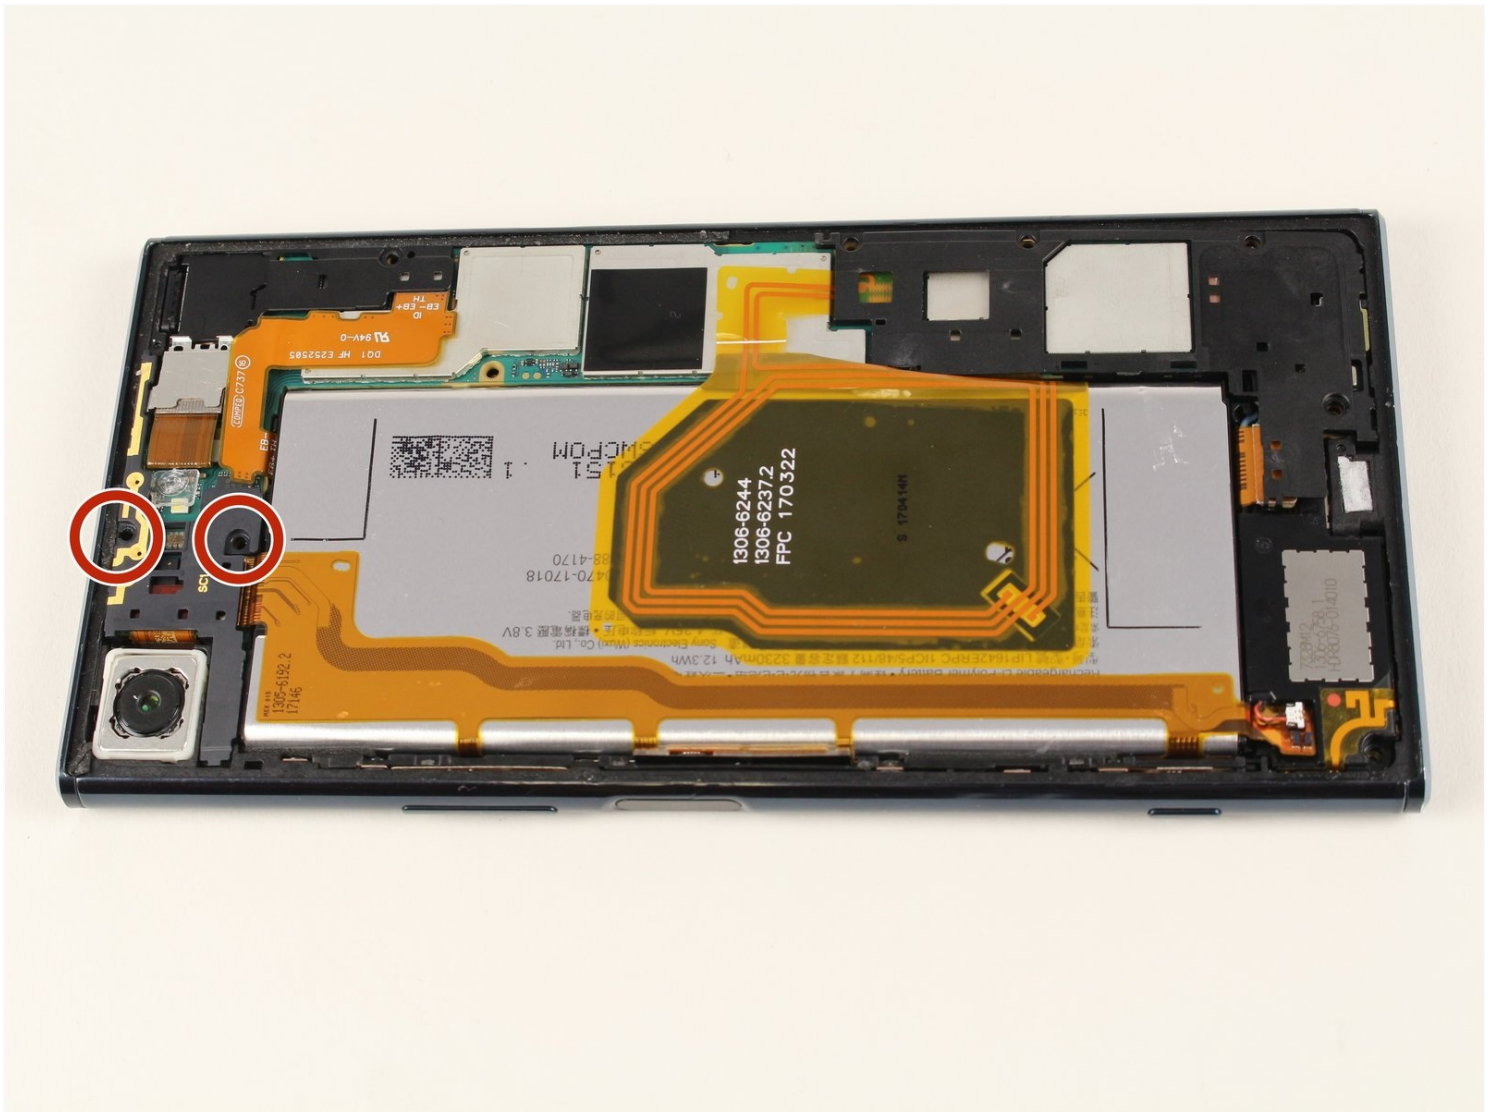

INTRODUCTION

This guide covers the Sony Xperia XZ Premium front camera removal. This process involves unscrewing two screws and removing part of the frame to reach the camera.

TOOLS:


[Spudger](#) (1)

[Phillips #000 Screwdriver](#) (1)

Step 1 — Back Panel



- Place a heated iOpener on the back panel of the phone to melt the adhesive inside.

 The iOpener or your desired heat source can be very hot and can heat up the phone, so make sure you do not burn yourself.


- ① Follow [this guide](#) for directions on using the iOpener.

Step 2




- Slide a thin [plastic card](#) under the back panel and around the perimeter of the phone to remove the adhesive.

Step 3

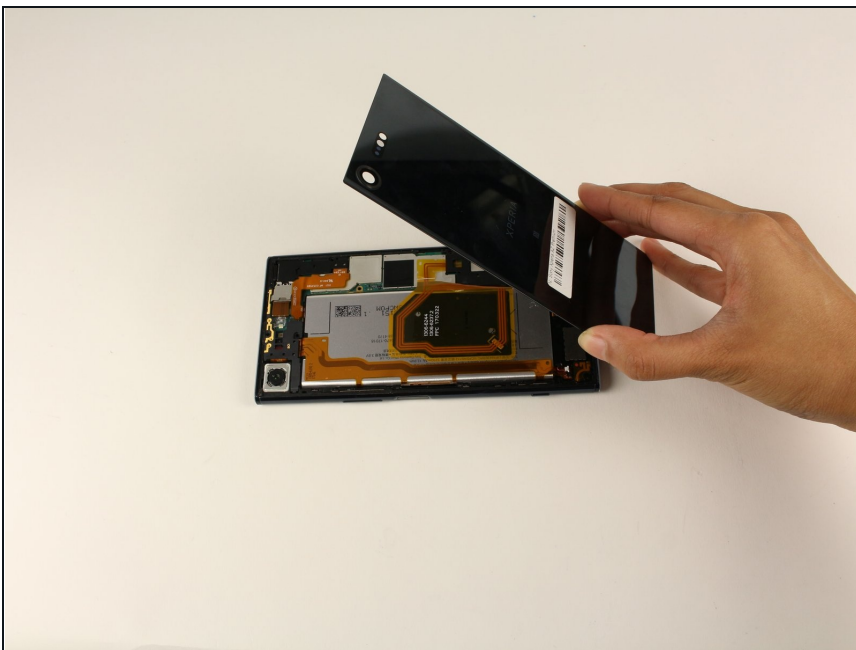


- Take hold of the back panel with your fingers and remove.

Step 4 — Front Camera

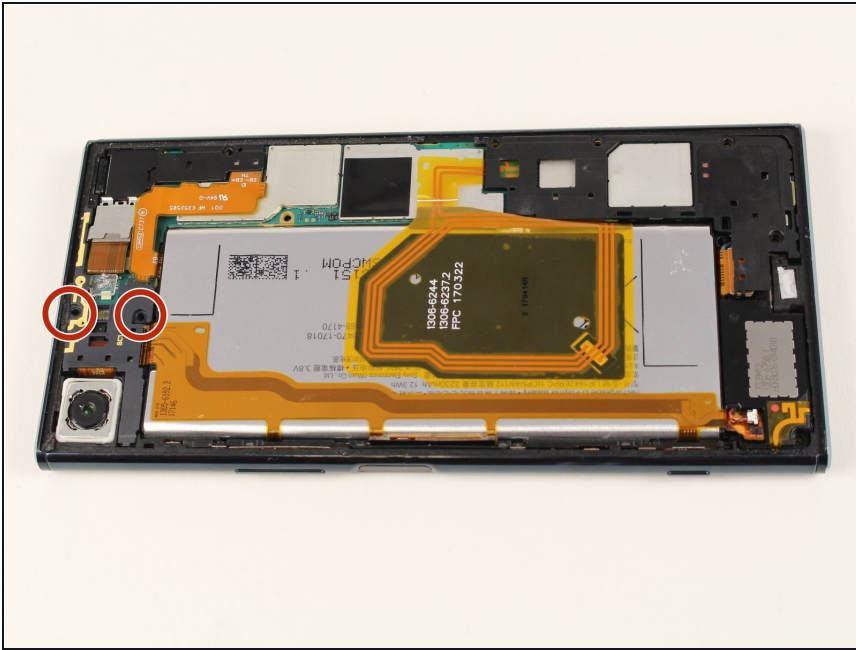


- Remove the two bottom left 3.9 mm Phillips #000 screws.

Step 5

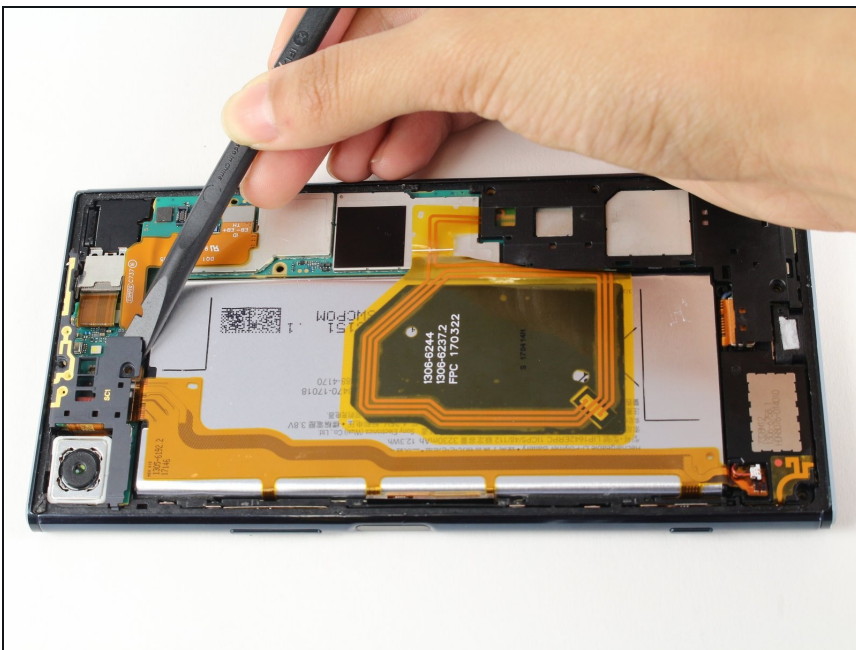


- Insert the spudger under the bottom left frame and lift, try to lift vertically to wedge it out.

Step 6

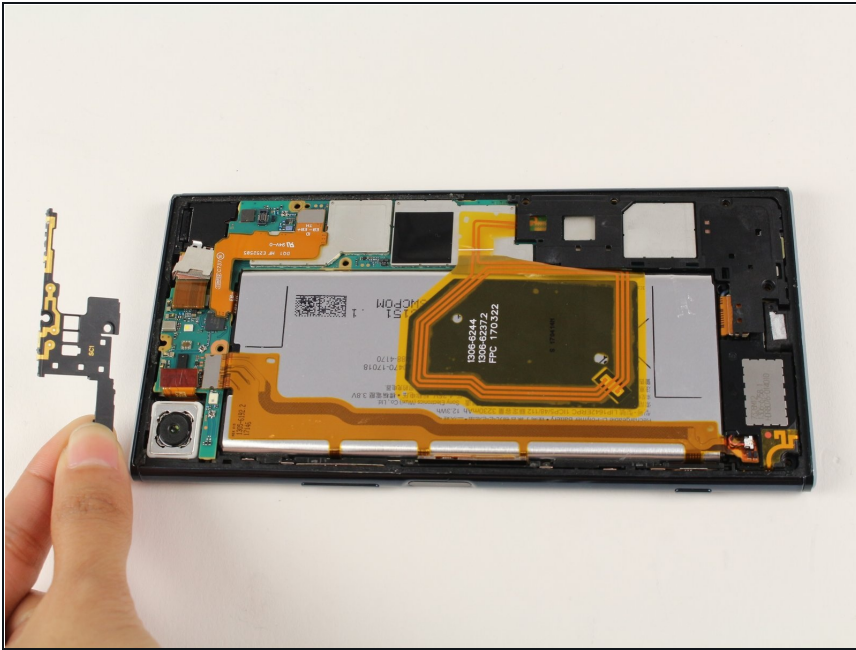


- Grab hold of the bottom left frame and lift out carefully.

Step 7

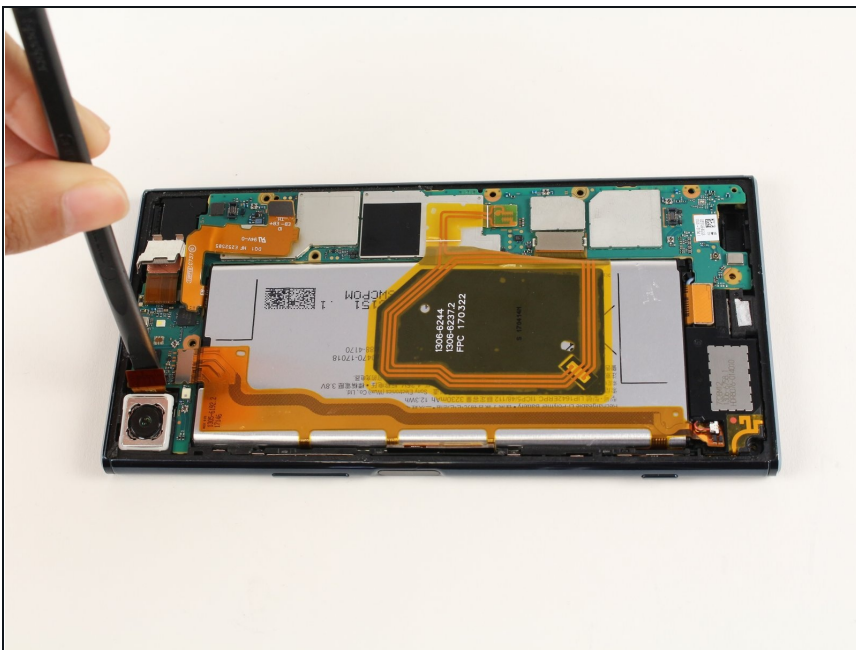


- Insert a spudger under the tab above the camera and lift to disconnect it.

Step 8

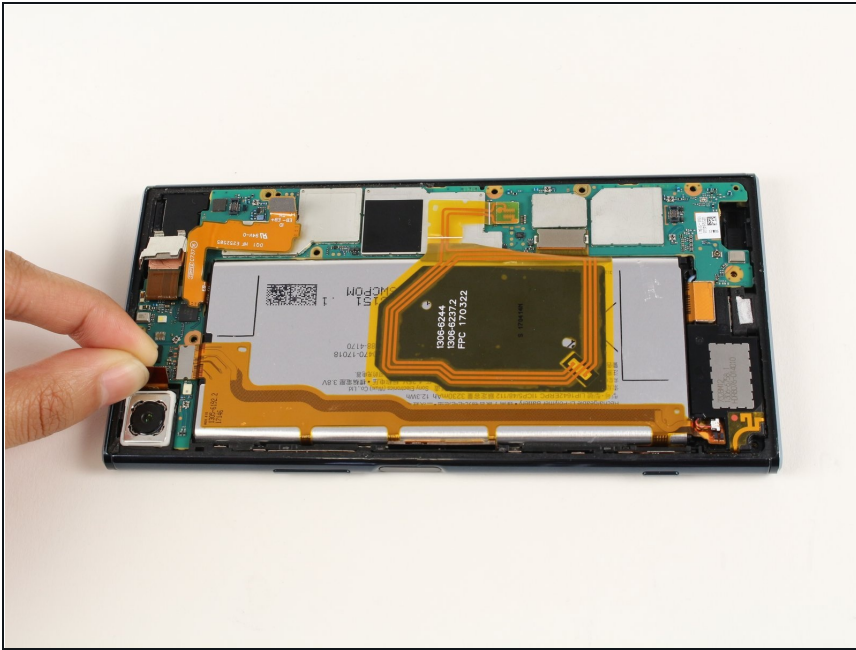

- Grab hold of the tab with your fingers.

Step 9

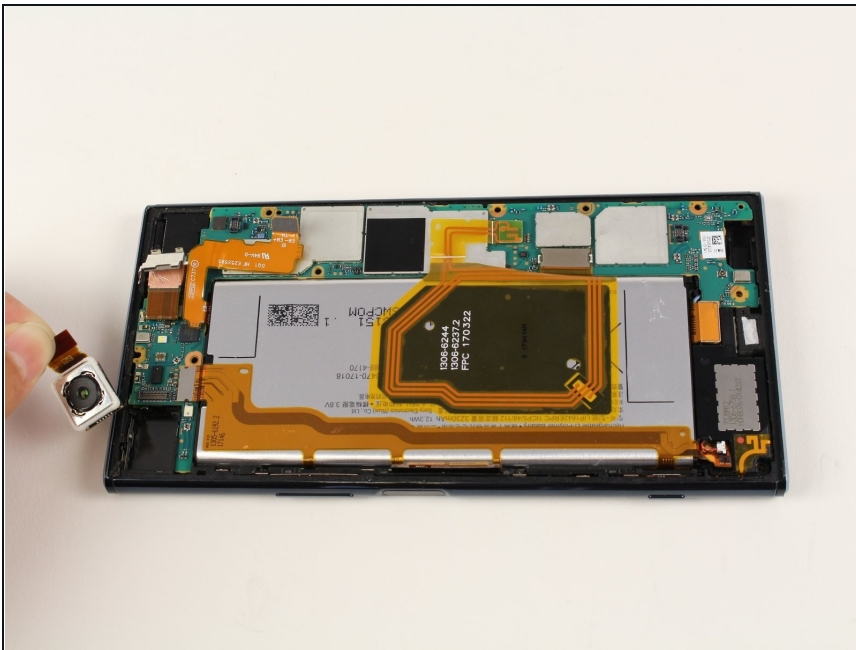

- Lift the camera from the phone by the tab.

To reassemble your device, follow these instructions in reverse order.

