




Samsung ATIV Book 9 Plus NP930X5J-S01US

Keyboard Buttons Replacement

This replacement guide will cover how to remove the keys of a Samsung ATIV Book 9 Plus laptop.

Written By: Sean Kim

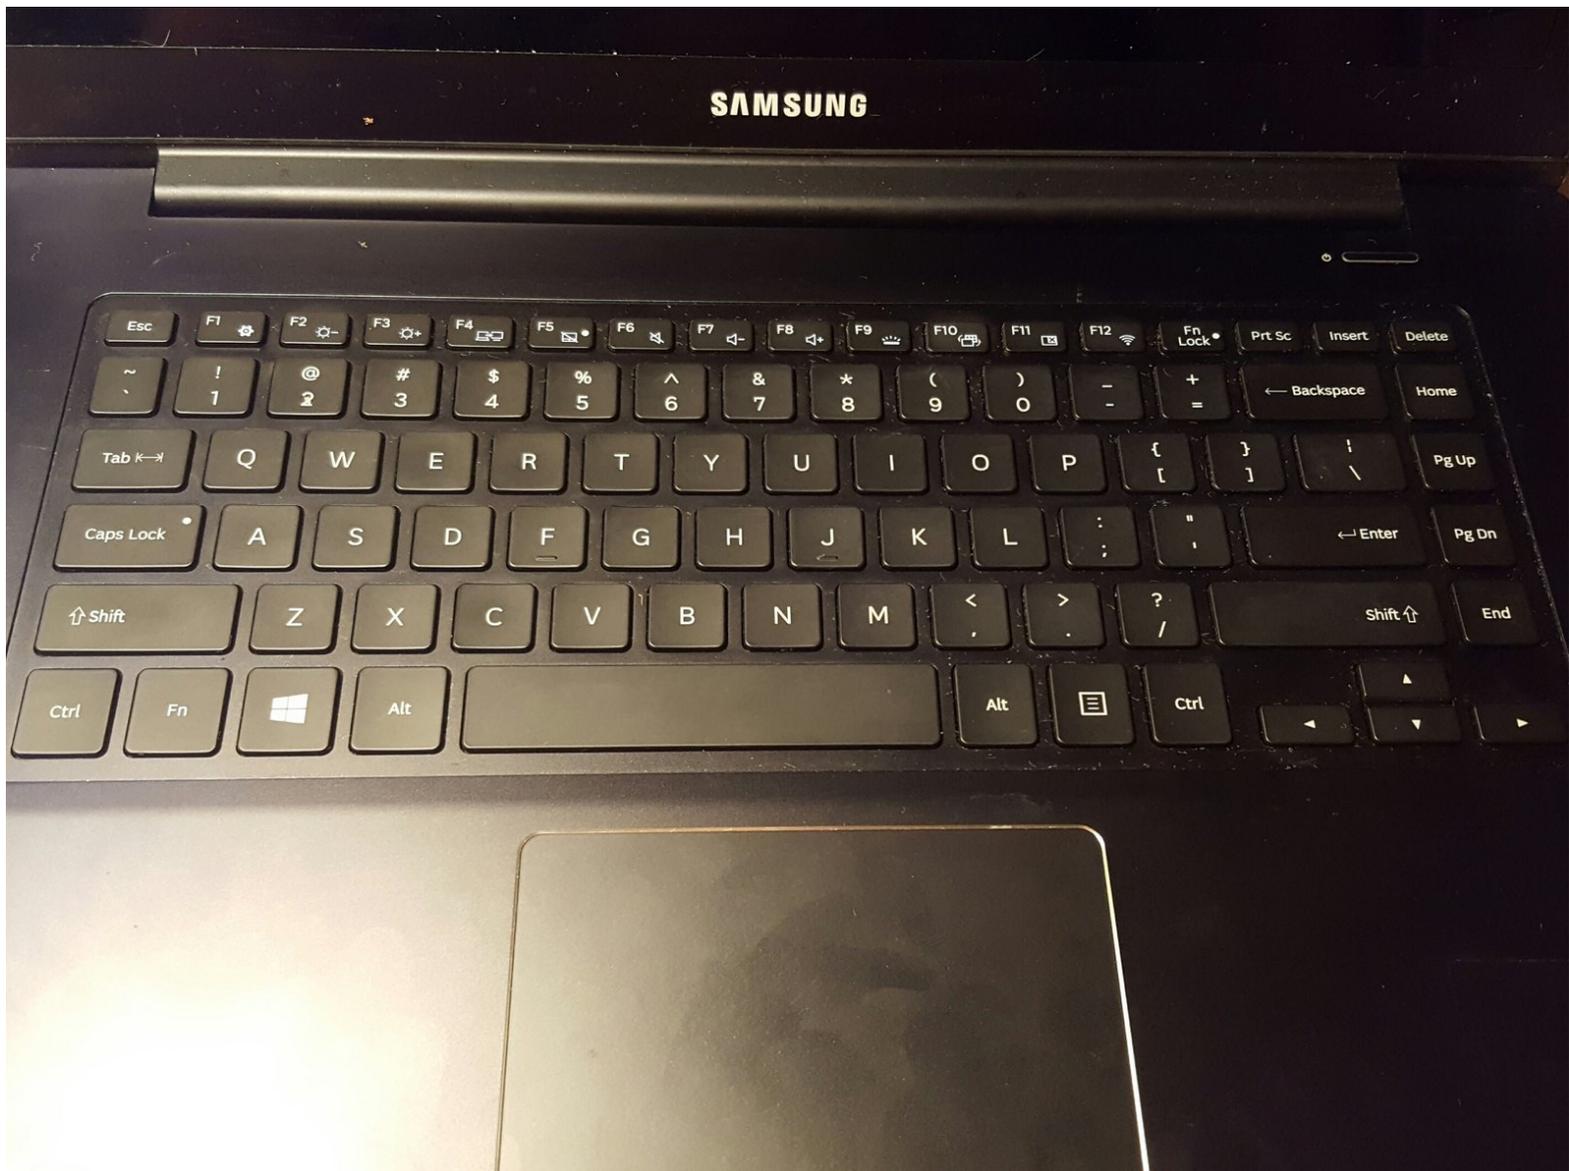

INTRODUCTION

This guide covers how to remove the keys from a Samsung ATIV Book 9 Plus laptop. While there are only 4 steps to this guide, it is essential to avoid damaging the connector of the keys. Any forced pivoting or upward motion of the opening tool may damage the root of a key.



TOOLS:


- [iFixit Opening Tools](#) (1)
-

Step 1 — Keyboard button



- Have the front of the laptop facing up.

Step 2

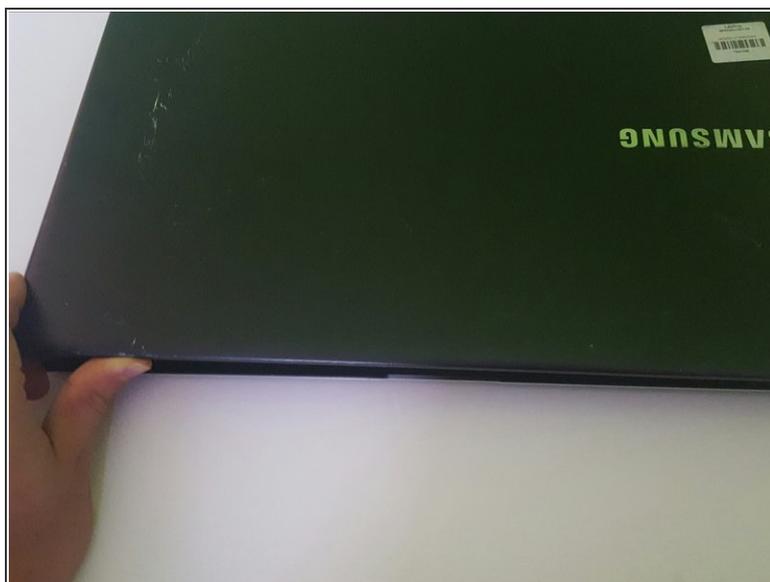


- Open up the laptop as if you were about to use it.

Step 3



- Insert a plastic opening tool underneath a key.

Step 4

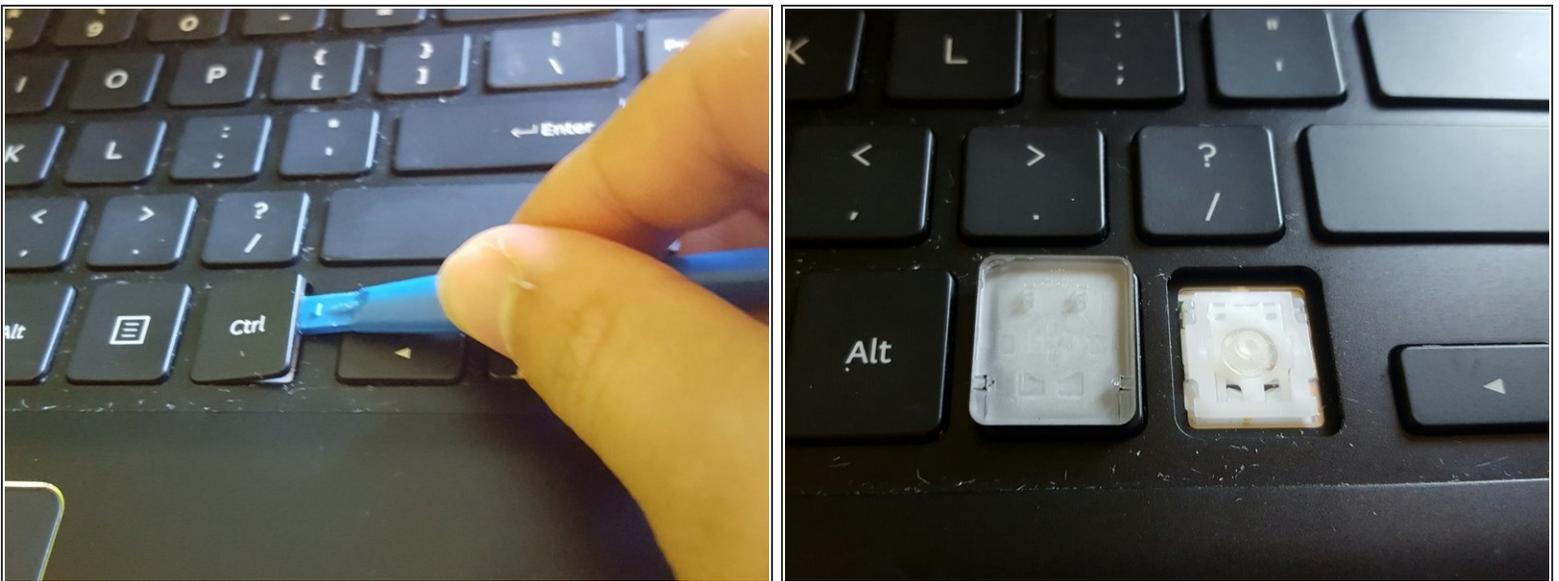

- Pry upwards until the key pops off.

To reassemble your device, follow these instructions in reverse order.