


# **Dell Precision 7520 Hard Drive Replacement**

Written By: Johnathan Hammond

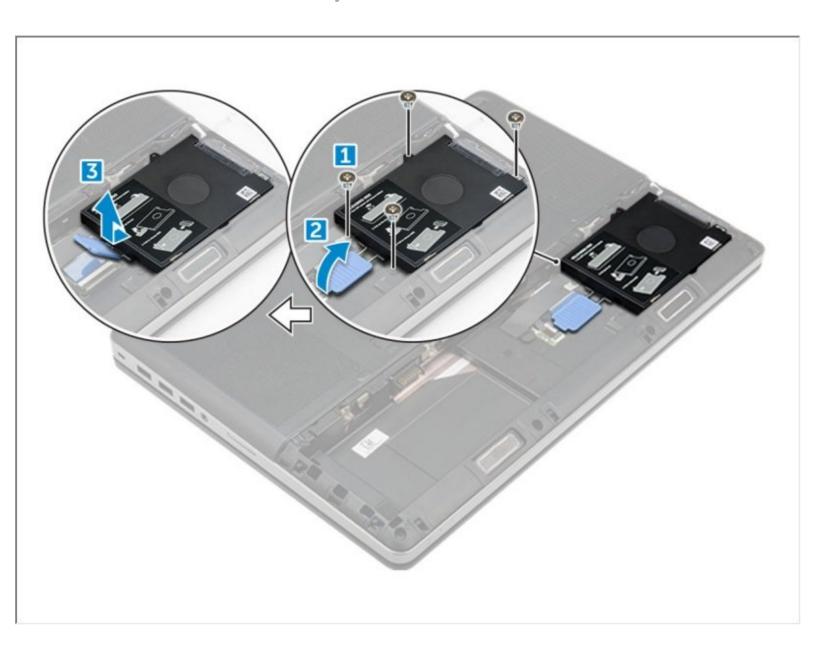



Phillips #0 Screwdriver (1)



## PARTS:

- 1 TB SSD (1)
- 250 GB SSD (1)
- Crucial MX500 500 GB SSD (1)
- Crucial MX500 2 TB SSD (1)

### **Step 1** — **Battery Cover**




- Slide the release latch towards the unlock icon to release the battery cover [1].
- Slide and lift the battery cover to remove it from the computer [2].

### Step 2 — Battery




- Slide the release latch towards from the unlock icon to unlock the battery[1].
- Lift and remove the battery from the computer [2].

### Step 3 — Hard Drive

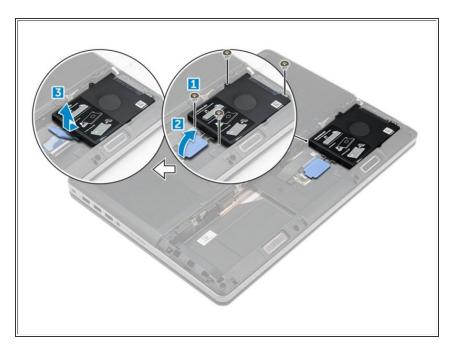

- Remove the M3.0x3.0 screws that secure the hard drive to the computer [1].
- Lift the hard drive latch to release the hard drive [2].
- Slide and lift the hard drive from the computer [3].

### Step 4

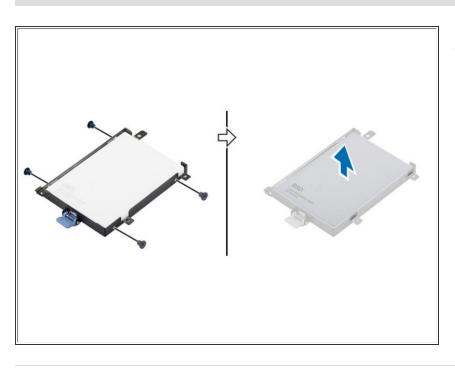

 Remove the M3.0x3.0 screws that secure the hard drive. Lift the hard drive from the bracket.

To reassemble your device, follow these instructions in reverse order.