




Dell Inspiron 14 5468 Replacement

Written By: darrius

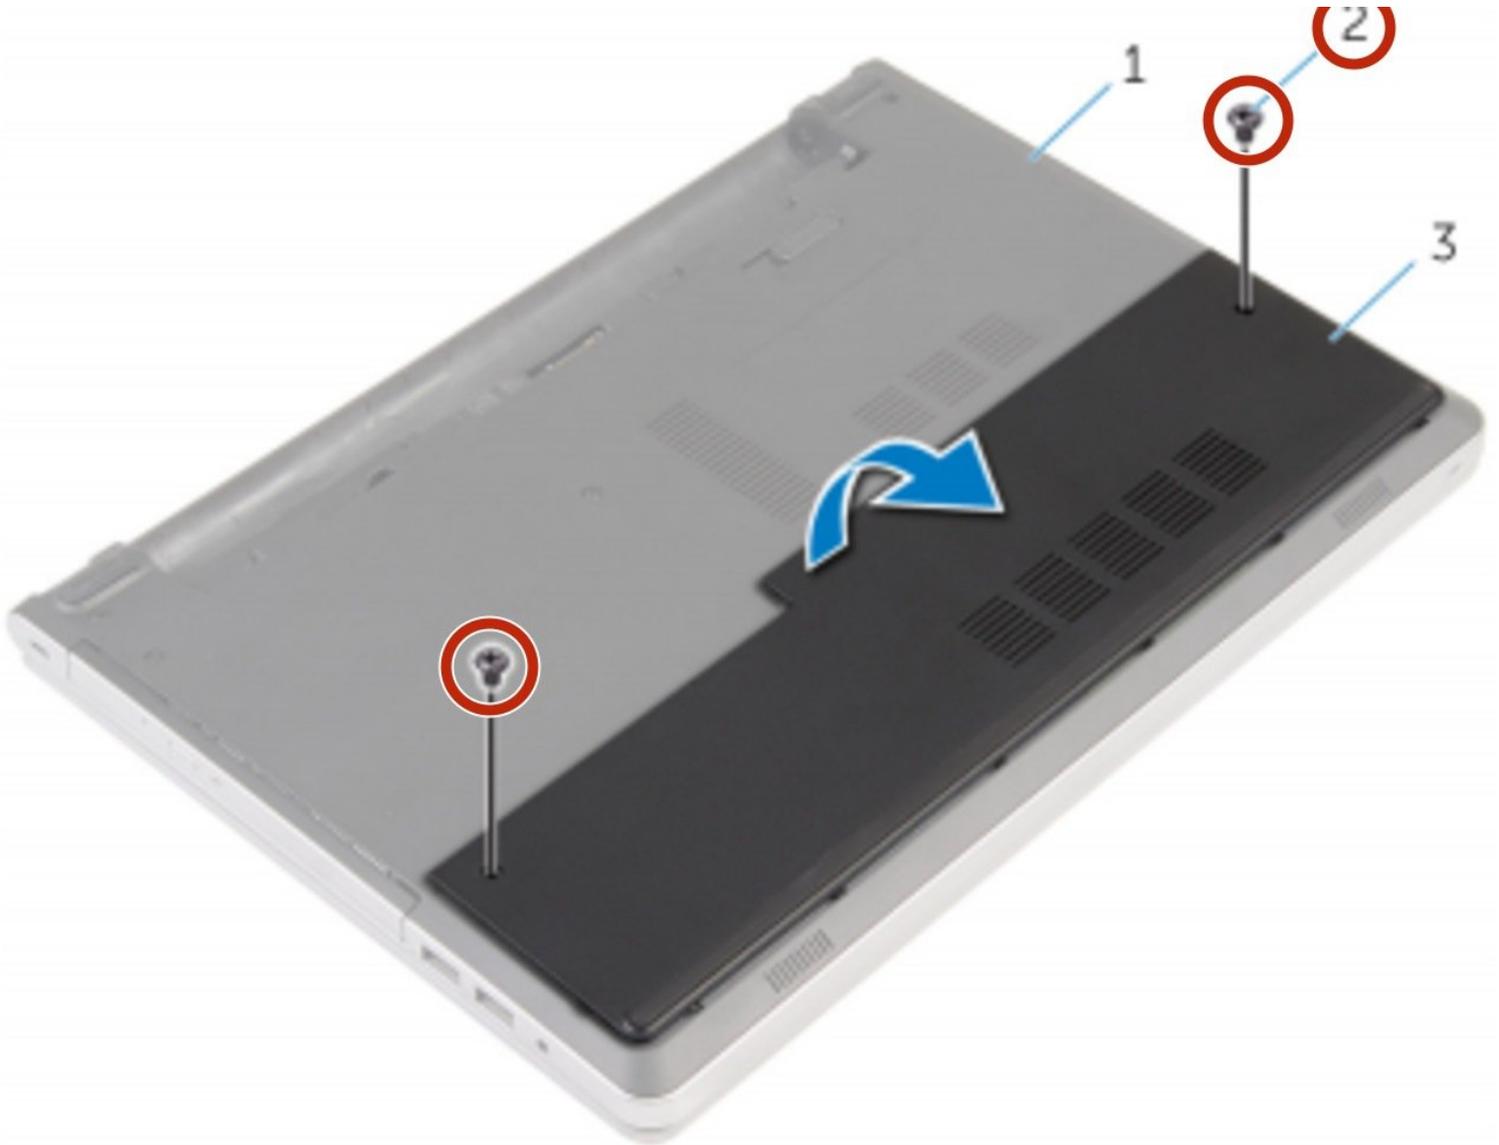


INTRODUCTION

How To Remove And Replace The Base Cover

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Removing Screws

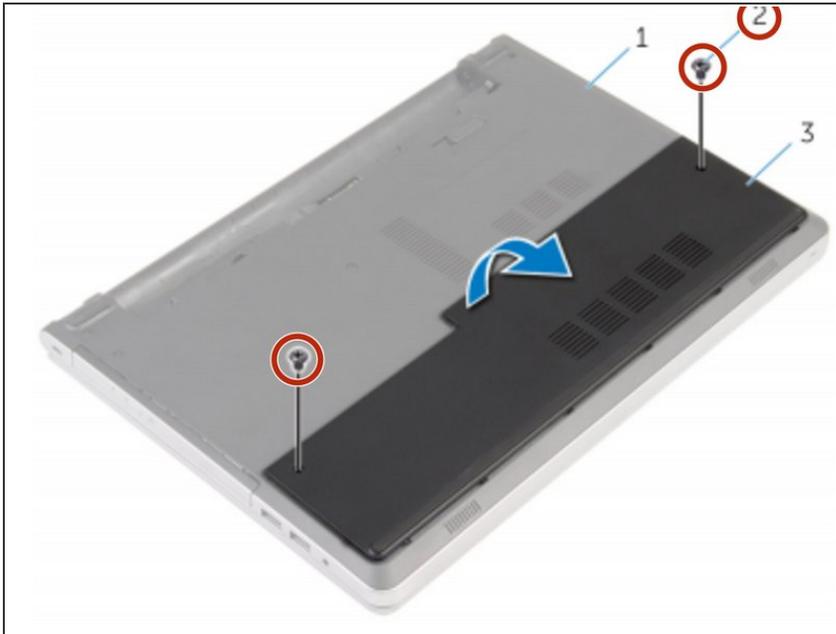


- Remove the screws that secure the base cover to the computer base

Step 2 — Prying The Base Cover

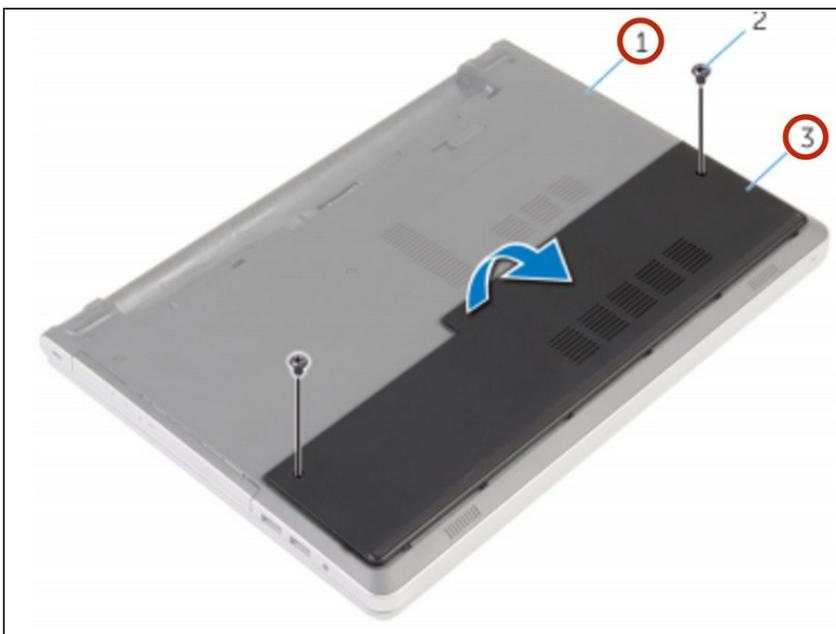


- Using a plastic scribe, gently pry the base cover off the computer base.

Step 3 — Sliding The Base Cover

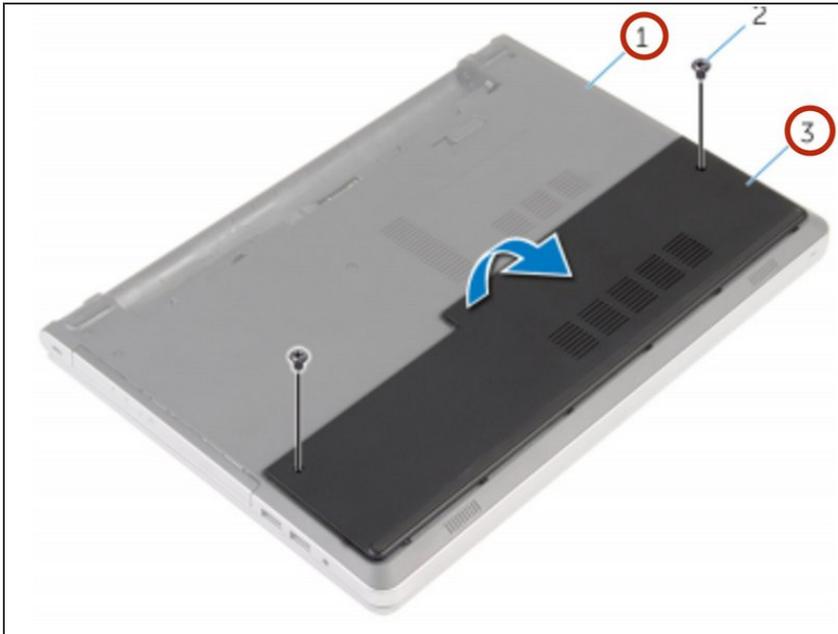

- Slide the tabs on the **NEW** base cover into the slots on the computer base and snap the base cover into place.

Step 4 — Securing The Screws

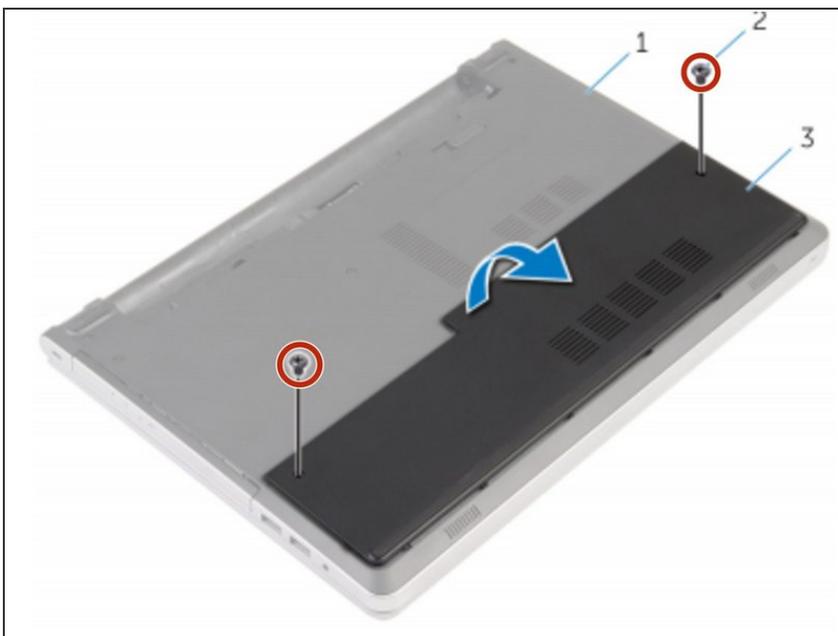

- Replace the screws that secure the base cover to the computer base.

To reassemble your device, follow these instructions in reverse order.