


Dell Inspiron 14 M4040 Memory Modules Replacement


Written By: Terrence15

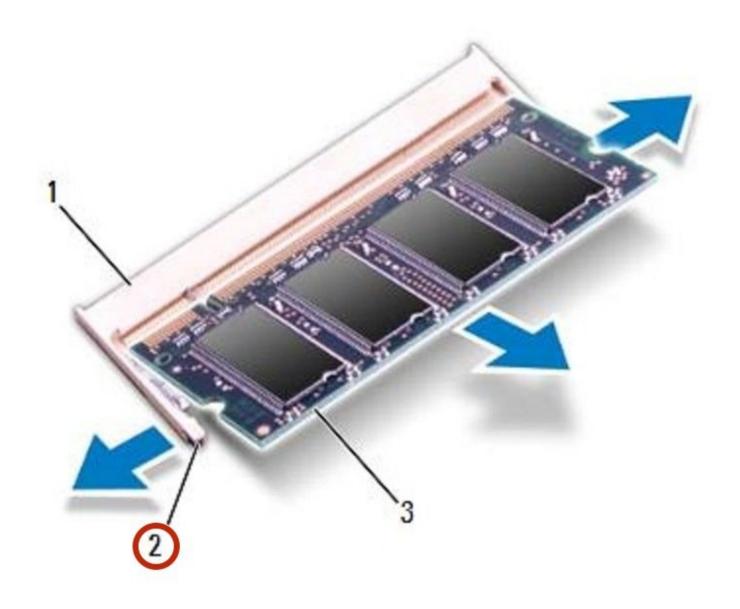

INTRODUCTION


In this guide, we will show you how to remove and replace the Memory Modules.

Step 1 — Popping up the Memory Module

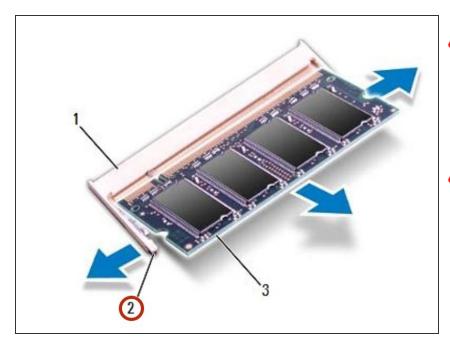


- MARNING: Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in "Before You Begin".
- ↑ CAUTION: To prevent damage to the memory module connector, do not use tools to spread the memory module securing clips.
- Use your fingertips to carefully spread apart the securing clips on each end of the memory-module connector until the module pops up.

Step 2 — Removing the Memory Module

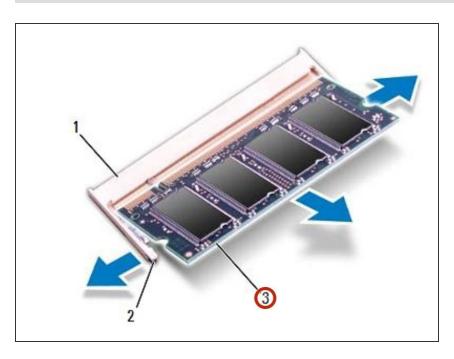


 Remove the memory module from the memory-module connector.

Step 3 — Align the Notch

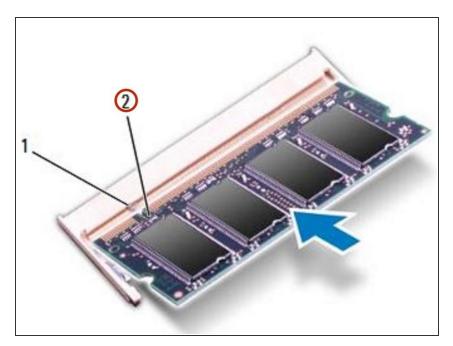

 Align the notch in the **NEW** memory module with the tab in the memorymodule connector.

Step 4 — Sliding the Memory Module

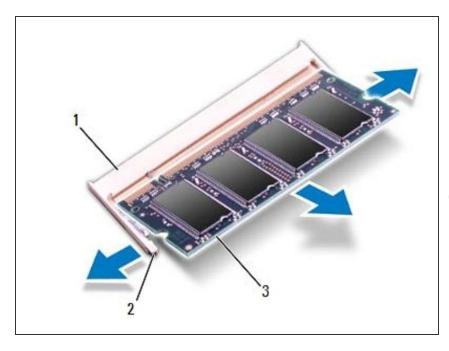

- Slide the memory module firmly into the slot at a 45-degree angle, and press the memory module down until it clicks into place. If you do not hear the click, remove the memory module and reinstall it.
- NOTE: If the memory module is not installed properly, the computer may not boot.