



HP ProBook 4530s Hard Drive Replacement

Hard Drive Replacement for HP ProBook 4530s

Written By: Drew Canada



INTRODUCTION

This guide will teach you how to properly remove and replace the HDD in the ProBook 4530s.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [1 TB SSD / Upgrade Bundle](#) (1)
- [250 GB SSD / Upgrade Bundle](#) (1)
- [500 GB SSD / Upgrade Bundle](#) (1)
- [2 TB SSD](#) (1)

Step 1 — Introduction

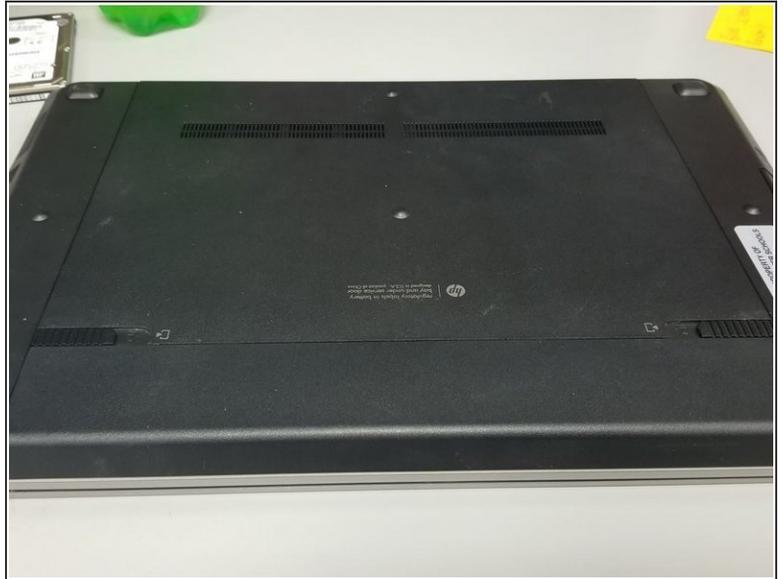

- Start by flipping over the laptop onto its back.

Step 2 — Battery Removal



- Press inward on the two switches.
- The battery should pop out slightly.
- Remove the battery.

This document was generated on 2020-12-04 10:32:59 AM (MST).

Step 3 — Back Panel Removal




- Press inward on both switches while pushing the center panel away from you. It should slide slightly backwards.
- Release the switches.
- Slide the panel the rest of the way out.

Step 4 — Removing HDD




- Unscrew the four screws located on the edges of the base.
- Lift enough on the right side of the HDD to make it over the plastic paneling.
- Pull outward.

Step 5 — Removing HDD from Base

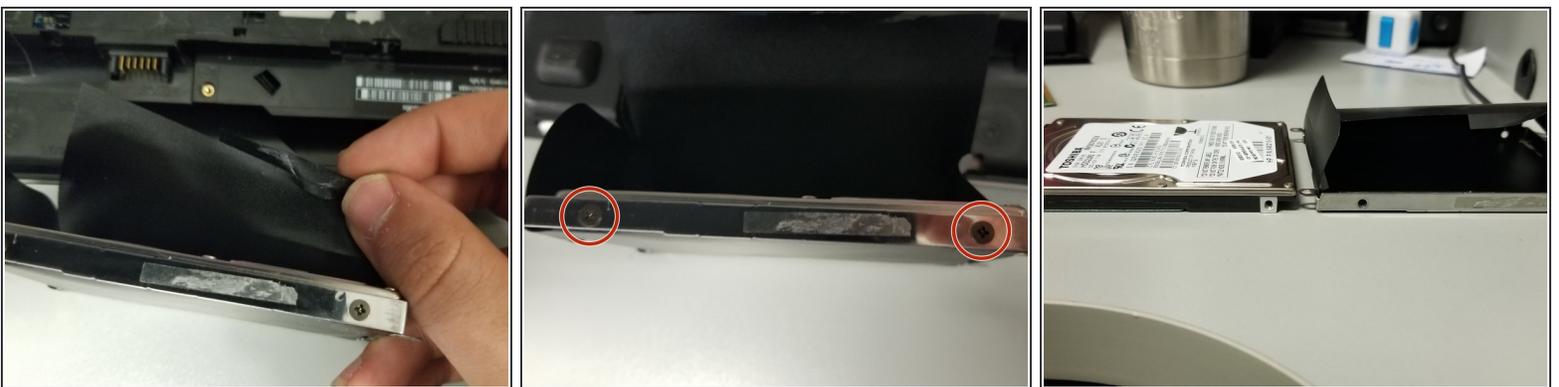

- Remove the adhesive from the protective covering over the HDD.
- Remove the four screws around the edges of the metal base.
- Pull out the HDD from the base.

Step 6 — Conclusion

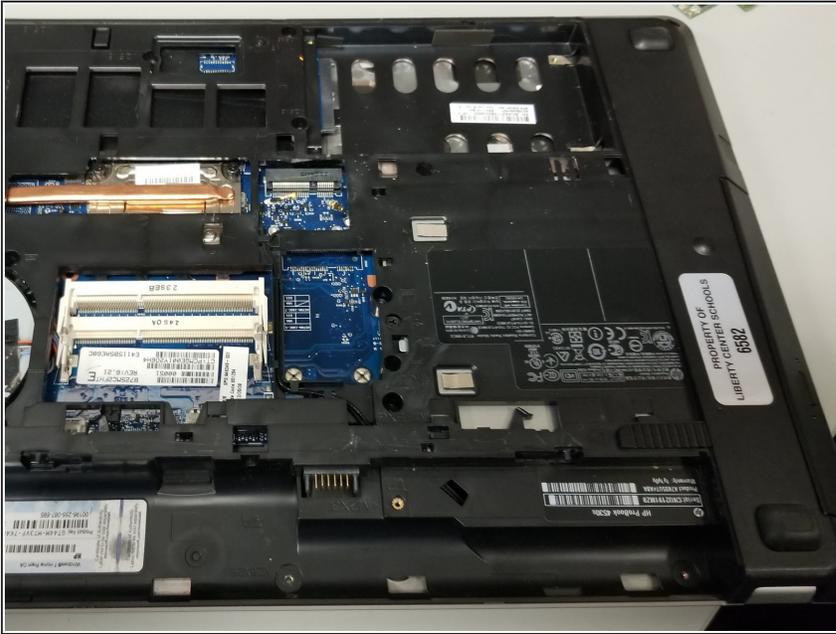

- Insert the new HDD or SSD.

To reassemble your device, follow these instructions in reverse order.