



BLU R1 HD Screen Replacement

Written By: dily daly



**TOOLS:**

- [Small Phillips Head Screwdriver](#) (1)
- [Spudger](#) (1)

**PARTS:**

- [Replacement Screen/Digitizer assembly for BLU R1 HD](#) (1)

Step 1 — Open the back.



- Take the battery sticker/phone info off. Remove all visible screws from the back.
- Place the sticker aside and save it for when you are done. It has important phone information that you do not want to lose.


Step 2 — Remove Shroud



- Use the pry tool to pop out the plastic backing component, taking care not to go too deep. Its a lot

easier to get out when you start from the bottom left or right.

Step 3 — Prep for replacemen/removal.

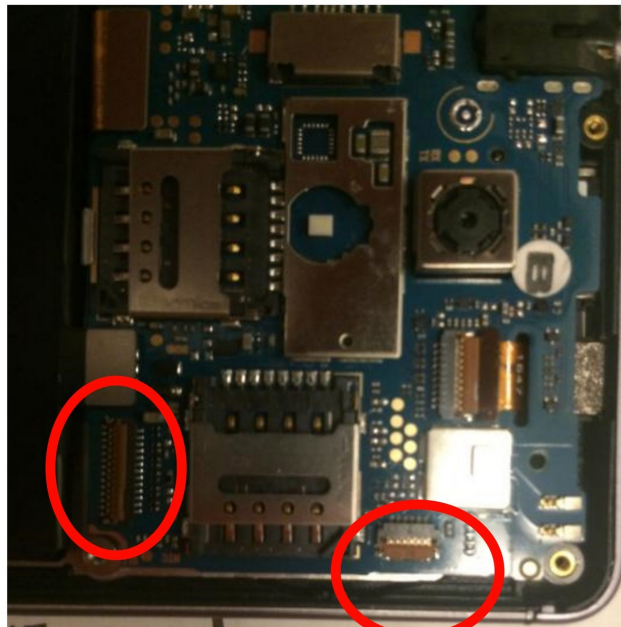


- Take the 2 screws out on the board.
- Lift the lock on the two ribbon holders that are for the screen.

Step 4 — Old Screen/Digitizer removal.



- Start at the left or right bottom edge, and try to gain as much leverage to the entire sub-panel assembly (digitizer and screen) as possible, the end result will be messy, but your goal is to minimize the mess.
- **YOU WILL CRACK THE SCREEN.**
- Make sure to clean up any stray bits, they will crack your new screen if you leave anything behind.
- Do a dry run and practice fitting all the cables through the slots and around the board to the back. Once you feel confident, apply the tape/adhesive that the screen should have come with .

Step 5

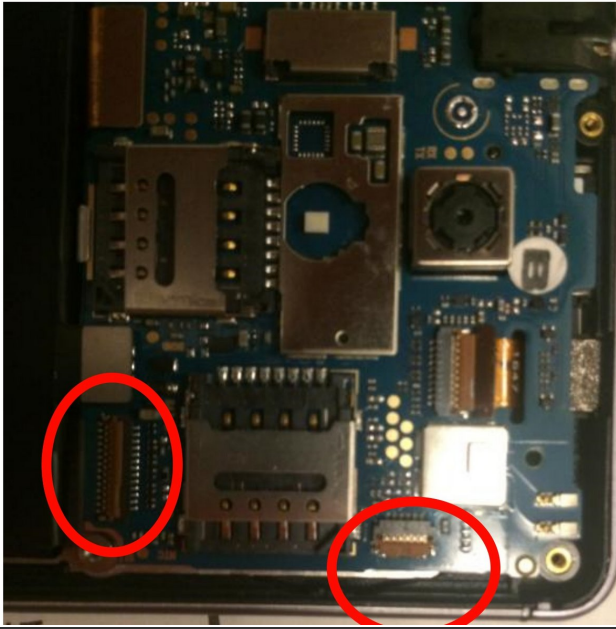

- Thread the ribbons thorough and around the assembly as needed, and hook and lock them back into place.
- Make sure the screen sits flush.

Step 6



- Congrats