




How to install Window or sliding door pet screen

Petscreen is a little tricky to install because it is thicker and stiffer than regular screen


Written By: Adrian Dunevein

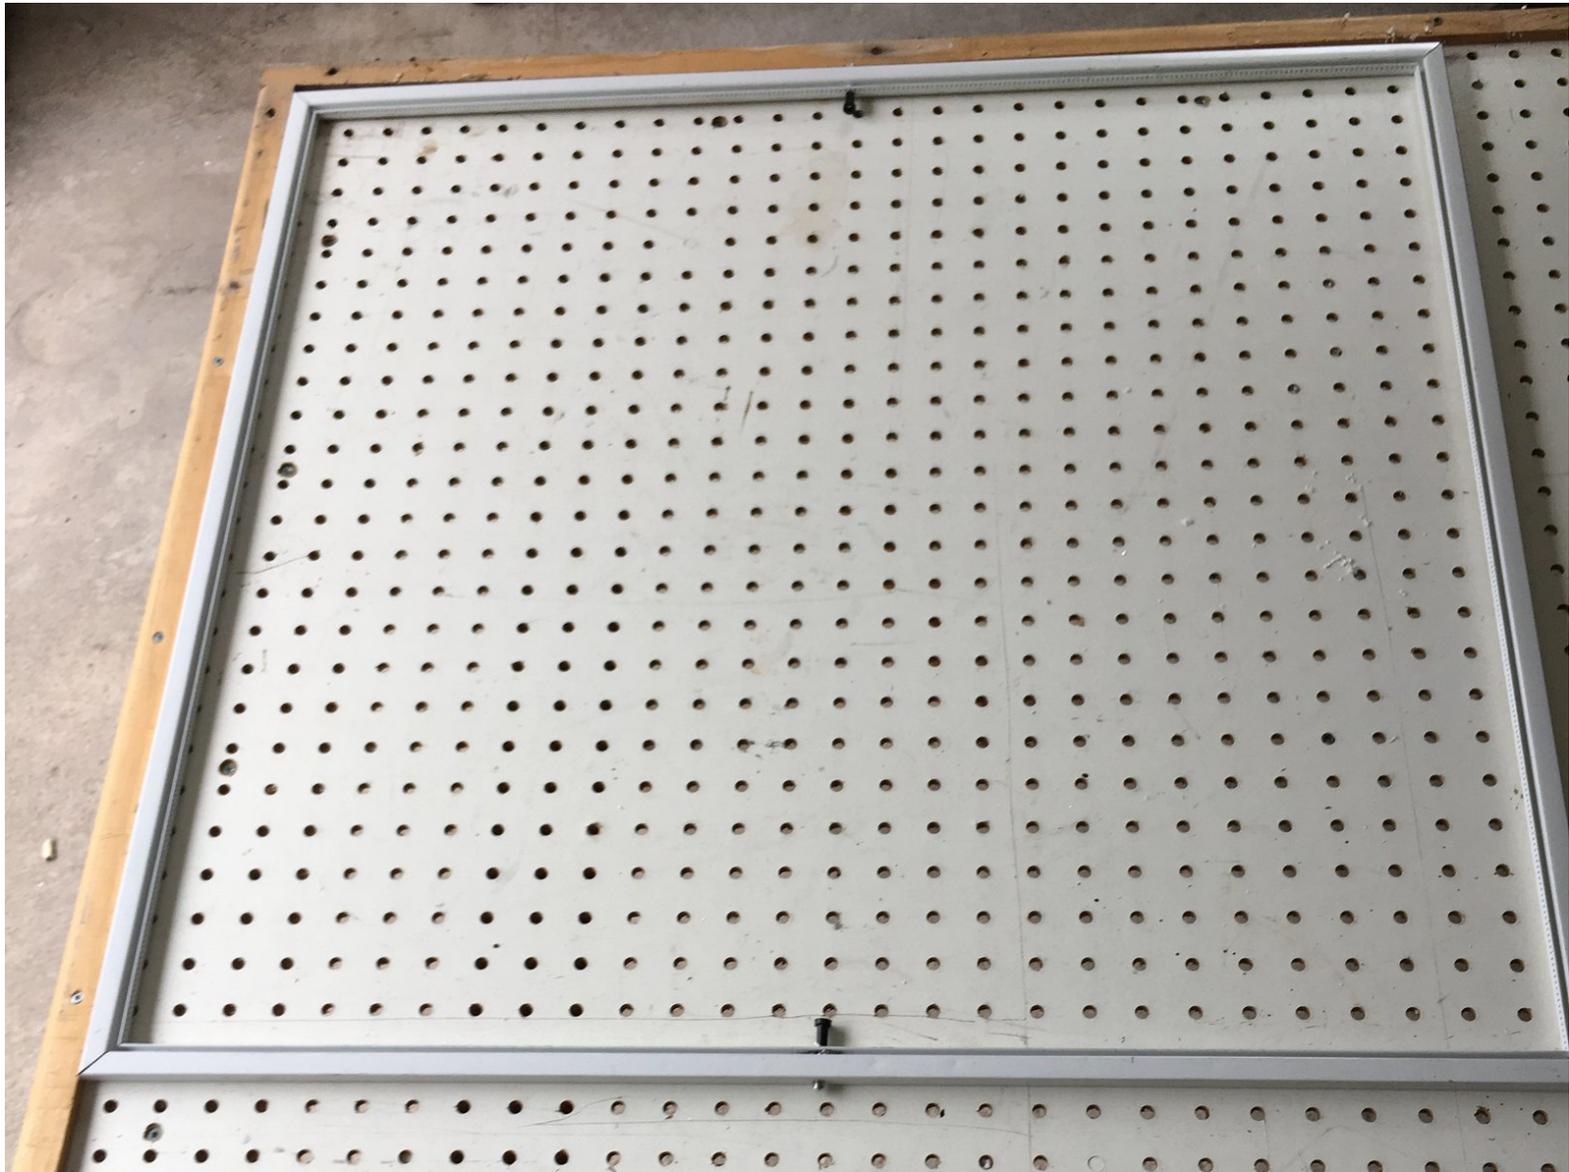

TOOLS:

- [Flathead Screwdriver](#) (1)
 - [Screen Door Rollers](#) (1)
 - [Utility Knife](#) (1)
-

Step 1 — How to install Window or sliding door pet screen

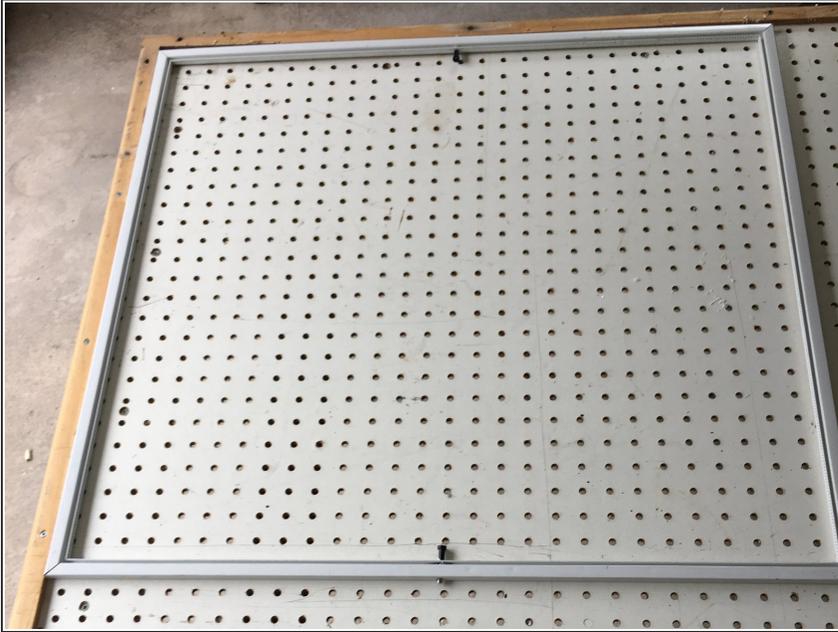

- Make sure you start with a frame that's straight and square. I use a table with cleats at 90 degrees to make sure each frame is correct

Step 2



- Get the spline started in one corner by forcing it in with a flat blade screwdriver

Step 3



- Pre roll the pet screen into the spline groove . Make sure the cloth goes in square and flat. Pull it out and try again if it does not.

Step 4



- Use a new sharp blade in your utility knife to cut through pet screen

Step 5



- Trim off the excess leaving about 2 inches over the frame before rolling the material in. Leaving too much material hanging will prevent the cloth from laying flat and square.

Step 6



- The finished job should look flat and square, the screen bars should not be bowed in.

To reassemble your device, follow these instructions in reverse order.