



Kenwood KMM-BT522HD LCD Screen Replacement

A guide on how to replace the LCD screen on the Kenwood KMM-BT522HD radio.

Written By: Andrew Waldon




INTRODUCTION

This repair might be needed in the event of a defective LCD screen.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Face Plate

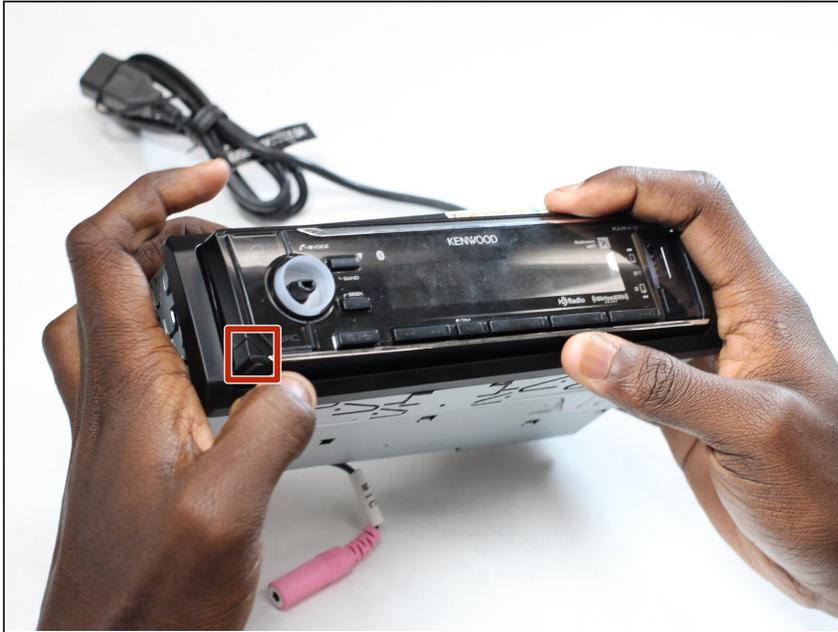

- Press the ejector button on the lower left corner of the face plate.

Step 2




- Remove the face plate by pulling upwards and in the direction of the ejector button.

Step 3 — LCD Screen




- Remove the three 7.5mm Phillips #1 screws.

Step 4

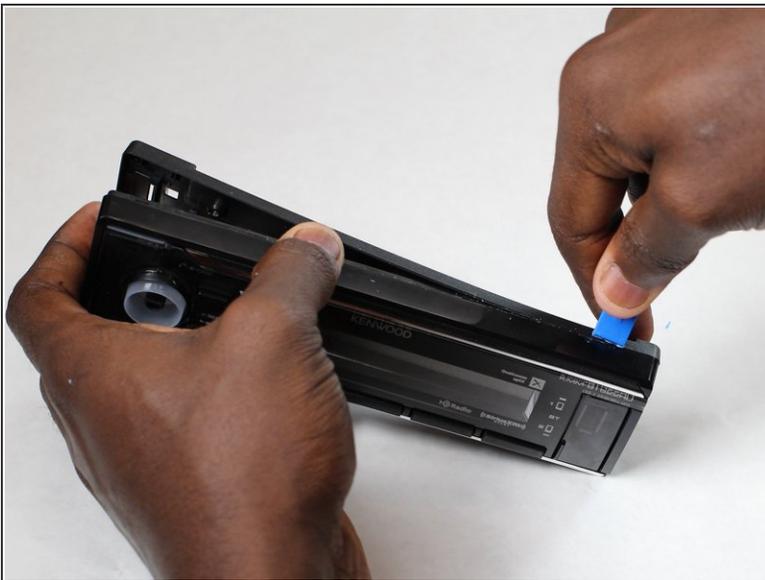

- Separate the two halves of the housing by prying along the length of the device with a plastic opening tool.

Step 5

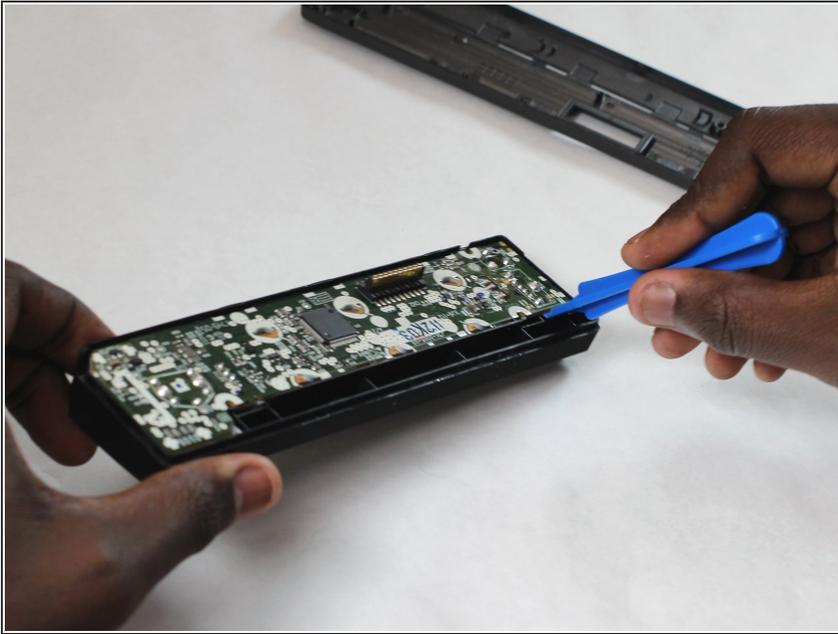

- Remove the motherboard from the housing.

To reassemble your device, follow these instructions in reverse order.