



HP 15-da0002dx Battery Replacement

How to replace a battery in the HP Notebook 15-da0002dx laptop.

Written By: Abigail Aron



INTRODUCTION

If the HP 15-da0002dx is not charging correctly or only works when plugged in, follow these to replace the battery.

The battery powers the computer and allows it to be used without a power cord. A faulty battery can lead to improper charging and low battery life. Before replacing the battery, make sure your computer's software is up to date by visiting the latest [Official Hp Website](#). Also be sure to check if the power adapter being used is the correct power adaptor for your computer. Visit the [HP-da0002dx troubleshooting page](#) for more information on software and power adaptor solutions.

Before using this guide, power off the computer and wait for the components to cool. Working over a non-carpeted surface will reduce the risk of ESD damage (electrostatic discharge). A non-carpeted surface should not be able to conduct electricity and is connected to a grounded surface. Another way to reduce the risk of ESD damage is by using a plastic tool when removing the battery as plastic does not conduct electricity.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Back Cover




- Make sure the computer is completely turned off.

Step 2




- Turn over the laptop.
- The HP label should be touching the table and the bottom cover should be facing up.

Step 3

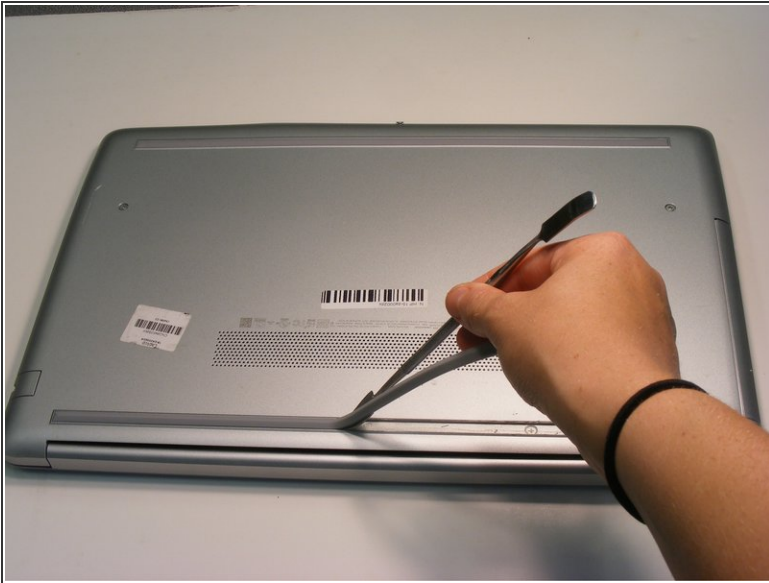

- Two plastic feet are located on adjacent sides of the back cover.
- Peel back the plastic feet using the plastic opening tools.

Step 4

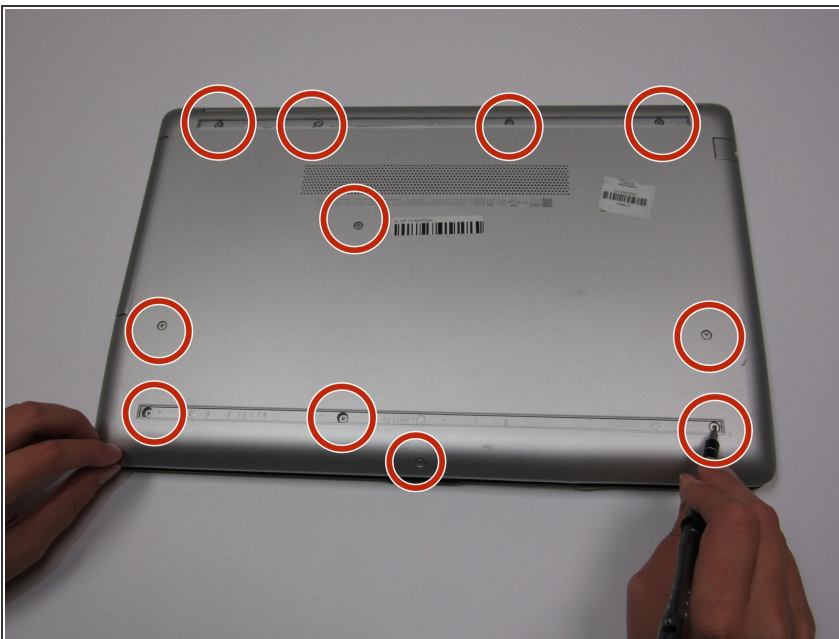

- Using the Phillips #1 screwdriver, unscrew the eleven 9.0 mm screws holding the back cover in place.

Step 5




- Carefully flip over the computer so the HP label is now facing the ceiling.

Step 6



- Open the screen.
- Run the plastic opening tools along the edge of the back cover. Do this until the back cover becomes loose.

Step 7

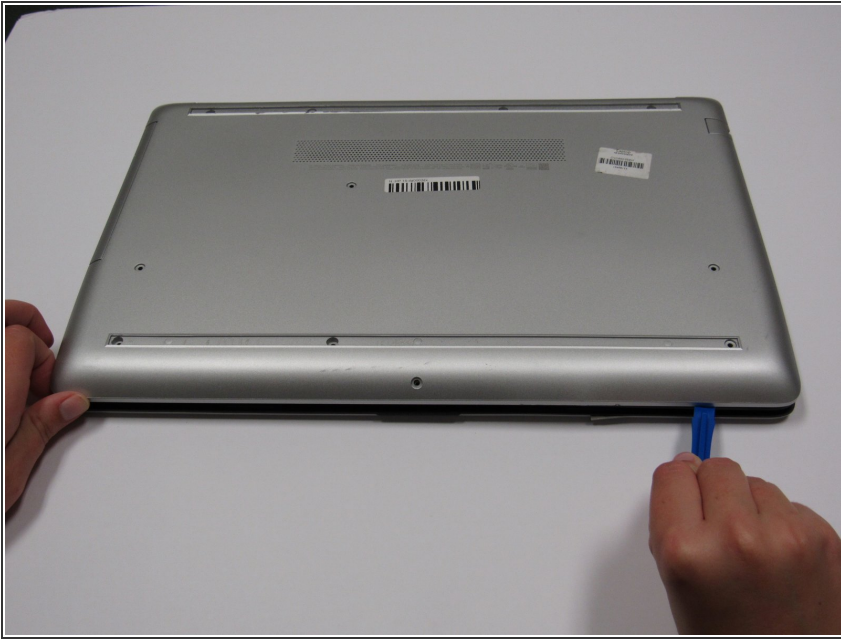

- Close the screen and flip over the laptop. Using the plastic opening tools, gently take off the back cover starting from the middle, bottom edge.

Step 8 — Battery



- Remove the screws holding the battery in place using a Phillips #1 screwdriver.

Step 9



- Using your fingers, tilt the top part of the battery towards you.
- Continue to pull the rest of the battery away from the mounting tabs to remove.

To reassemble your device, follow these instructions in reverse order.