


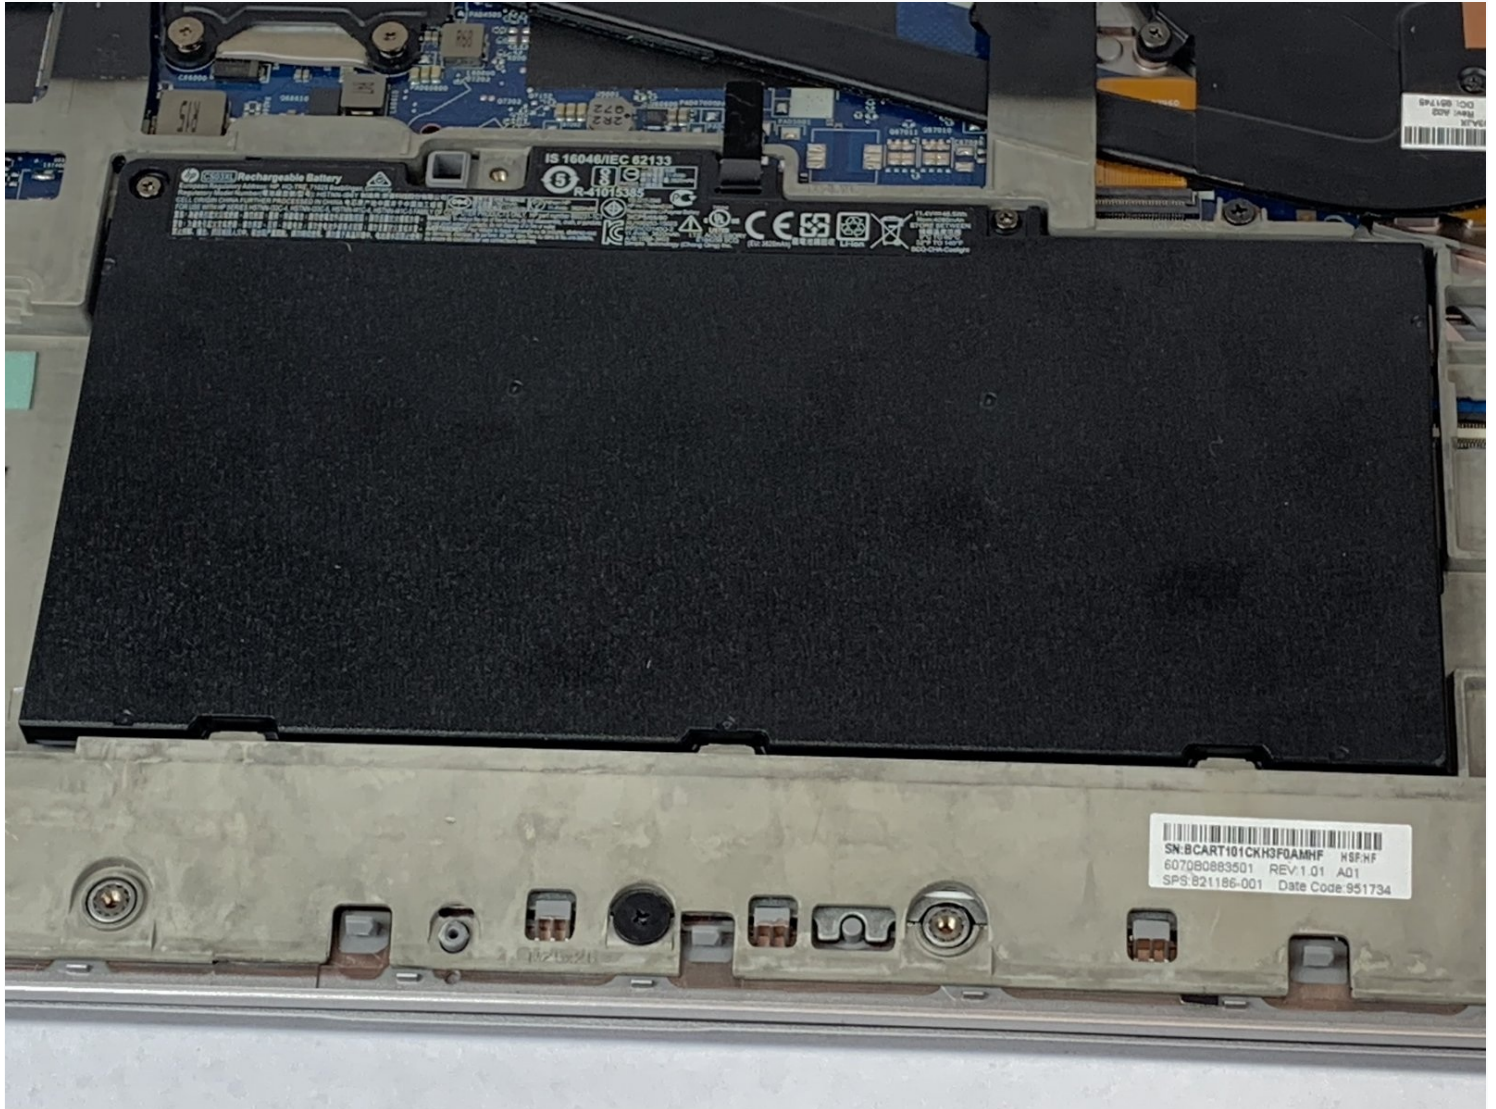

HP EliteBook 850 G3 Battery Replacement

If your HP EliteBook 850 G3 is not holding a...

Written By: Annabeth Grover



INTRODUCTION

If your HP EliteBook 850 G3 is not holding a charge use this guide to replace the battery. The battery powers the laptop if it is faulty the computer will not keep a charge. If your battery is swollen this is urgent and dangerous. Be sure to rule out a faulty cord and other common issues that could be preventing your battery from charging properly. Before using this guide, feel free to check out the [troubleshooting page](#) to see if any issues can be resolved without a replacement.

TOOLS:

Phillips #0 Screwdriver (1)
1 x Opening Picks (1)

PARTS:

HP EliteBook CS03XL Battery (1)

Step 1 — Battery



 Turn off your laptop before starting.


- Flip the laptop over so the model stickers face up.

Step 2 — Unscrew the bottom





- Use a Phillips #0 screwdriver to remove eleven 5.7mm screws.

Step 3

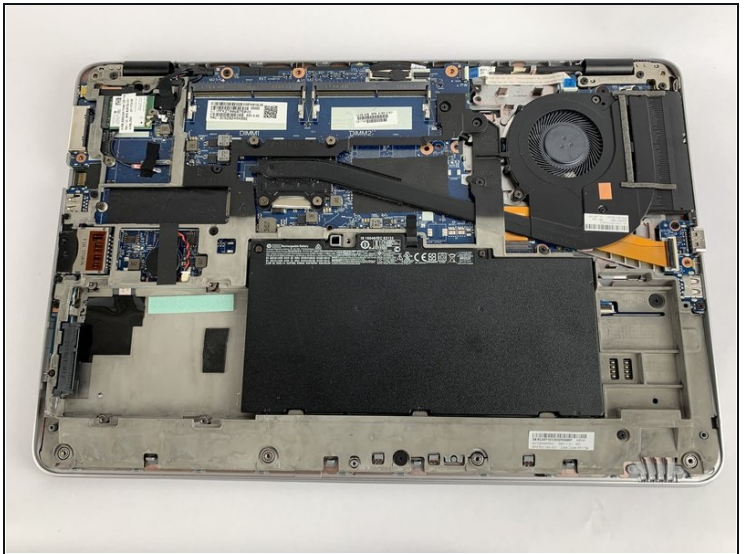

- Insert the iFixit opening pick underneath the plastic back of the laptop. Use force to pry the back off.

Step 4 — Remove the battery screws

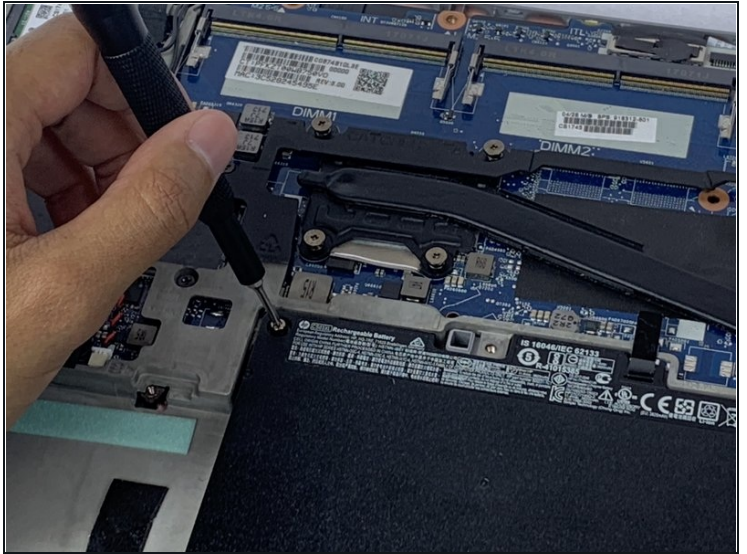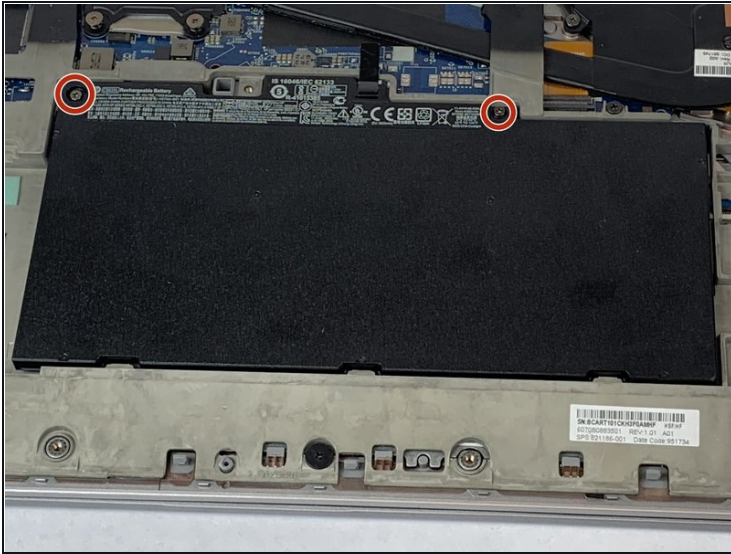

- Use the Phillips #0 screwdriver to remove the two battery screws.
- ⓘ The two battery screws are captured screws and do not come out.

Step 5 — Lift the battery



- Lift and pull the flap located at the top of the battery to remove it.

To reassemble your device, follow these instructions in reverse order.