



LG K7 Volume & On/Off Buttons Replacement

A brief replacement guide of the LG K7 external power and volume buttons.

Written By: Jack Lepkowski



INTRODUCTION

The power and volume buttons allow the user to turn on/off their LG K7 as well as to control the volume of their phone . It can stop working for a number of reasons but the main reason is wear. It can be replaced in about 25 minutes with the guide below.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Volume & On/Off Buttons



- Remove the back cover using a plastic opening tool.
- Remove the battery using a plastic opening tool.

Step 2

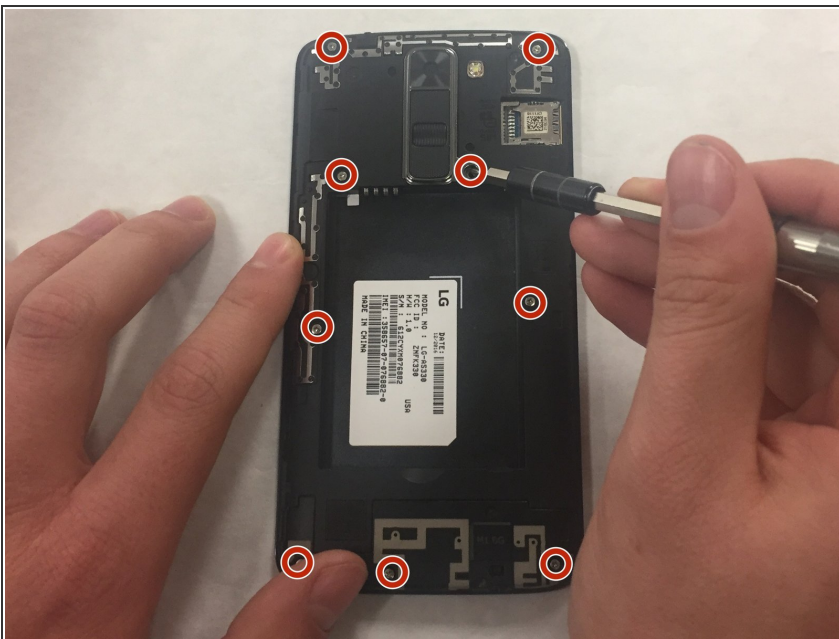

- Remove the nine 4mm Phillips #000 screws.
- ⓘ The cover should lift off easily once the screws are out.
- ⚠ Be gentle with the frame when removing it. The plastic is very thin and can easily break.

Step 3





- Pry off the silver button housing using the plastic opening tool.

Step 4




- Separate the screen from the rest of the phone using the plastic opening tool.
- ⓘ The frame is held to the rest of the phone with plastic tabs. Release each tab one at a time around the phone for the easiest removal.
- ⚠ Do not bend the outer frame or screen when separating them. This will severely damage the phone.

Step 5

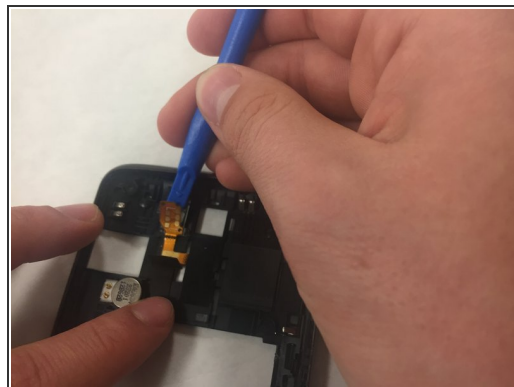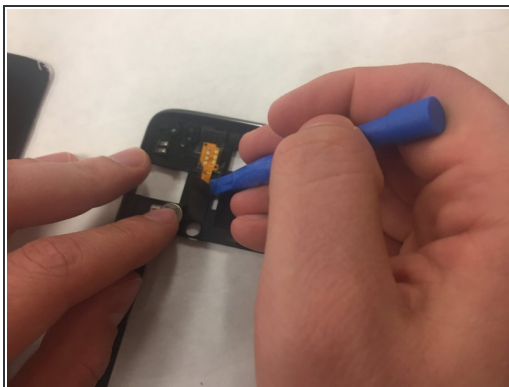

- Peel off the orange cable using a plastic opening tool.

Step 6

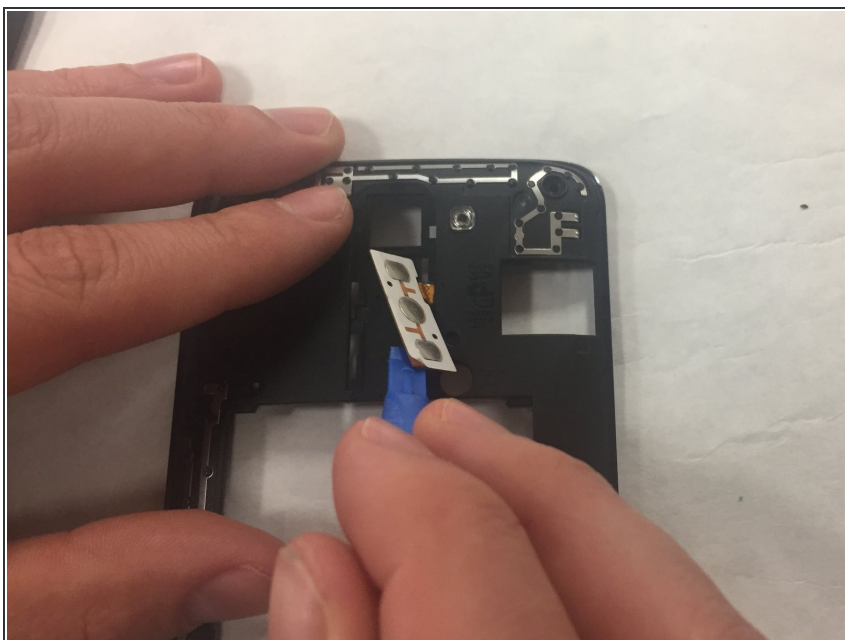

- Remove the volume/power button cable from the rest of the phone using the plastic opening tool to break the adhesive.

To reassemble your device, follow these instructions in reverse order.