



OnePlus 6T Speaker Replacement

If the audio coming from your OnePlus 6T...

Written By: Quinn Jones



INTRODUCTION

If the audio coming from your OnePlus 6T speakers sounds distorted and troubleshooting doesn't work, you may need to replace your speakers.

TOOLS:

[Hairdryer or Heat tool](#) (1)
[iOpener](#) (1)
[Plastic Cards](#) (1)
[Tweezers](#) (1)
[Jimmy](#) (1)
[Spudger](#) (1)
[Halberd Spudger](#) (1)
[Phillips #00 Screwdriver](#) (1)

PARTS:

[OnePlus 6T SIM Card Tray](#) (1)
[OnePlus 6T Back Cover](#) (1)

Step 1 — Back Cover




- Make sure the phone is powered off and placed with the back cover facing towards you on a stable surface.

Step 2



- Pop open the SIM card tray by inserting a SIM card removal tool into a small hole on the upper-left side of the phone.
- Carefully remove the SIM card from its tray.

Step 3

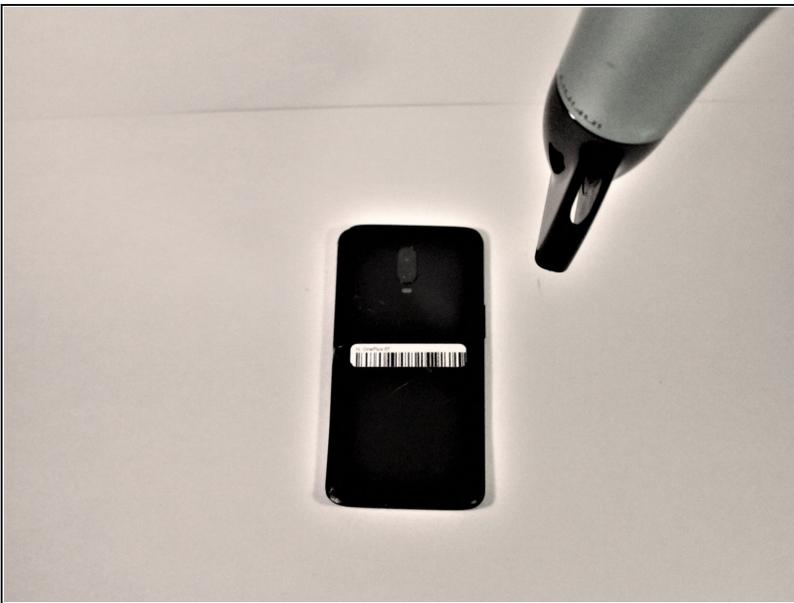

- Loosen the binding glue within the phone using a hairdryer or an [iOpener](#).
- ① If you choose to use a hairdryer, hold the dryer at least eight inches from the phone and apply heat for two minutes in a circular motion around the edges of the phone.

Step 4



- Insert a Jimmy under one of the heated corners of the phone to lift it slightly.
- Insert a [plastic card](#) underneath the slightly lifted lip on the back cover and gently glide the card under the lifted phone casing.
- ⓘ There will be a small amount of tension, but this is normal as the card is removing the adhesive within the phone.
- Remove the back cover from the phone.
- ☑ Use high concentration (>90%) isopropyl alcohol and a lint-free cloth to remove all adhesive residue from the back cover and the frame.

Step 5 — Speaker



- Remove seven 3mm Phillips #00 screws from the speaker.

Step 6



- Use a spudger to lift and remove the speaker.

To reassemble your device, follow these instructions in reverse order.