




Samsung BlackJack II Audio Receiver Replacement

Install the audio receiver inside of your phone.

Written By: Ryan Rumsey

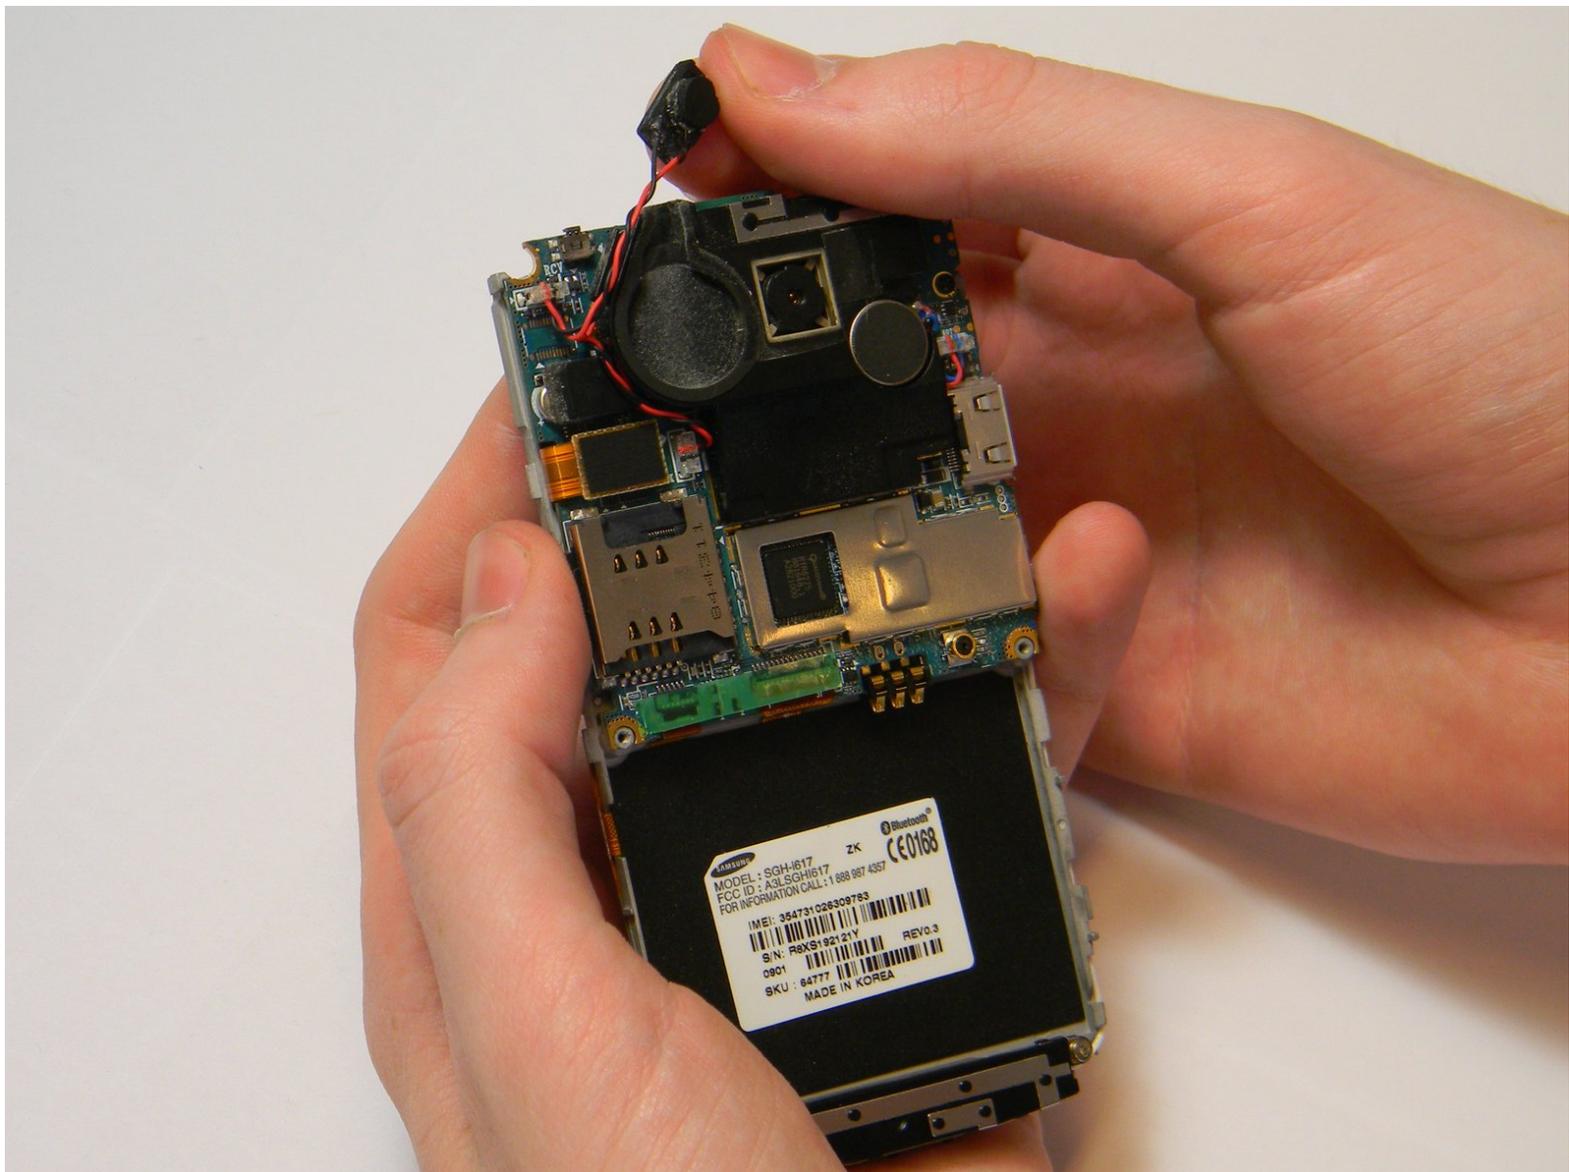


INTRODUCTION

Use this guide to install, remove or replace the phone's audio receiver.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery

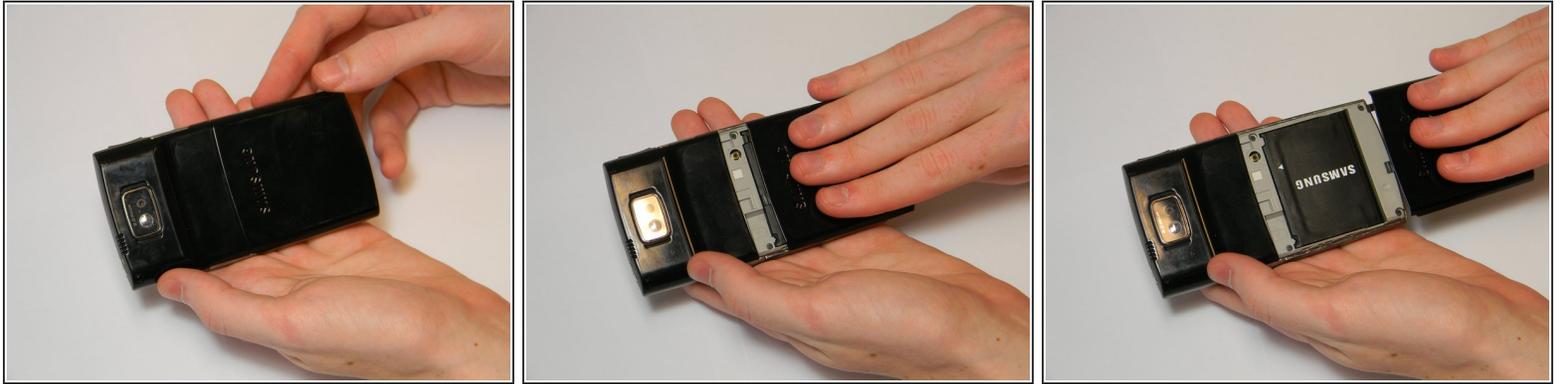


- Apply downward pressure to the top of the battery panel while pulling down to slide it off the phone.

Step 2

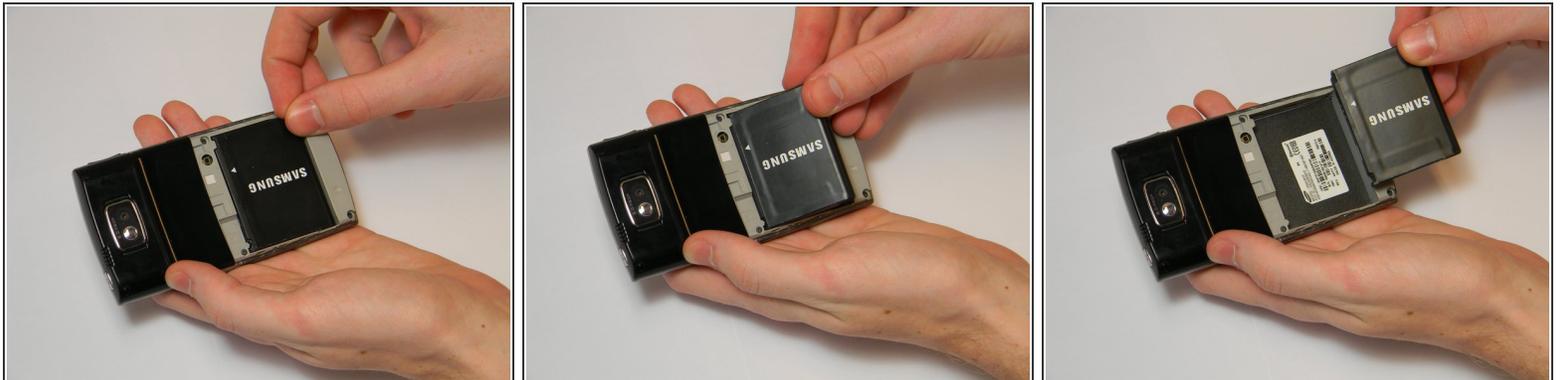


- Locate the grooves on the sides of the battery near the bottom of the phone. Use your fingers to pull the battery up and out of the phone.

Step 3 — Back Casing

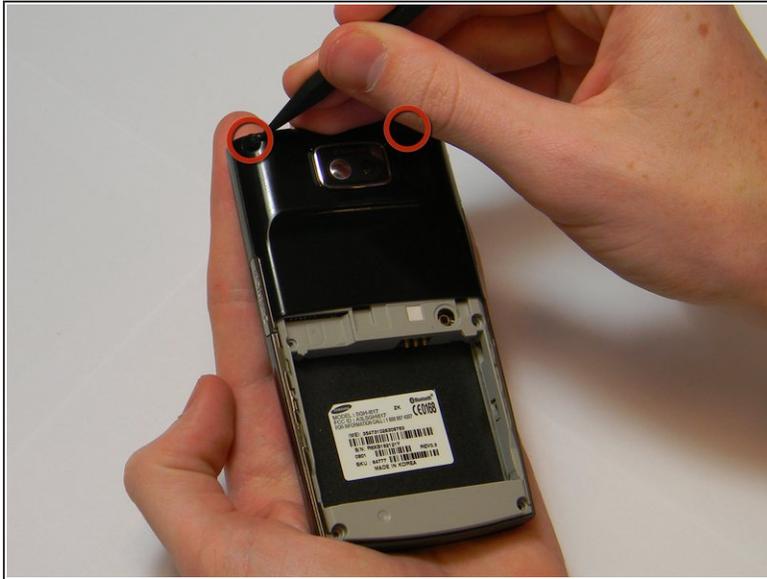

- Use the spudger to pry the two plastic caps out of the top corners of the phone casing.
- ⓘ To get a better grip, you may use the tweezers to finish pulling the plastic caps from the phone.

Step 4

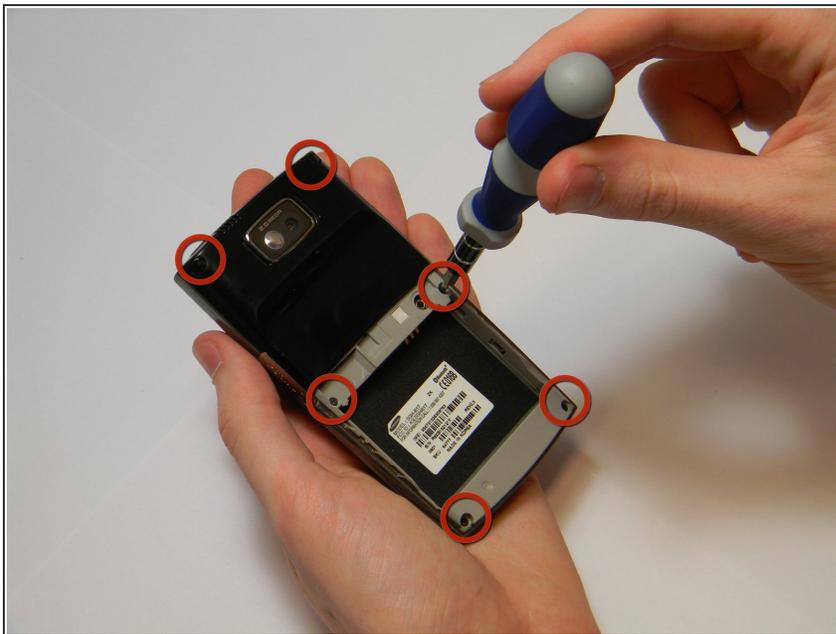


- Remove the six 4.0 mm screws using the Phillips 00 screwdriver.

Step 5




- Insert the plastic opening tool in the gap between the back panel and rest of the body.
- Slide the tool along the edges until the two pieces come apart.
- ⓘ The circuit board is attached to the front casing. Both casings should separate without having to sever electrical connections.

Step 6 — Front Casing

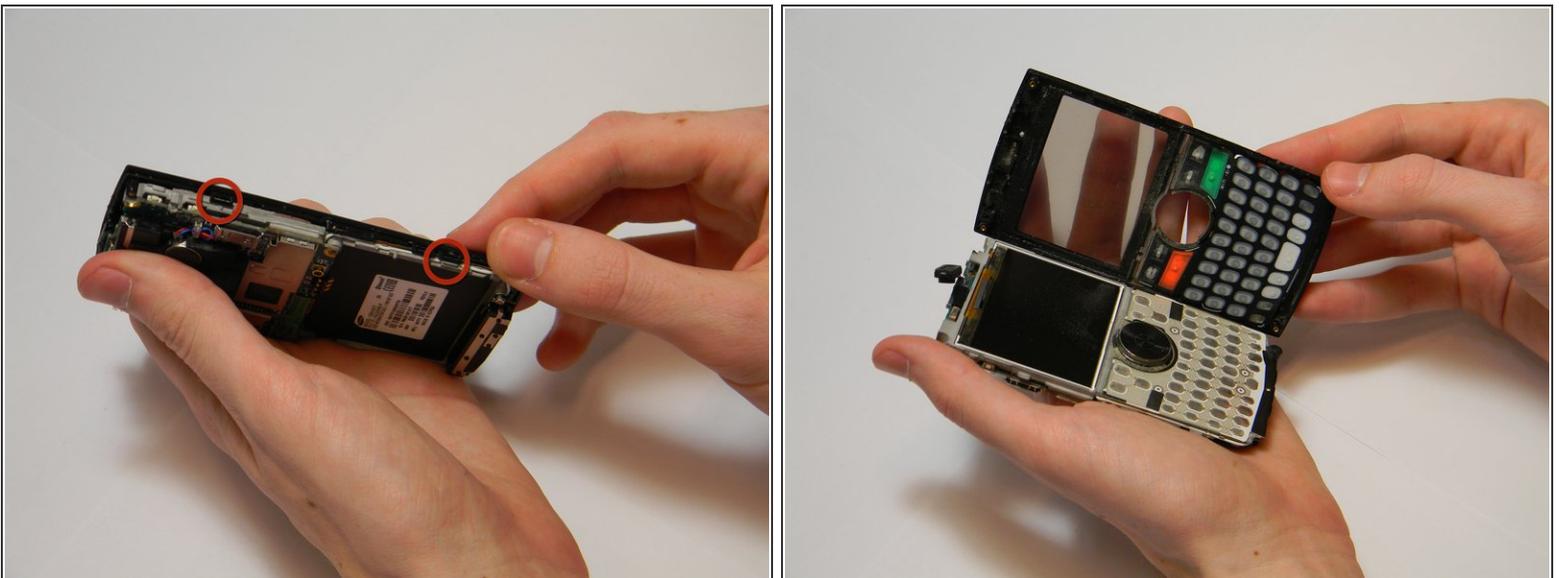


- Pry apart the plastic tabs along the edges of the phone.
- Separate the front panel from the main body of the phone using your fingers.

Step 7 — Audio Receiver

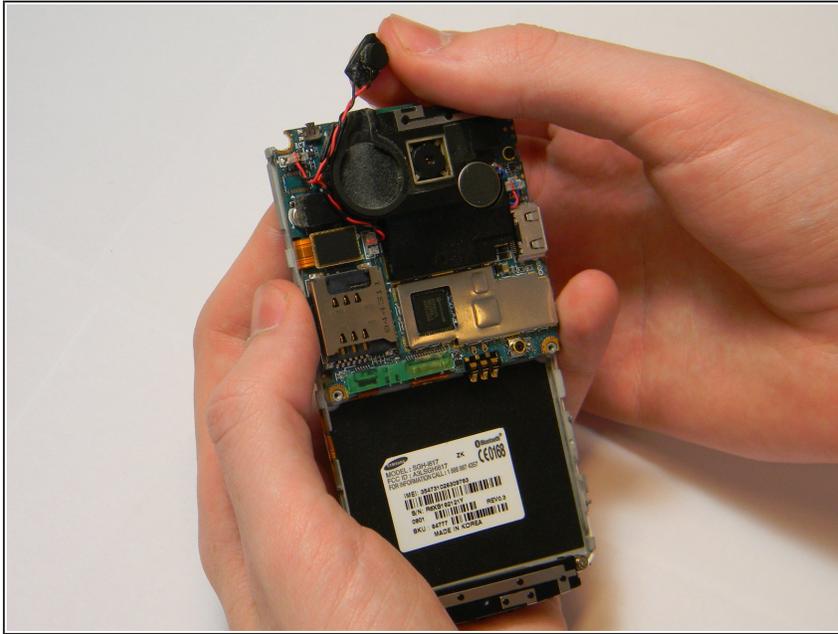

- The audio receiver is a small rectangular piece connected via wire to the circuit board.
- Carefully free the audio receiver so it is only connected by a small, clear plug on the circuit board.

Step 8

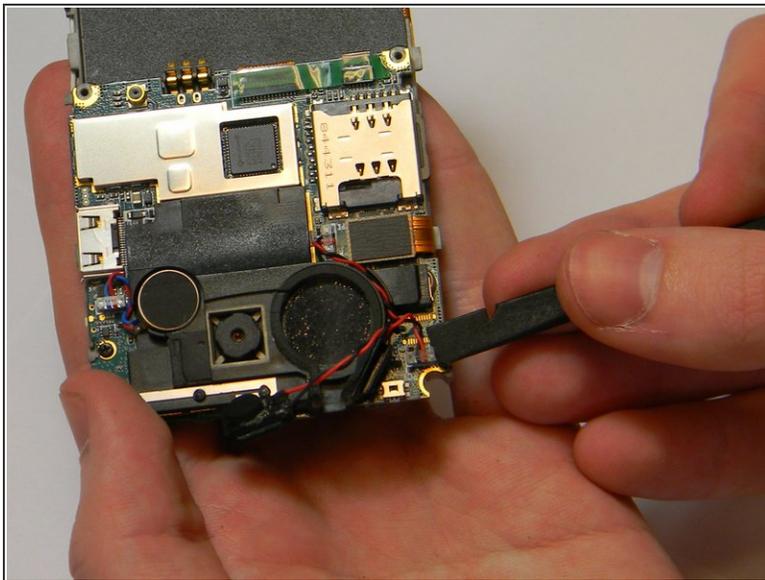

- Use the spudger to separate the clear plug from its connector on the circuit board.
- Use light force to avoid damaging any fragile components.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2022-09-04 12:12:39 PM (MST).

