


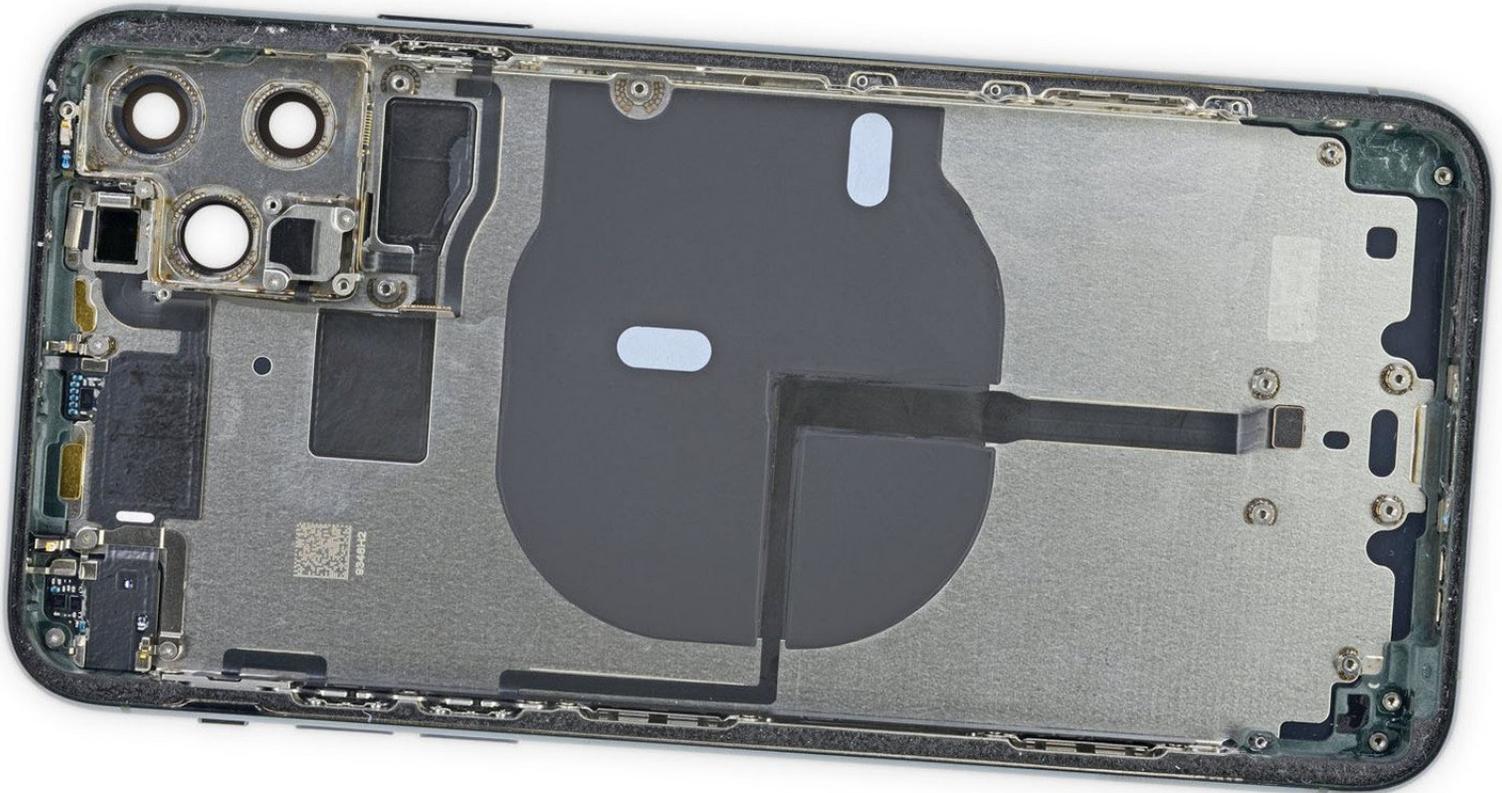

# iPhone 11 Pro Max Rear Case Replacement

Use this guide to remove all components from the rear case of your iPhone 11 Pro Max.

Written By: Arty



## INTRODUCTION

[video: <https://www.youtube.com/watch?v=ex0piJTzM9k>]

Use this guide to remove all components from the rear case of your iPhone 11 Pro Max. This guide will show you how to remove speaker vents, button cables, and button covers so you can replace a dented or bent cover.

---

### TOOLS:

- [P2 Pentalobe Screwdriver iPhone](#) (1)
  - [Tri-point Y000 Screwdriver](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
  - [Tweezers](#) (1)
  - [iFixit Opening Picks \(Set of 6\)](#) (1)
  - [Suction Handle](#) (1)
  - [Spudger](#) (1)
  - [Standoff Screwdriver for iPhones](#) (1)
-

To reassemble your device, follow these instructions in reverse order.