



Dirt Devil Gator Filter Replacement

How to replace the filter on your Dirt Devil Gator.

Written By: Ryan Marando



INTRODUCTION

If your Dirt Devil Gator (Model Number: BD10100) isn't creating suction, picking up debris, or functioning properly, you may need to replace the filter. Follow this guide to clean/replace the filter on your device.

However before using this guide, you may not need to fully replace the filter, just clean it. [A clogged air filter](#) is a simple problem with a quick fix to get you started vacuuming again quickly!

The filter on the Dirt Devil Gator helps collect dirt and debris from the ground into your vacuum. [A clogged filter](#) will not pick up dirt or hold on to already picked up debris. If the filter is destroyed, it will need a replacement.

Before beginning, make sure to power off your device completely and disconnect from any external power source.

Step 1 — Filter



- To get to the filter, press the button on the top of the vacuum to split your device in two.

Step 2



- Remove your Dirt Devil Gator into its two components by pulling apart.

Step 3




- Turn over the front half of the device.

Step 4




- Press the two grey buttons on either side of the filter chamber inwards to release the chamber.

Step 5

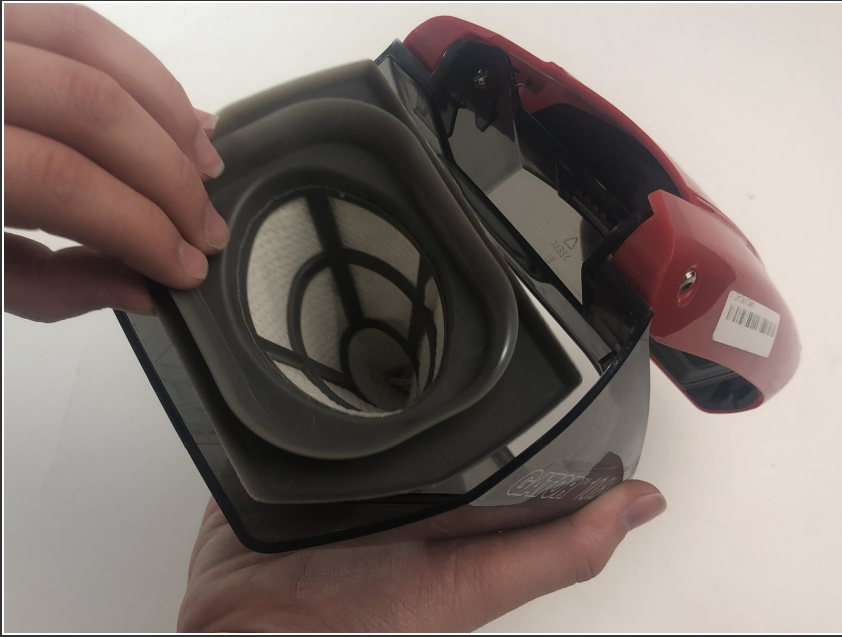

- Remove all debris and obstructions around the filter itself.
- Remove from the filter chamber by pulling out the filter.

Step 6

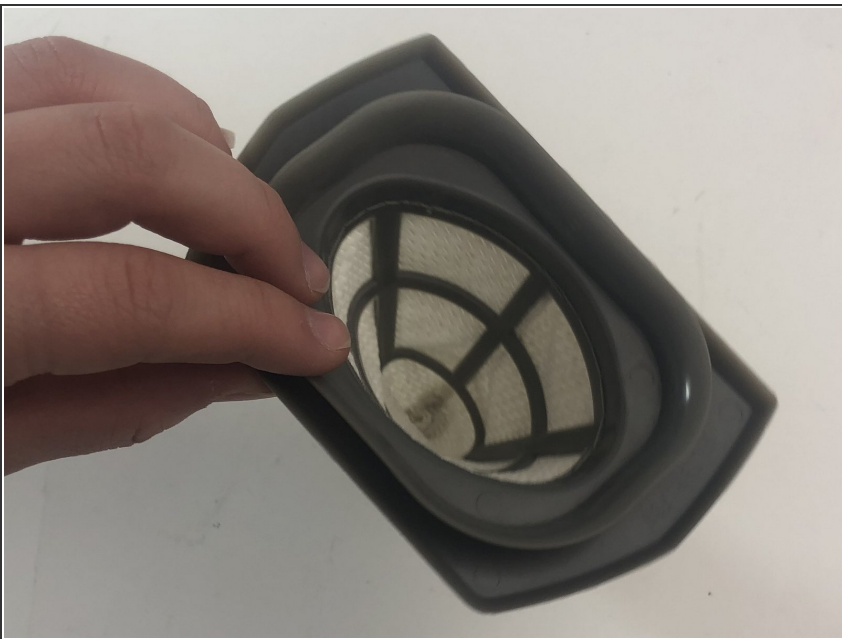

- Replace it with a new or restored filter by placing it back in the filter chamber.

To reassemble your device, follow these instructions in reverse order.