



Lasko CD08200 Disassembly

This guide shows how to open the Lasko CD08200 space heater.

Written By: Artur Komissarov



INTRODUCTION

Please refer to the [Lasko CD08200 Troubleshooting guide](#) before beginning to make sure this prerequisite guide applies to you.

Please disconnect the device and let it sit for 10 minutes so any fuses can drain before beginning this guide.



TOOLS:


- [TR15 Torx Security Screwdriver](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
 - [Jimmy](#) (1)
-

Step 1 — Lasko CD08200 Disassembly



- Turn over the device and place it on its head.
- Remove the four 14mm screws holding the bottom using a TR15 screwdriver.

Step 2

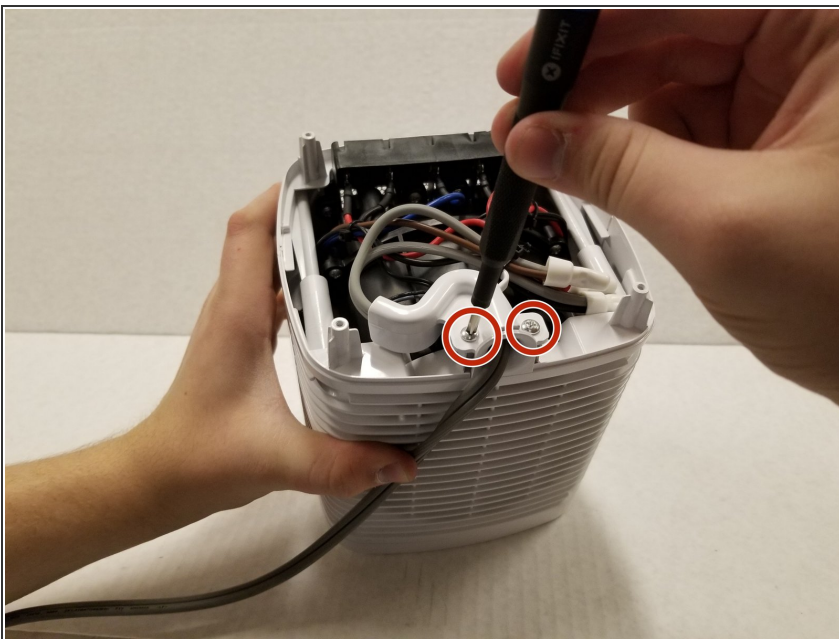


- Remove both 14mm screws from the power cord casing using a Phillips #2 screwdriver.
- Remove the power cord casing from the device case.

Step 3



- Cut the sticker on the right side of the device using a Jimmy.
- Unscrew the four 14mm screws with a Phillips #2 bit on the back of the device.
- ⓘ If your screwdriver cannot reach the screw, you can use the metal spudger.
- Remove the back casing from the device.

Step 4

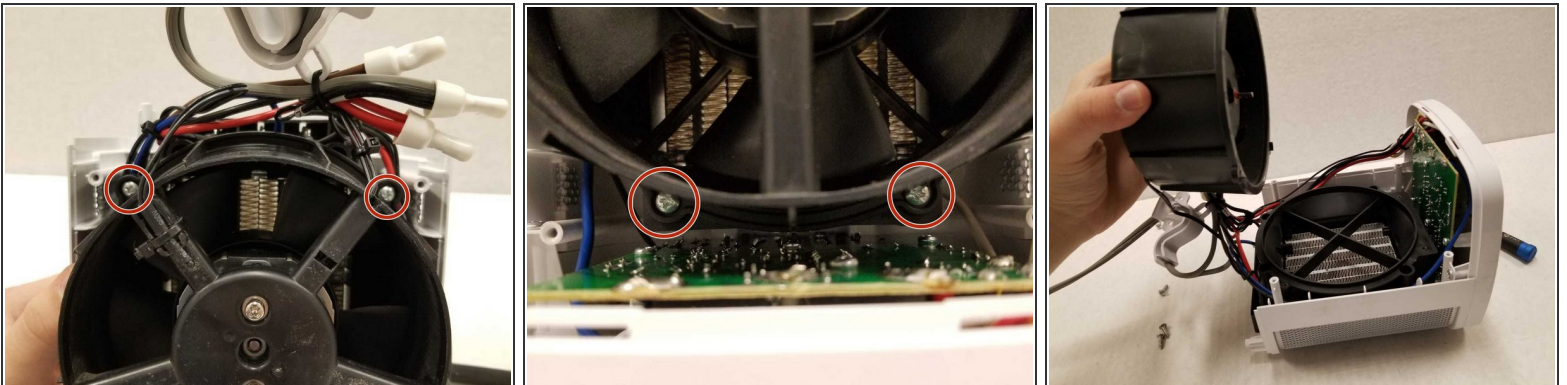

- Remove the four 14mm screws housing the fan using the Phillips #2 screwdriver.
- Remove the top of the fan housing with the fan attached and place it on the table.

To reassemble your device, follow these instructions in reverse order.