




# Sony Bloggie 3D Player Back Cover Replacement

Removing the back cover of the Sony Bloggie 3D.

Written By: Timothy Tran

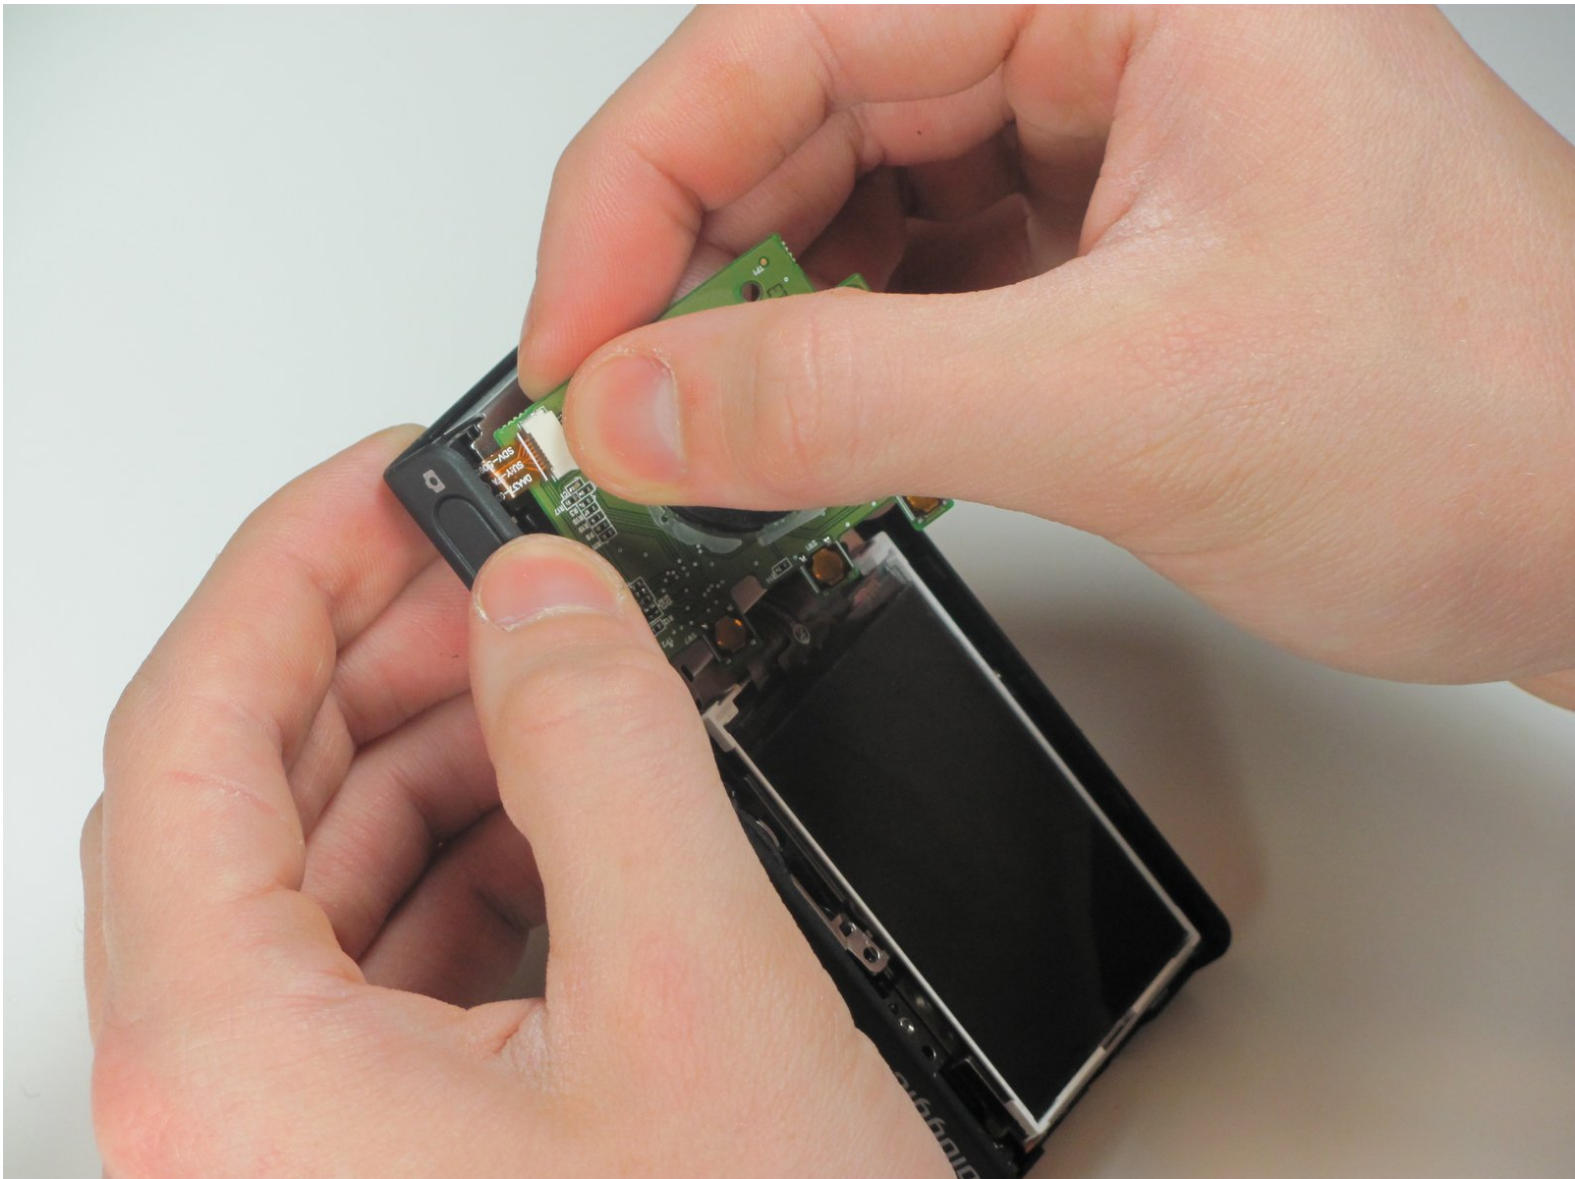

# INTRODUCTION

This guide will detail the steps necessary to remove the back cover of the Sony Bloggie 3D Player.



## TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tool](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Front Cover



- Remove the two 2.5mm Phillips #00 screws using the Philips #00 screwdriver.



## Step 2

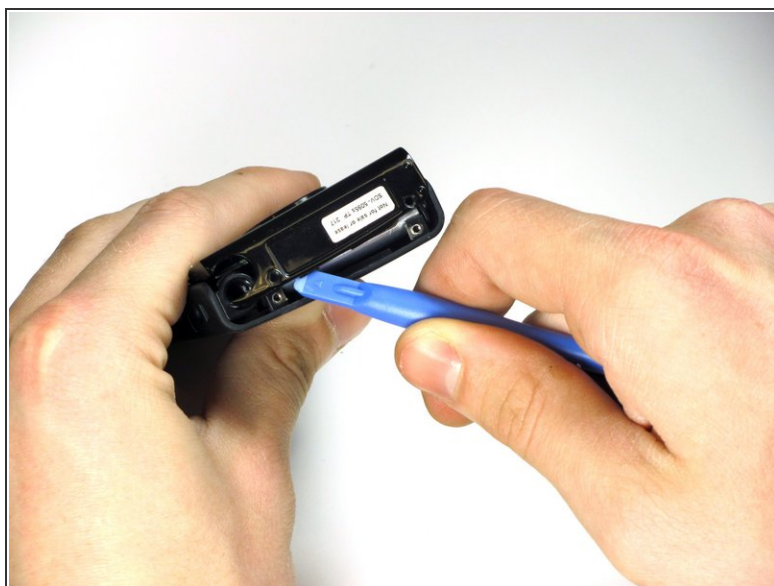

- Use a plastic opening tool to pry the cover open.
- After the the cover is partly open as shown, remove the cover with your hands.



### Step 3 — Back Cover

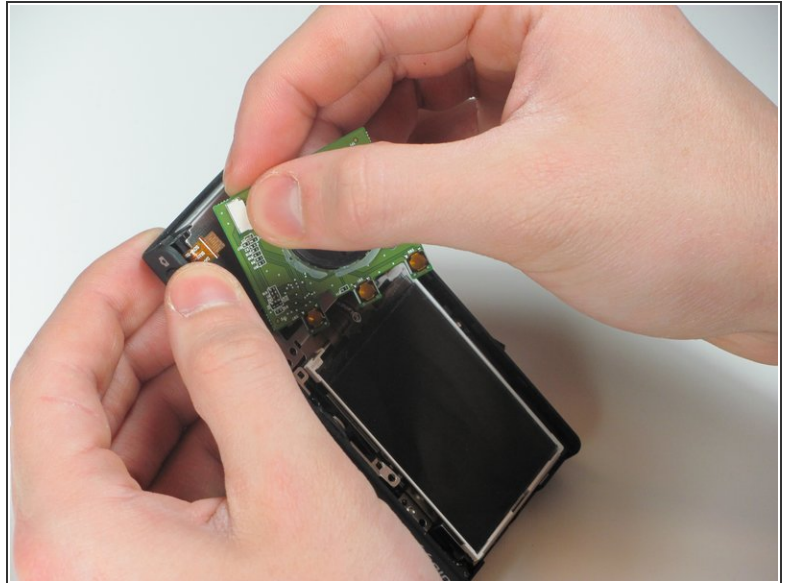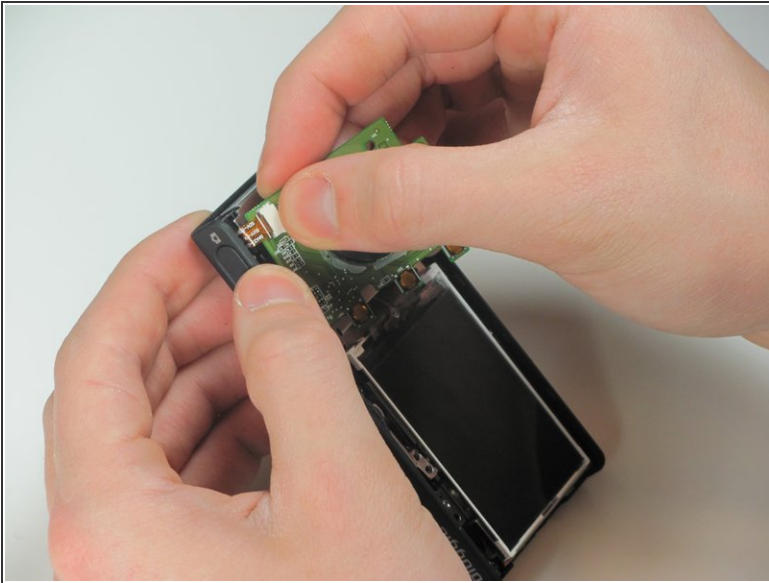

- Using your hand, or a pair of tweezers, remove the ZIF connector by gently pulling it out of the dock on the circuit board.

### Step 4



- Use a plastic opening tool to loosen the back cover off the device.
- Once the back cover is loose, remove it gently by hand.

To reassemble your device, follow these instructions in reverse order.