



Eufy RoboVac 11S Filters Replacement

Eufy RoboVac 11S won't work very efficiently...

Written By: felix



INTRODUCTION

Eufy RoboVac 11S won't work very efficiently when there's too much dust in the filter. Instead of buying a new vacuum, you can replace some accessories to bring life back to your vacuum robot. This guide shows how to replace the foam filter and high-performance filter in the dust collector.

TOOLS:

[Cleaning Brush](#) (1)

PARTS:

[Replacement Parts for Eufy Robovac](#) (1)

Step 1 — Filters




- Press the dust collector release button.
- Pull the dust collector out.

Step 2



- Push the blue button up and open the dust collector.
- Empty the dust collector, and throw all the dust into the trash bin.


Step 3

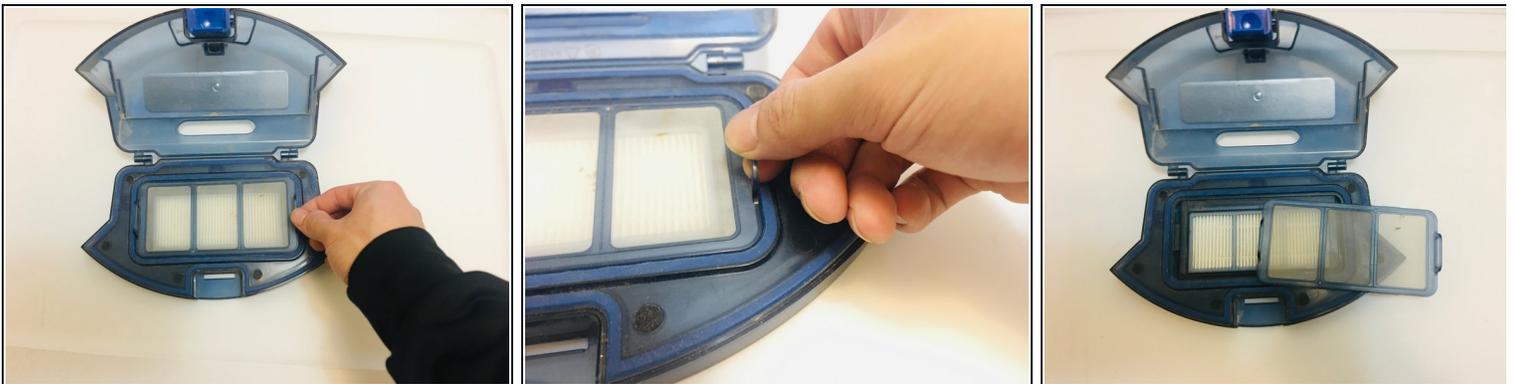

- Pull the hooks up to take out the pre-filter.


⚠ Pull the filter lightly because the hook by the filter is easy to break.

Step 4

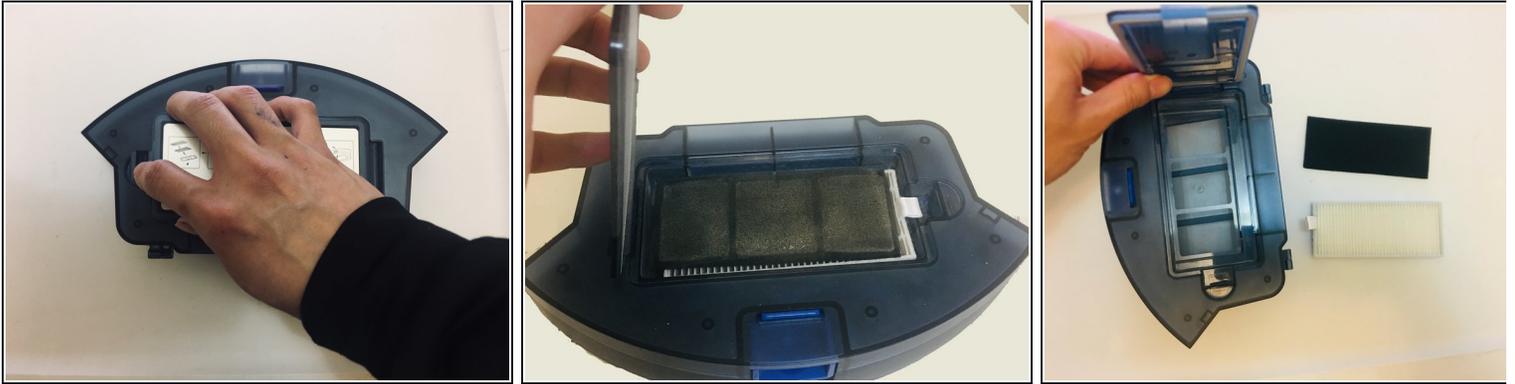

- Take out the high-performance filter to the side and use a cleaning brush to clean the filter.
- Take out the foam filter to the side and dispose of it in the trash bin.

Step 5

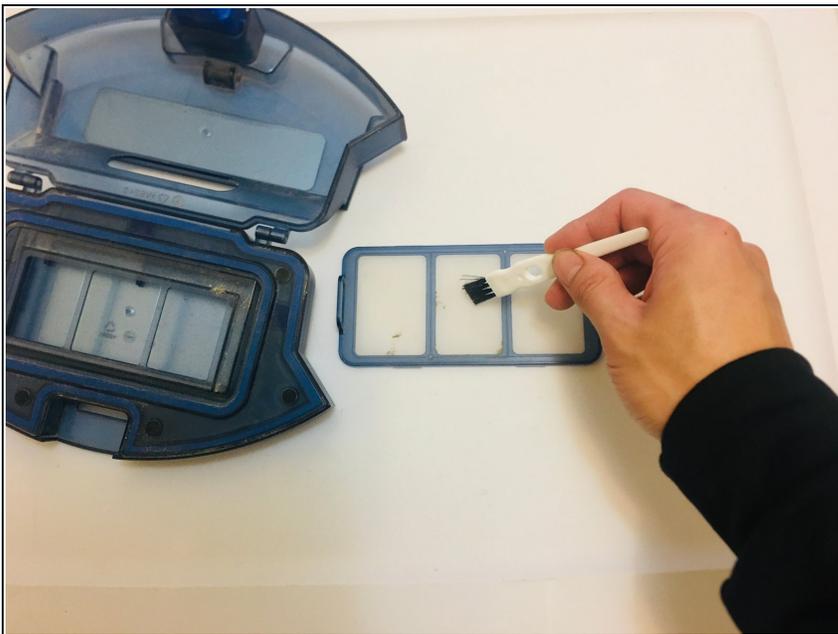

- Use the cleaning brush to sweep the dust from the pre-filter.


Step 6



- Put the pre-filter back in the dust collector.
- Use your finger to push the top button first.

⚠ Push the filter lightly because the hook by the filter is easy to break.

Step 7

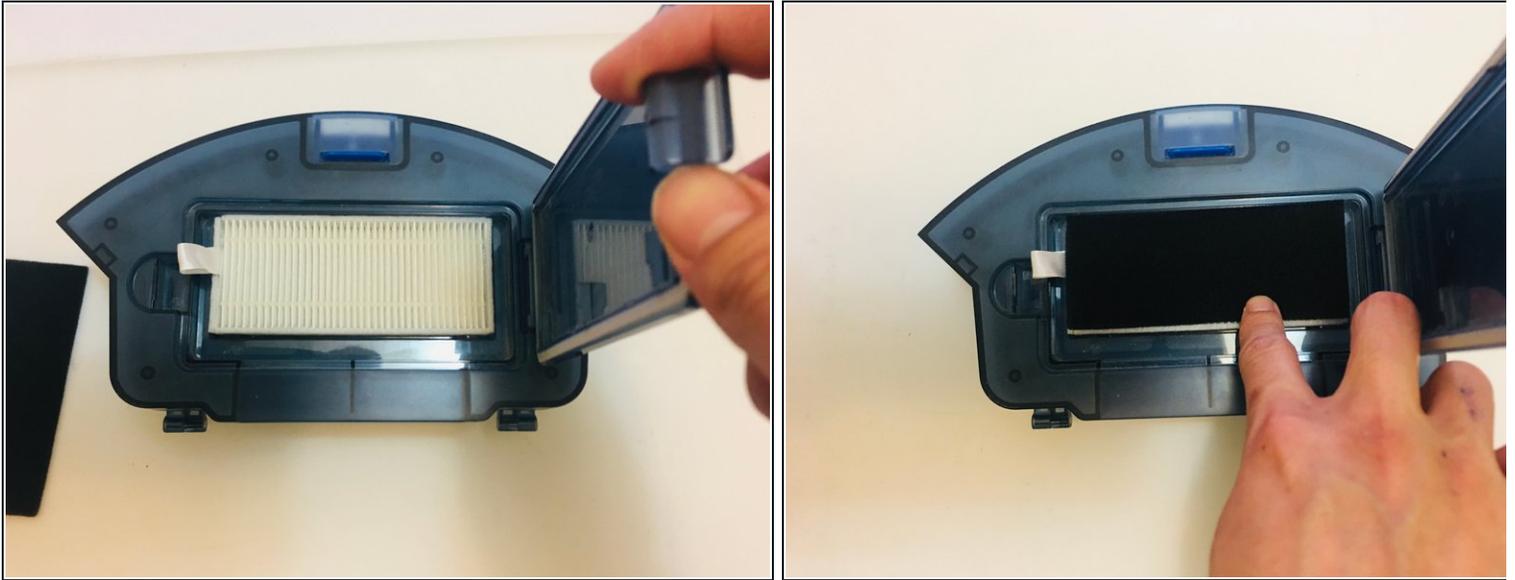

- Open the back of the dust collector.
- Replace the white foam filter.
- Put the black high-performance filter at the top of the foam filter.
- ⓘ Make sure to put the foam filter before the high-performance filter, otherwise the robot will have problems cleaning.

To reassemble your device, follow these instructions in reverse order.