




# Sanyo Katana Front Case Replacement

This guide instructs on how to remove the outer front case on the receiver of the device.

Written By: StephenYH

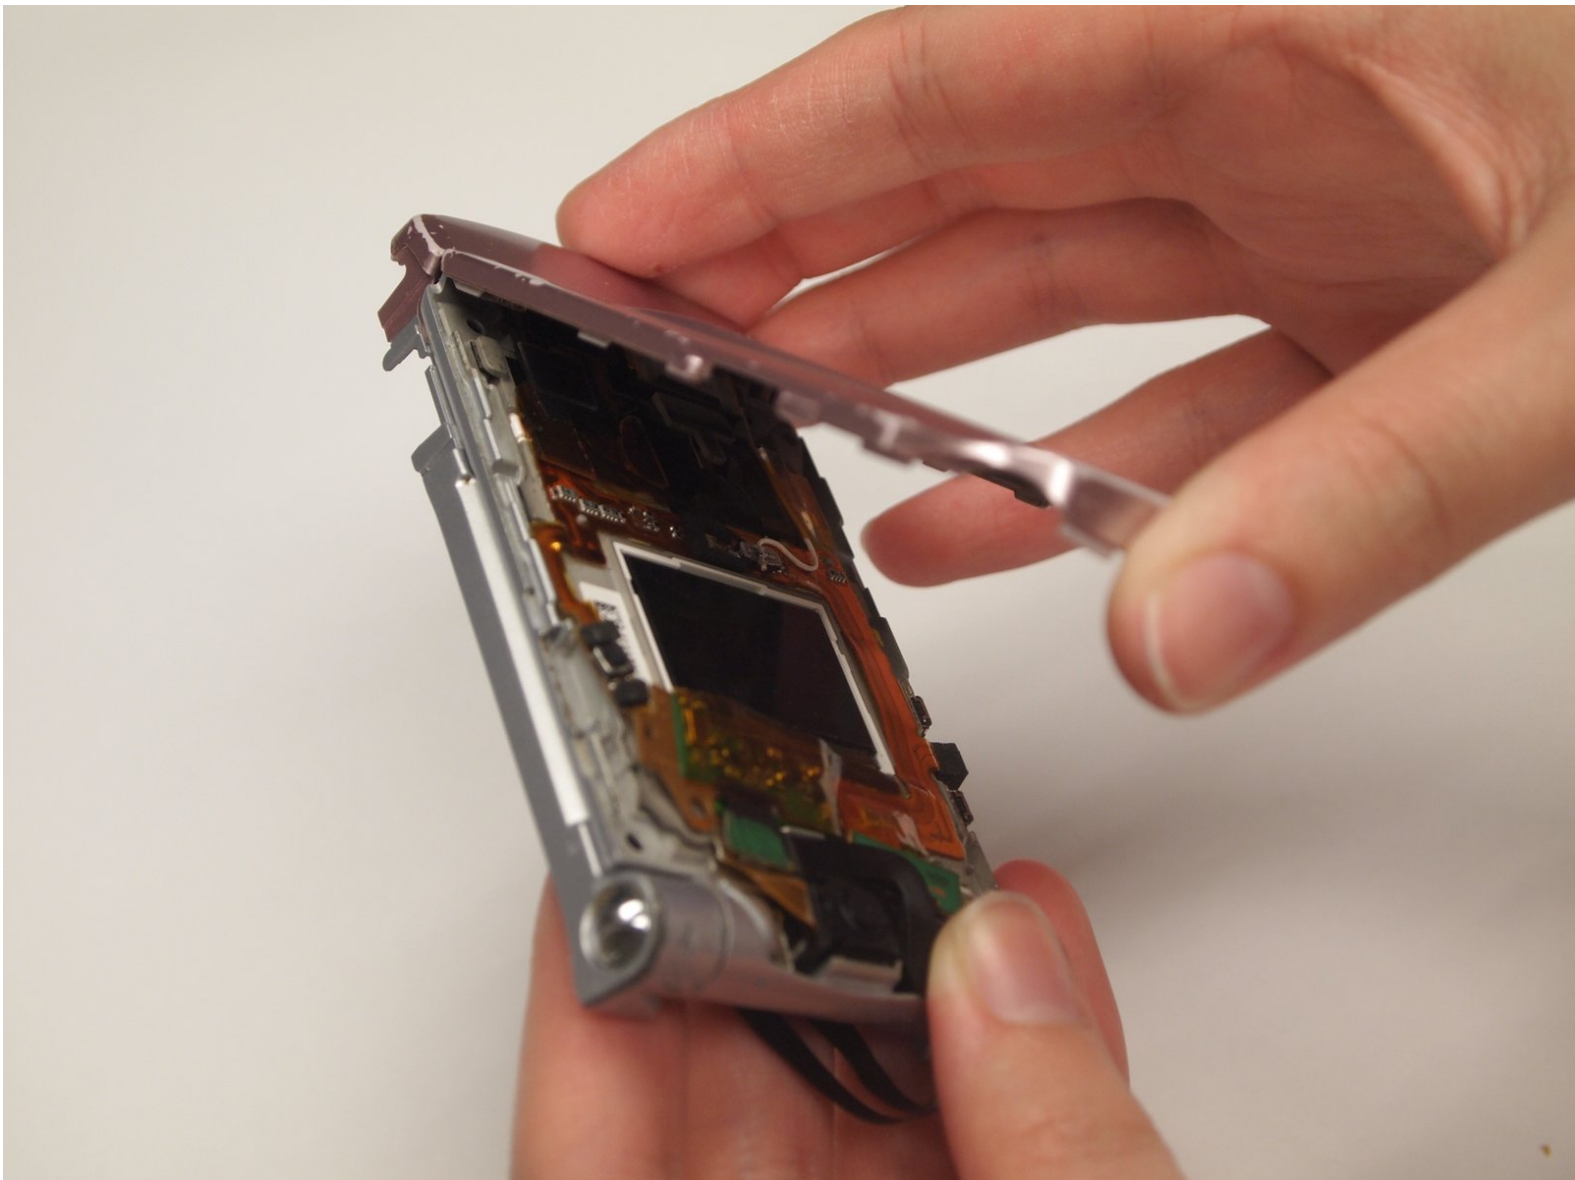

---

## INTRODUCTION

Removing the outer front case of the phone will reveal the LCD component of the device. The case can be swapped out with another of the same or a different color.

---



### TOOLS:


- [Spudger](#) (1)
  - [Tri-point Y0 Screwdriver](#) (1)
-

## Step 1 — Screen Protector




- With the flat end of a spudger, remove the plastic covers located on the corners of the display near the hinge and above the screen, revealing four screws underneath.


## Step 2

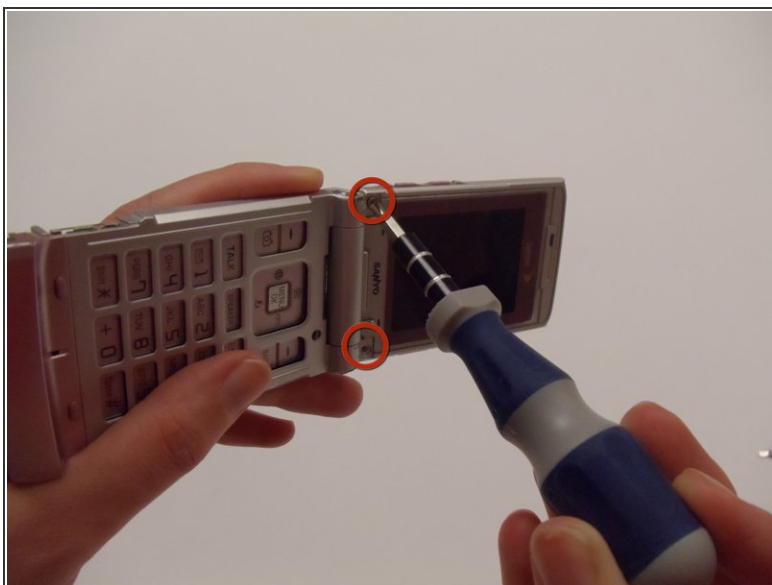


- Remove the 4.4mm screw in each corner using the Tri-wing Y0 screwdriver.

### Step 3

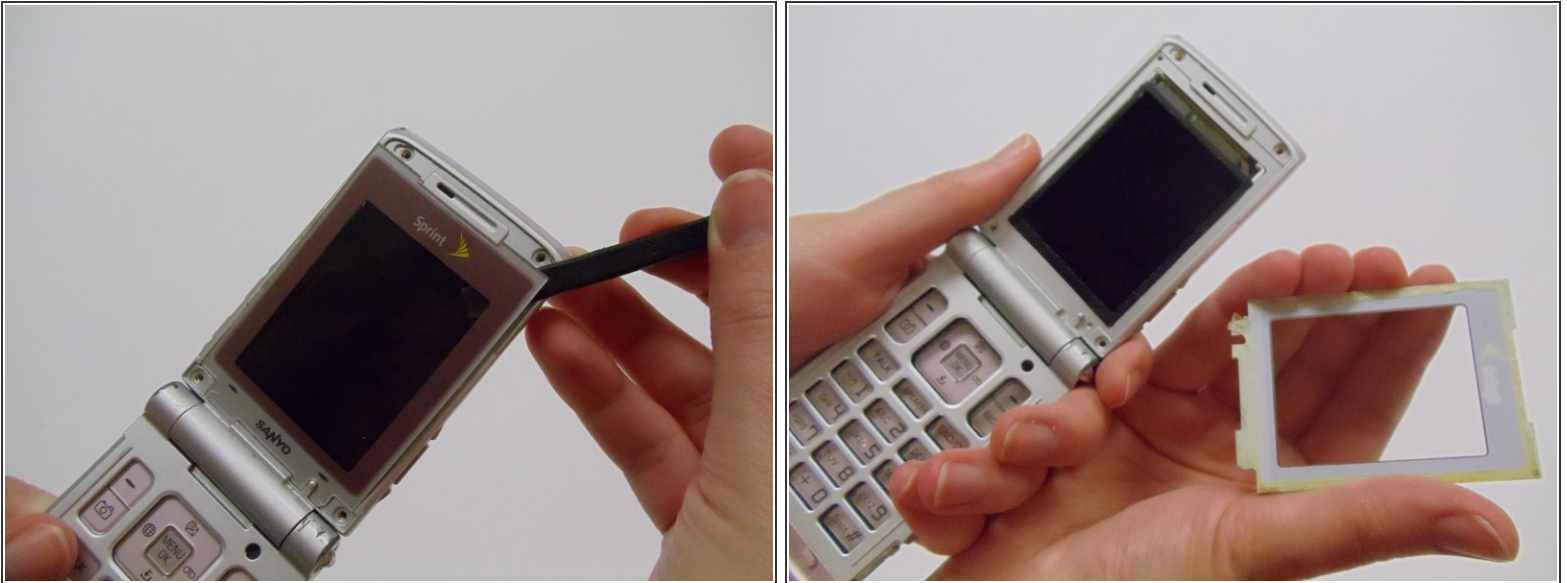

- Carefully pry the screen protector off the phone using the flat end of the spudger.  
 This will require a bit of force as the back of the screen protector is lined with an adhesive material.
- Once free from the adhesive, pull the screen protector away from the phone.

### Step 4 — Front Case

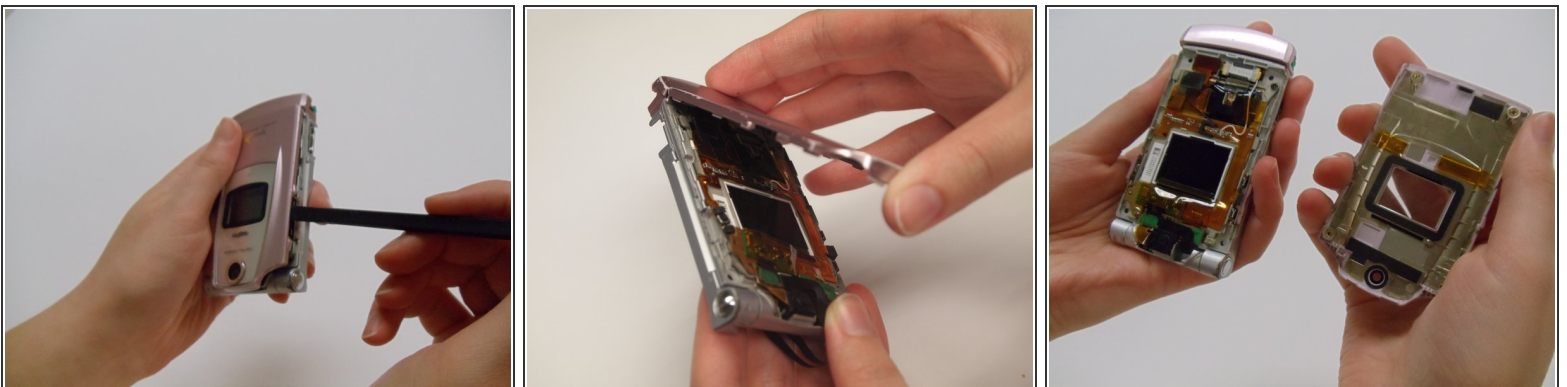

- Use the spudger to pry off the front case from the left and right sides of the device.
- Once it has popped off, pull the casing apart with fingers.

To reassemble your device, follow these instructions in reverse order.