

Schwinn Beach Cruiser Pedals Replacement

Removal and replacement of Schwinn Beach Cruiser bicycle pedals.

Written By: Joshua Lura



INTRODUCTION

This a basic step-by-step guide for pedal replacement on a Schwinn Beach Cruiser. You will need the required tools in order replace the pedals. Gloves are optional, but if you do not want to risk inuring your hand, you may want them.

- This repair is only needed if break your existing pedals or if you just want a different look.
- The threads on the pedals may differ based on make and model.
- Make sure you are placing the correct pedal on its designated side. They should be labeled with an "L" for left and an "R" for right.



TOOLS:

- Leather Work Gloves (1)
- 15mm wrench (1)
- Groove Joint Pliers (1)



PARTS:

• Bicycle Pedals (1)

Step 1 — Pedals



 Find a clean and open space to perform the steps for the Schwinn Beach Cruiser.

Step 2




- Prop the bicycle up using a kickstand.
- if there is no kickstand, just lay the bicycle down on its side.

Step 3



 Holding the pedal with one hand, use a wrench on the base where it attaches to the crank and turn counter-clockwise.

Step 4

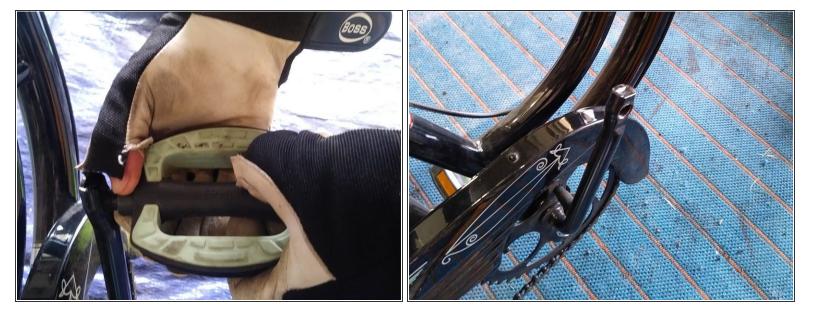

Using your hand, finish unscrewing the pedal.

Step 5



 Using your fingers, begin screwing in the new pedal in a clockwise motion.

Step 6







- Using your wrench, finish tightening the pedal.
- Repeat Steps 3-6 for the opposite pedal.