



Toshiba Satellite L45-S7423 Battery Replacement

This guide will show the user how to remove and install a battery for the Toshiba Satellite L45-S7423.

Written By: Stephen Sippel




This document was generated on 2020-11-19 08:57:47 PM (MST).

INTRODUCTION


The removal of the battery is one of the easiest tasks on the Toshiba Satellite L45-S7423. With the simple slide of a switch the user can remove that battery to allow for replacement. It is strongly recommended to remove the battery before conducting repairs on the laptop.

Step 1 — Battery

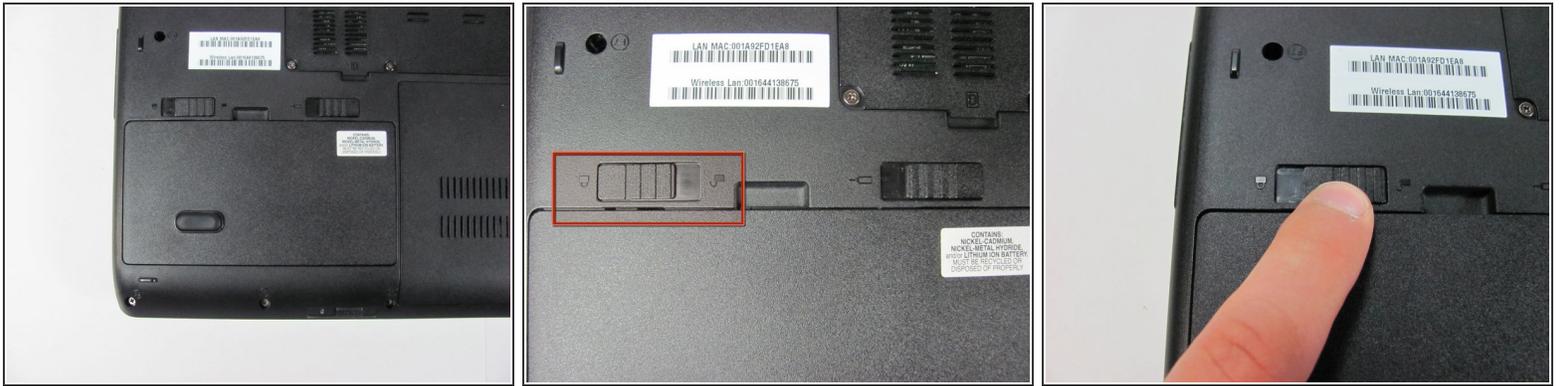

- Make sure the battery lock switch is switched to the unlocked position.
- The battery is unlocked when the battery lock switch is slid to the side with an image of an unlocked lock.

Step 2

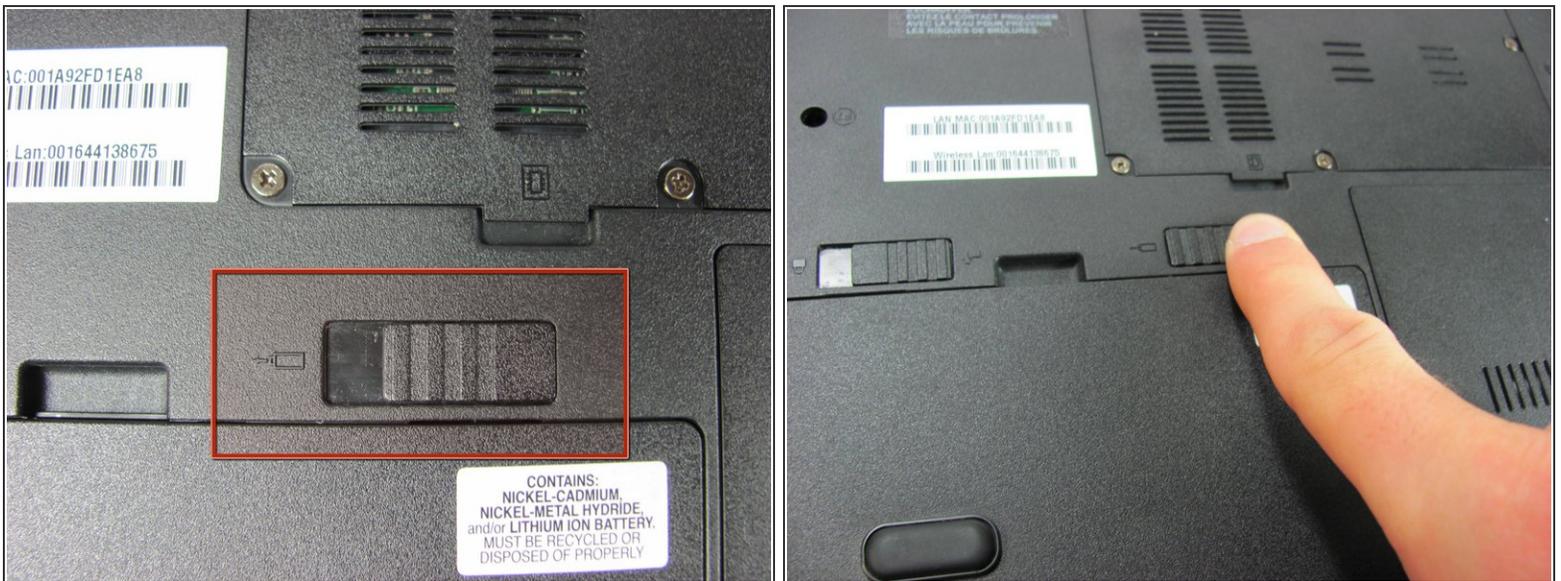

- Slide the battery release switch to the left.
- ⓘ The switch is spring loaded, so you must hold the switch in place while removing the battery.

Step 3



- Using a finger, lift up the battery.
- ☑ The battery release switch must be held in place.

To reassemble your device, follow these instructions in reverse order.