2010 Toyota Corolla Headlight Replacement

User will be able to replace their broken headlight bulb

Written By: Shahbaz Khan

© iFixit — CC BY-NC-SA

INTRODUCTION

Are you having troubles with your headlights and needs to be replaced?

Whether it might be the cause of extreme weather, a burnt-out bulb, or a blown fuse.

Follow these 6 easy steps to have them replaced and running again.

Please note: This guide will only work if the problem is with the bulb and not the wiring. If the problem is with the wiring, please consult your mechanic.

(A good indication of a burnt-out bulb is to see if one headlight is working and the other is not. If both are not working, It could mean there is something wrong with the wiring and not the bulbs)

TOOLS:

- Fingers (1)

PARTS:

- 9006 Halogen Headlight Bulb 2 Pack (1)

© iFixit — CC BY-NC-SA

Step 1 — Headlight Bulb

- Find the handle to open the Bonnet. It will be located at the bottom left-hand side of the driver's seat.
- Pull the handle towards yourself and you will see the bonnet pop up a small bit.

Step 2

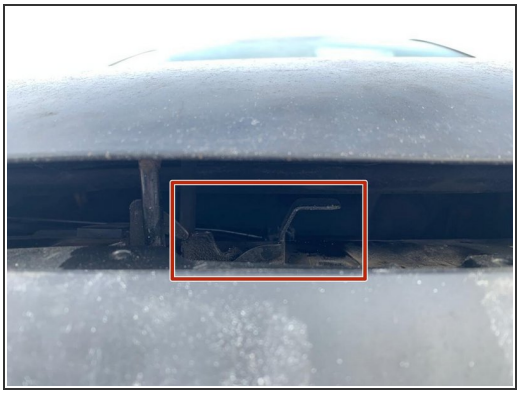
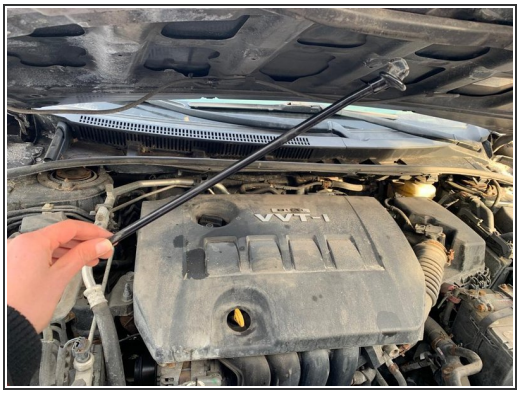

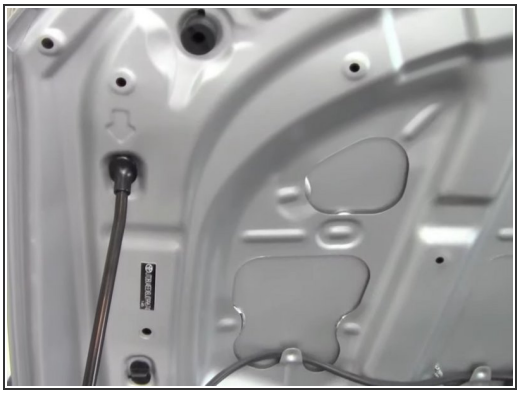

- Move the handle to the left in order to release the hood completely.
- Locate the black stick and insert it in the bonnet hole.

© iFixit — CC BY-NC-SA

Step 3

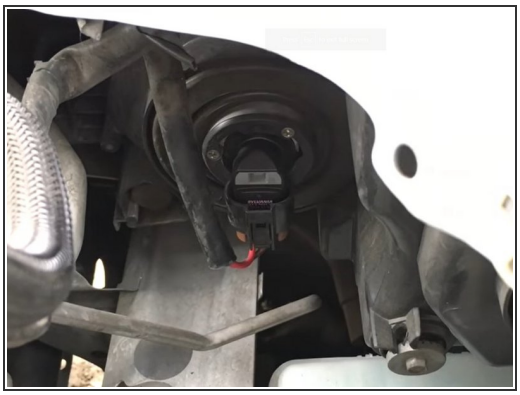

- On the left, upper side of the hood, you can locate the bulb
- Twist it halfway counter-clockwise and pull it out.

Step 4

- Push the hook down to detach the bulb from the wire.

© iFixit — CC BY-NC-SA

Step 5

- Replace it with a new bulb and turn it clockwise to have it fixed permanently.

  If the bulb is not turned clockwise, the bulb will come off and become loose again.

Step 6

- Turn on the lights to make sure both headlights are working :)

To reassemble your device, follow these instructions in reverse order.

© iFixit — CC BY-NC-SA