


# **Dell XPS 15 9510 Headphone Jack Replacement**

Written By: Austin Sa



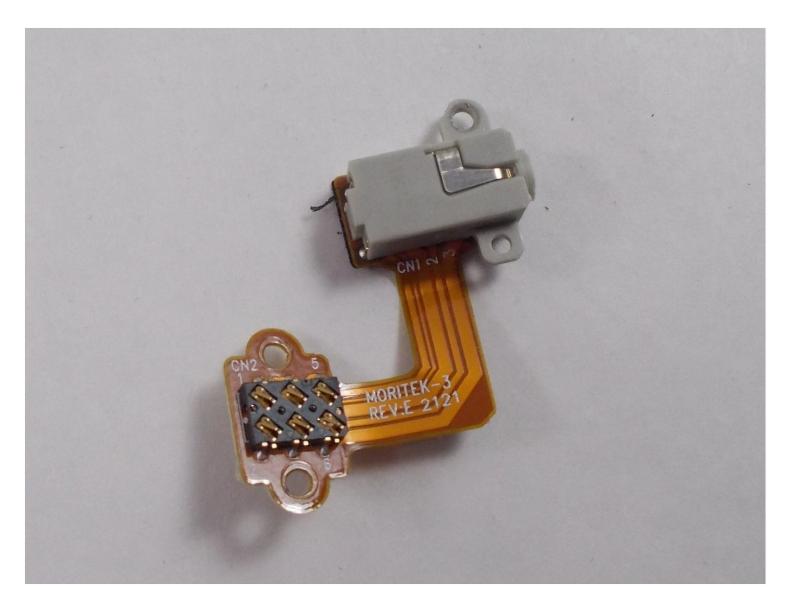


Spudger (1)
T5 Torx Screwdriver (1)

## PARTS:

Dell XPS 15 9510 Headphone Jack (1)

## Step 1 — Rear Panel

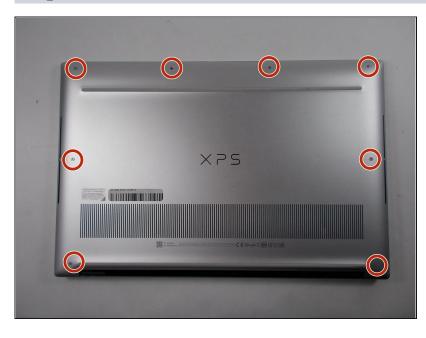


- (i) Make sure the laptop is powered off and unplug all cables before beginning any repair.
- Remove eight 3 mm screws from the underside of the case using a T5 Torx screwdriver.

#### Step 2



- ⚠ The metal case of the XPS 15 9510 is extremely sharp, so be careful not to run your fingers along the edge when disassembling the laptop.
- Wedge the case apart with a nylon spudger.
- i If the plastic one isn't possible to insert, use the metal spudger to carefully create a small gap first.
- Slide spudger along each side of the laptop


#### Step 3

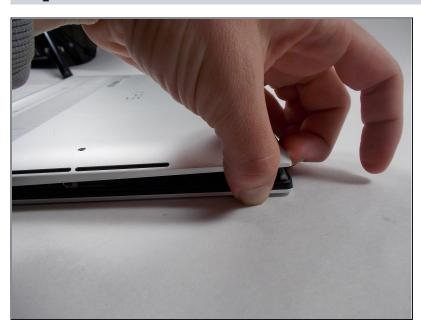

- ⚠ The metal case of the XPS 15 9510 is extremely sharp, so be careful not to run your fingers along the edge when disassembling the laptop.
- Lift the back panel of the laptop off and set it aside.

## Step 4 — Headphone Jack



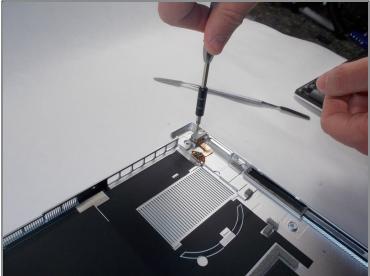

• Remove three screws connecting the headphone jack to the back panel using a Phillips #00 screwdriver.

## Step 5



 Carefully lift the headphone jack off the removed panel.

To reassemble your device, follow these instructions in reverse order.