

# **CD/DVD Drive Replacement**

This will guide you in replacing the CD/DVD Drive of a Sony Vaio VPCF 132FX

Written By: trickster





• Pro Tech Toolkit (1)

## Step 1 — Battery



Remove all wires then flip the laptop

## Step 2






Remove the battery


### Step 3 — CD/DVD Drive



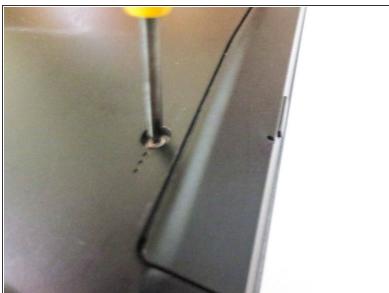

Remove the 2 screws holding the CD/DVD Drive.

### Step 4

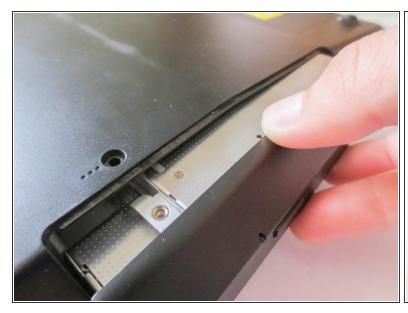



Slide the CD/DVD Drive out.

To reassemble your device, follow these instructions in reverse order.