



Mac Pro Late 2013 Fan Assembly Replacement

Prereq only.

Written By: Andrew Optimus Goldheart



INTRODUCTION

Prereq only.

TOOLS:

- [TR10 Torx Security Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [Spudger](#) (1)
 - [TR8 Torx Security Screwdriver](#) (1)
-

Step 1 — Fan Assembly



- Remove five 5.1 mm T10 Torx screws from around the outer perimeter of the fan assembly.

Step 2



i The fan assembly is attached to the rest of the computer by two cables on the IO board side.

- Tilt the assembly up away from the IO board.

! Do not try to remove the fan assembly yet, as it is still attached by two cables.

Step 3



- While supporting the fan assembly with one hand, loosen the two T8 captive screws in the fan cable bracket.


⚠ These screws are captive in the Mac Pro. Do not try to remove these screws from your Mac Pro.

Step 4




- Use a pair of tweezers to pull the fan cable bracket away from the fan assembly.

Step 5

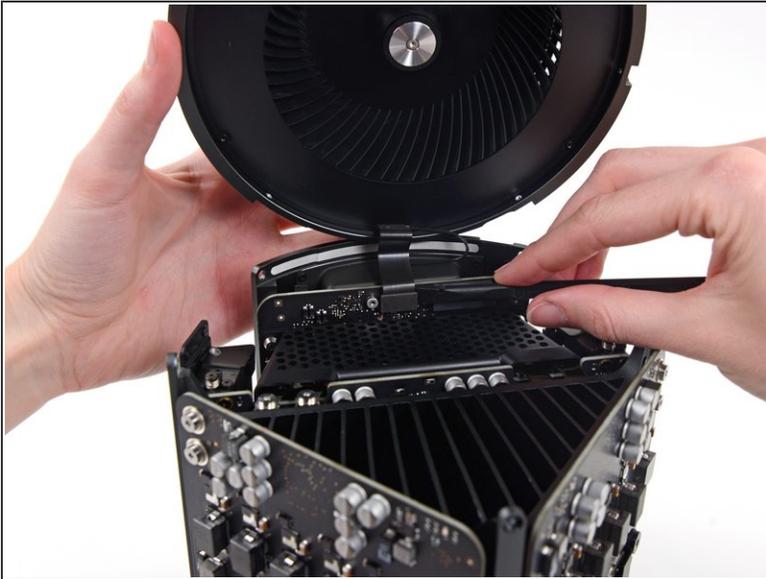

- Use the flat end of a spudger to disconnect the fan assembly ribbon cable from the IO board.

Step 6

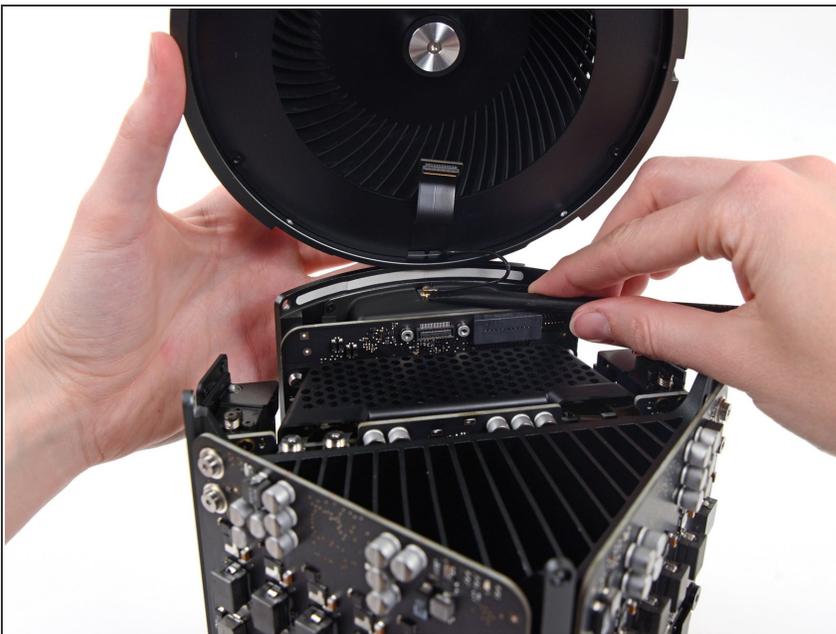

- Disconnect the fan assembly antenna cable from the IO board.
- Remove the fan assembly from the Mac Pro.

To reassemble your device, follow these instructions in reverse order.