



Sony ECM-MS907 Battery Replacement

Replacing the battery

Written By: Kefaya



INTRODUCTION

Buy a new AA battery of any brand you like.

TOOLS:

- [AA battery pack](#) (1)
-

Step 1 — Battery




- Take off the windshield from the top of the microphone and place aside. The bottom part of the microphone is detachable. In a clockwise motion, begin unscrewing the bottom of the microphone from its base.

Step 2



- Pull off the bottom base of the microphone. The microphone should now be in two pieces. After the bottom base is removed, the battery should now be visible.

Step 3

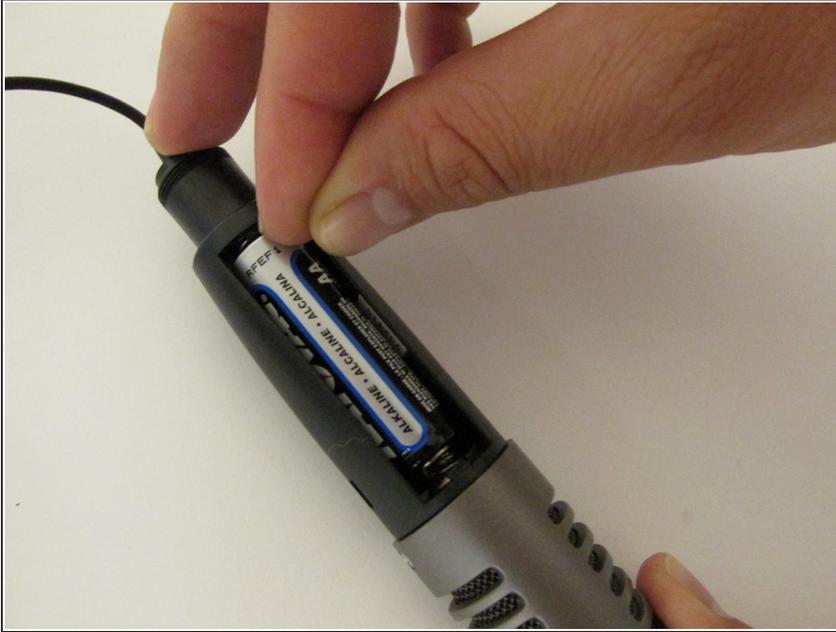

- To remove the battery, push it upward into the aluminum spring. This will loosen and free the battery.

Step 4



- Select a new, (AA) battery to insert into the microphone. Match the (+) and (-) sides of the battery to the matching symbols inside the microphone.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-26 10:33:45 AM (MST).

