



# Disassembling HP Pavilion g7-2275dx Hard Drive

This guide will show you how to remove the hard drive from your laptop.

Written By: John Sutton



 **TOOLS:**

- [Phillips #1 Screwdriver](#) (1)
  - [Anti-Static Wrist Strap](#) (1)
-


## Step 1 — Battery



**⚠** Working on your device while it is turned on may result in electric shock. Make sure to shut down and unplug your device before you begin.


- Flip your device over so the bottom panel is facing up.

## Step 2

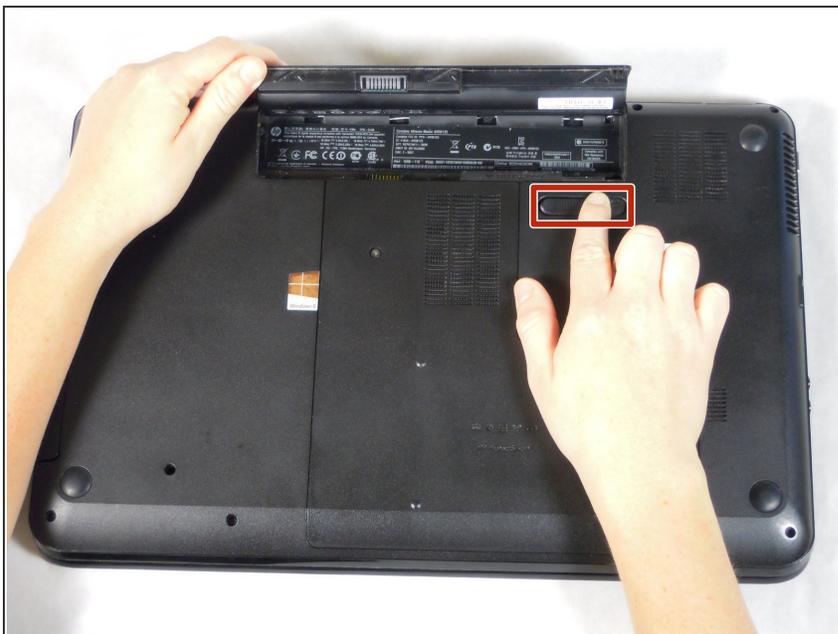

- The battery is held in by a latch in the front and tabs in the back.
- Slide the lock switch left, towards the center of the computer.
- Lift up the battery, rotating it up and away from you, then pull it out.
- ☑ To put the battery back in, line it up with the battery bay and the holes for the tabs. Then let the battery rotate towards you and press down until the latch engages and you hear a click.

### Step 3 — Disassembling HP Pavilion g7-2275dx Back Panel

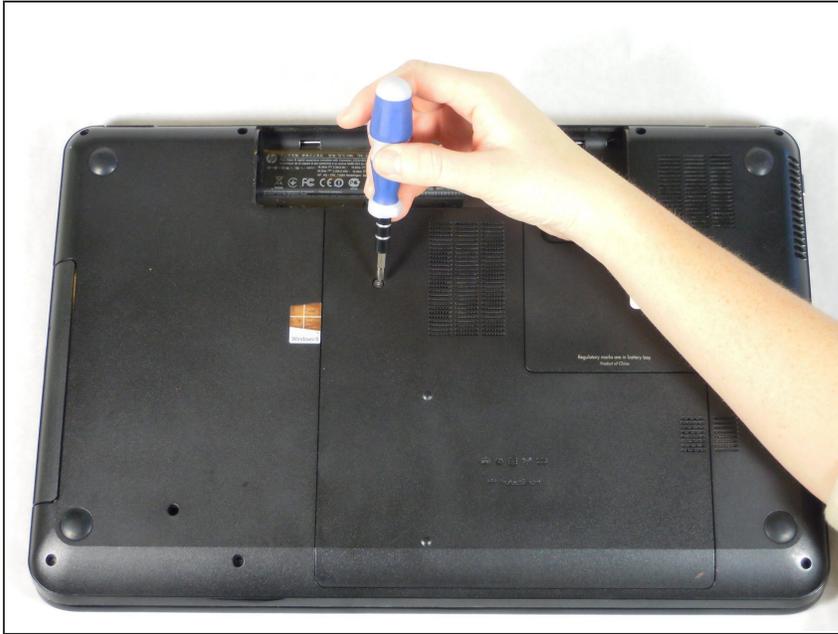


- Unscrew one Phillips #1 screw from the back panel.
- ⓘ The screw is on a spring and attached to the panel. It will pop up, but will not separate from the back panel.

### Step 4



- Slide the back panel down and pull it up.


## Step 5 — Hard Drive

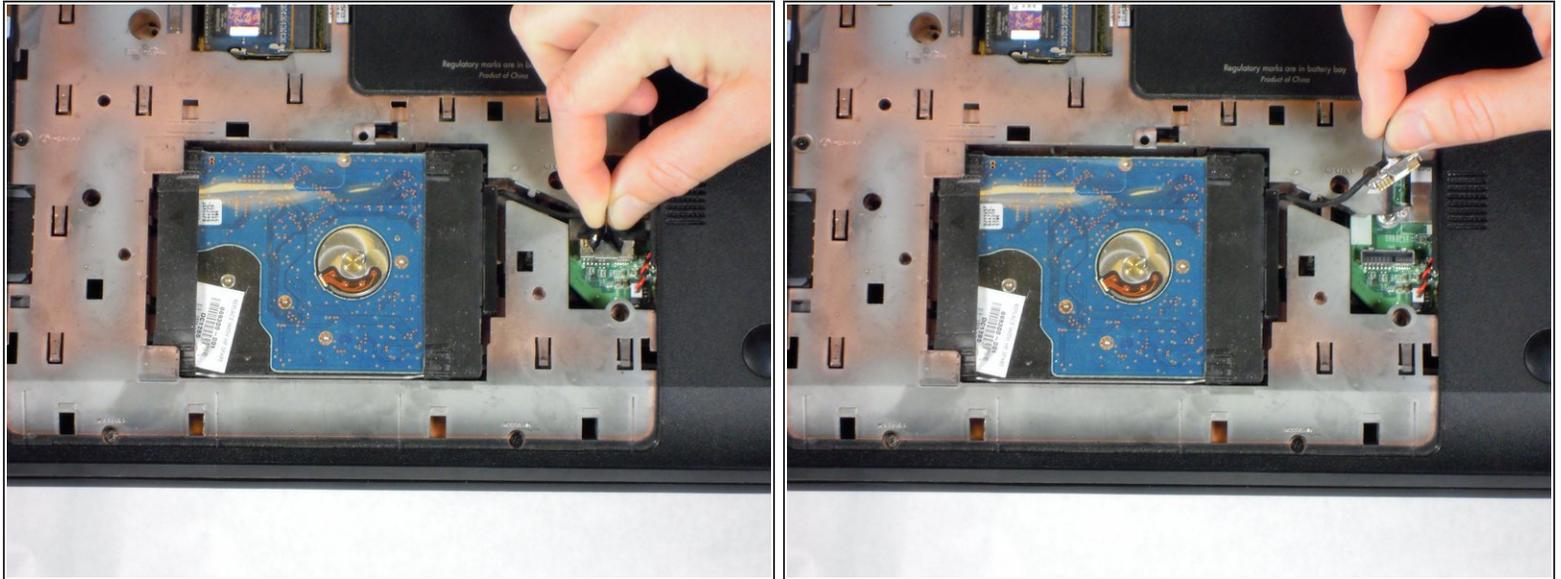

**!** Static electricity can damage the components of your laptop. Make sure you are wearing an anti-static bracelet before you touch the hard drive.

- Using the black tab on the connect and/or a prying tool, lift up to disconnect the black hard drive cable from the green circuit board.
- Pull the black cable up and out of the back panel. This will make taking the hard drive out much easier.

## Step 6

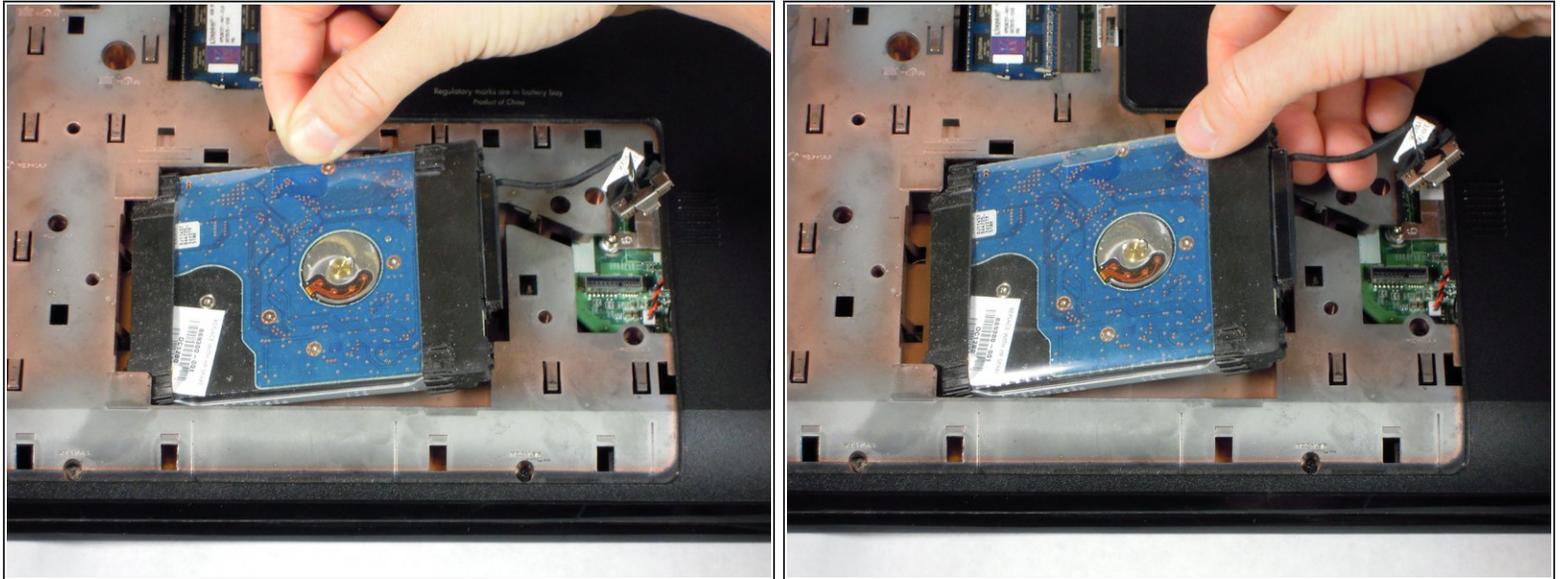

- Gently pull up on the plastic tab attached to the hard drive.
- Pull the hard drive up and to the right to remove it completely from the laptop.

To reassemble your device, follow these instructions in reverse order.