



Lenovo IdeaTab A1000L Power and Volume Buttons Replacement

Who knew that these little buttons could be so powerful.

Written By: Lauren Pluim



INTRODUCTION

Here are some easy to follow steps on how to replace your tablet's power and volume buttons.

TOOLS:


- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Power and Volume Buttons




- ⓘ Be sure to power off your device before taking it apart.
- Locate the small tab, marked with the lock symbol on the upper right hand of your IdeaTab above the volume control buttons. Use your fingernail to gently loosen this tab.
- Use your Phillips #000 screwdriver and remove the 3.5mm screw and put it aside.
- Using your blue, plastic opening tool, begin to gently pry the back panel away from the front panel starting by where the screw was.

Step 2

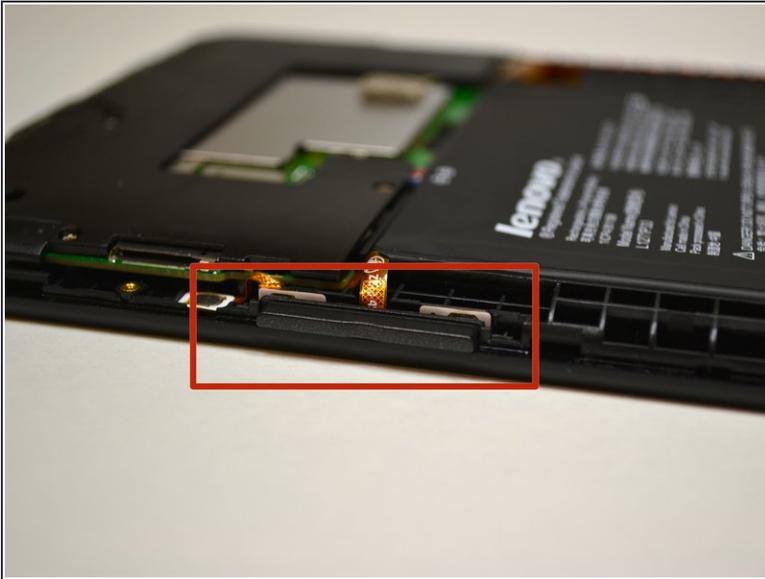

- Locate the volume control button on the right hand side of the tablet.
- Now, gently slide the volume button upward to remove.

Step 3

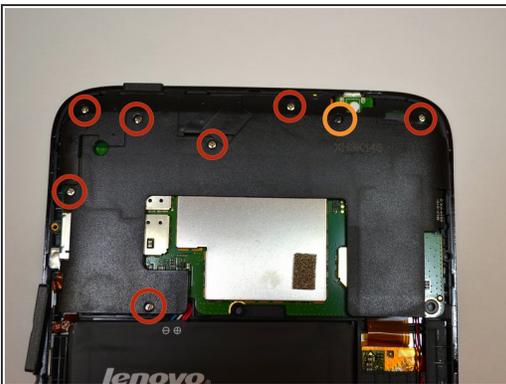

- Locate the black back plate, above the battery.
- Using a Phillips #000 screwdriver remove the 7 silver 3.5mm screws from the back plate.
- Next with the same screwdriver remove the black 4.1mm screw.
- Gently remove the back plate from the device.

Step 4



- Locate the power button on the top right hand corner of your device.
- Gently slide the button up to remove.

To reassemble your device, follow these instructions in reverse order.