




Lenovo IdeaPad N586 Optical Drive Replacement

Lenovo IdeaPad N586 optical drive replacement

Written By: Christopher

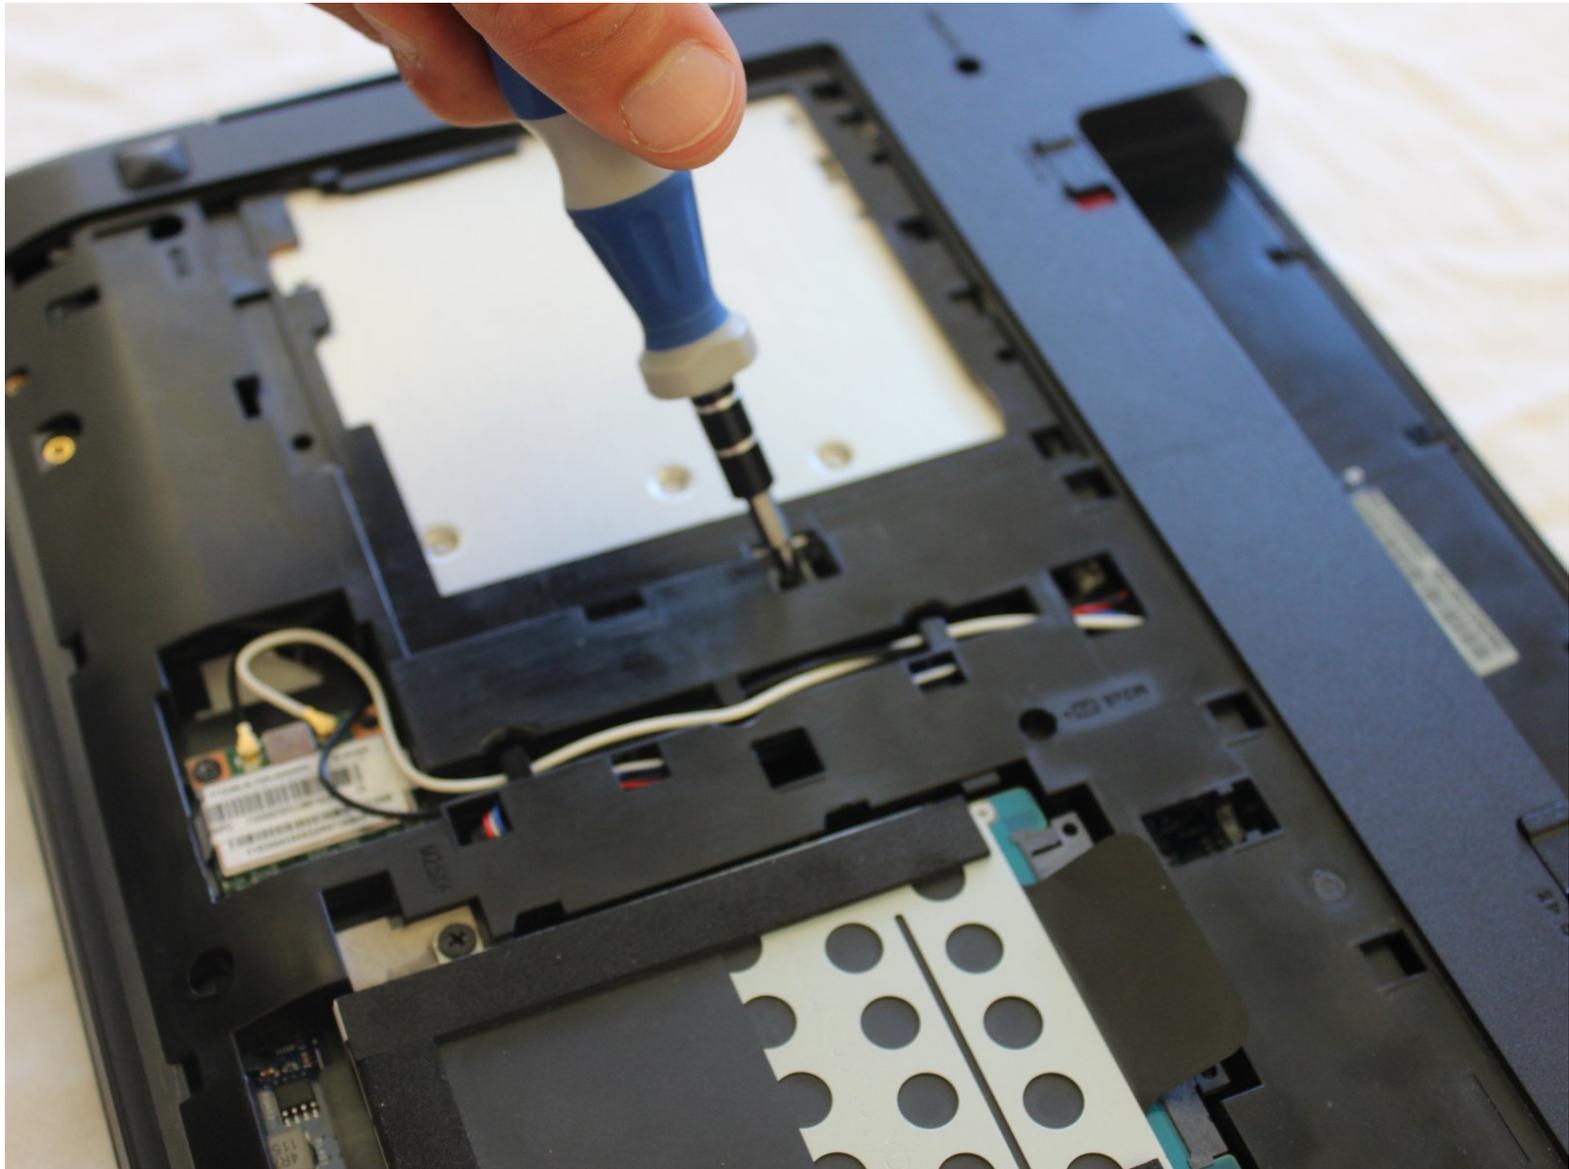

INTRODUCTION

Can't watch movies? Change your optical drive with this guide!

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



- To unlock the battery, flip the laptop over so that the bottom is facing upward. Then unlock the left clip by pushing the clip to the left.

Step 2

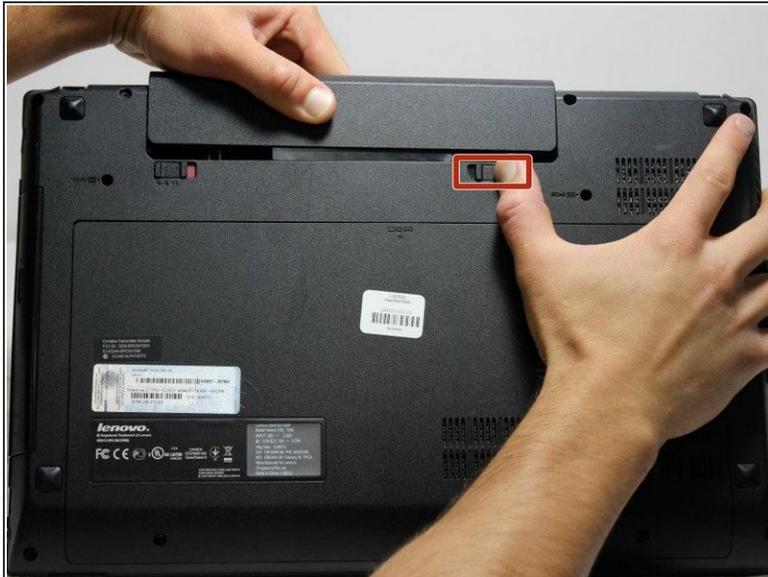


- Now push the right clip to the right and hold it while using your other hand to pull the battery out.

Step 3 — Back Panel




- Remove the two screws highlighted.

Step 4

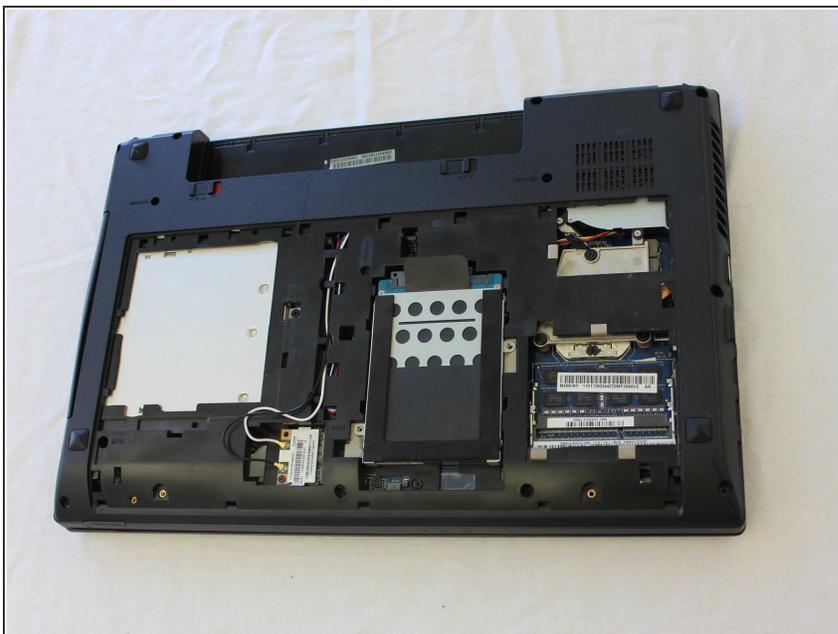


- This is the back of the laptop with the cover removed.

Step 5 — Optical Drive

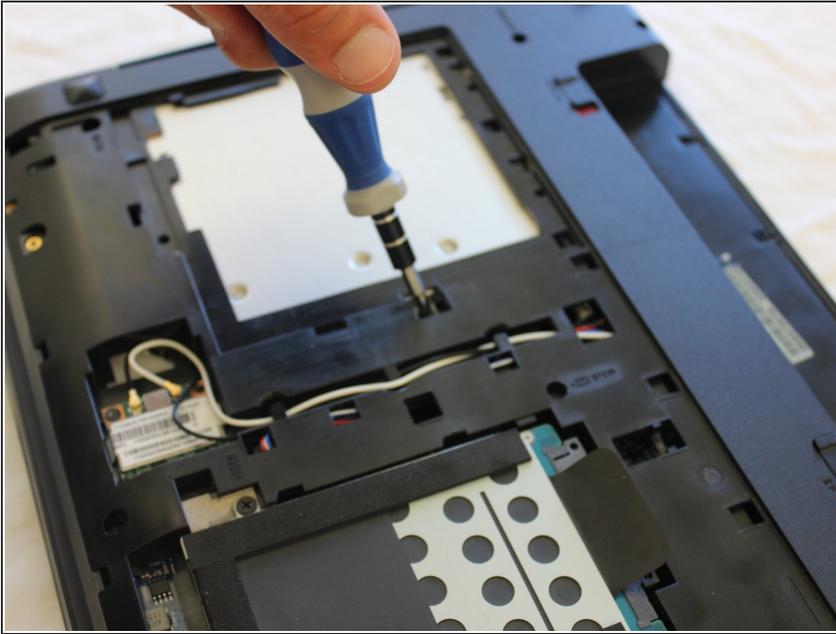

- Locate and remove the single screw right of the optical drive

Step 6

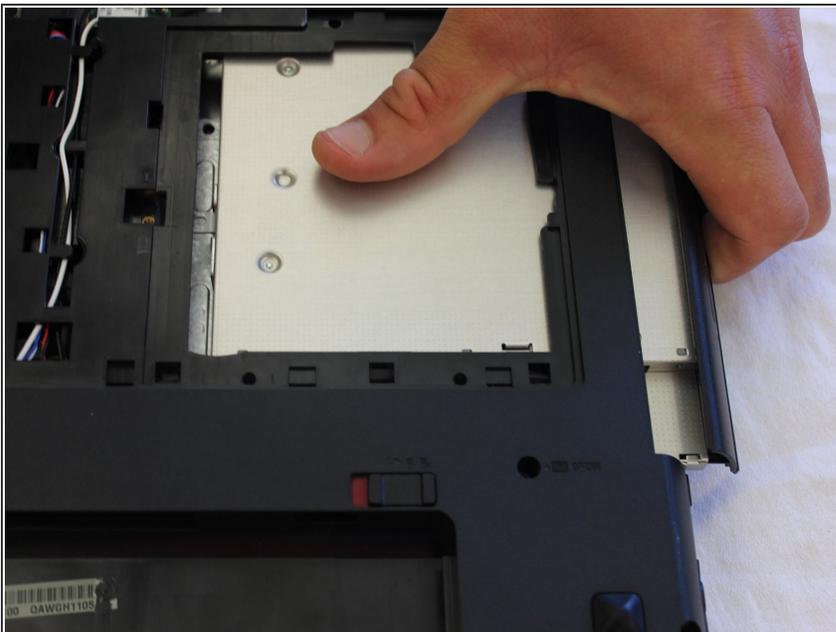

- Optical Drive should slide out easily with one thumb's effort.

To reassemble your device, follow these instructions in reverse order.