



Acer Iconia B1-711 Rear Battery Cover Removal

Written By: ZFix



INTRODUCTION

Acer Iconia B1-711 - inside view.

How to remove Back / Battery cover.

[Please SUBSCRIBE to my channel ツ](#)

[video: http://youtu.be/IQ7IExK_GxI]

TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Acer Iconia B1-711 Rear Battery Cover Removal




- Start opening from the micro USB connector.

Step 2




- Insert wisdom here.

Step 3

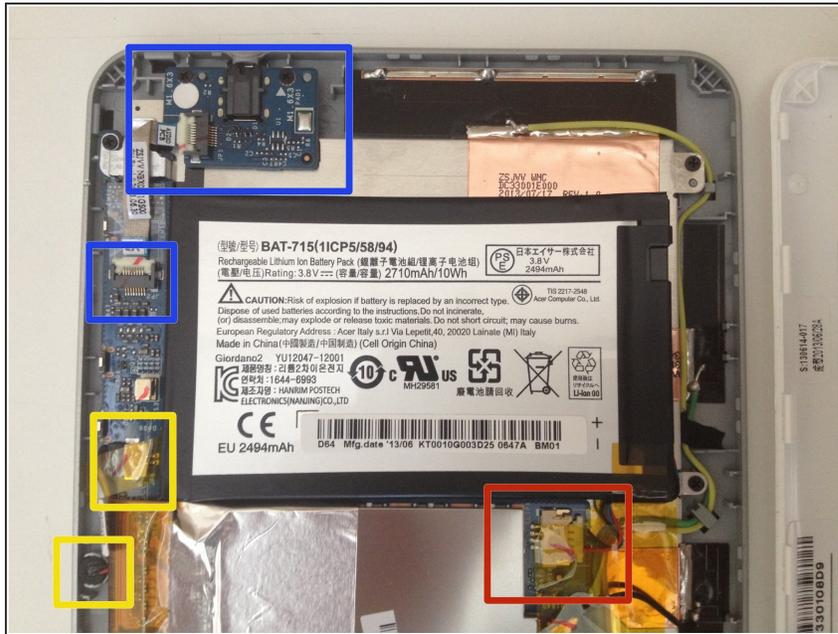

- Audio Jack Connector module
- Microphone
- Battery Connector

Step 4

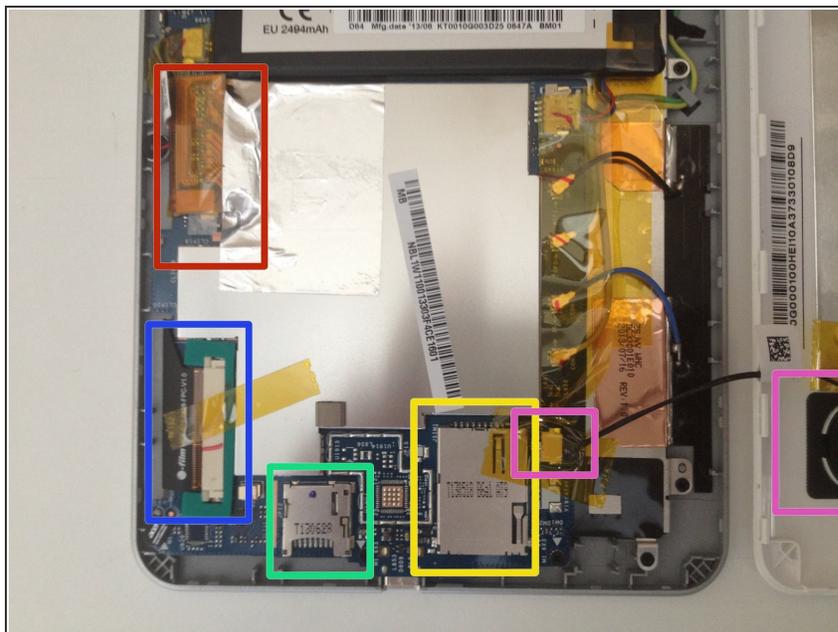

- LCD Display Cable Connector
- Touchscreen Cable Connector
- Micro SD Card Slod
- SIM Card Slot
- Loudspeaker
- .

[Please SUBSCRIBE to my channel ツ](#)

To reassemble your device, follow these instructions in reverse order.