

Acer Aspire One D150 Hard Drive Replacement

This guide will show you how to upgrade the hard drive in your Acer Aspire One.

Written By: Dante Bertana





- Phillips #0 Screwdriver (1)
- Flathead 3/32" or 2.5 mm Screwdriver (1)

Step 1 — Hard Drive




- Flip computer over, being sure the device is unplugged, powered off, and battery removed.
- Then, locate two screws for hard drive.

Step 2




 Next, loosen both screws and remove plastic door.

Step 3

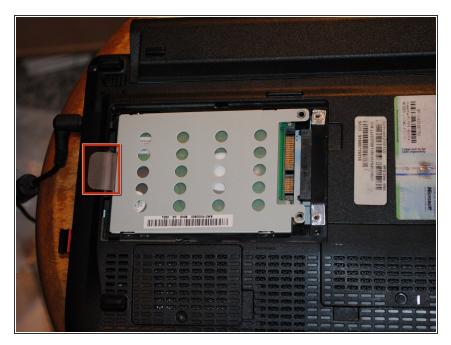


 Grasp translucent plastic tab and pull to the side so hard drive comes free of SATA connectors

Step 4

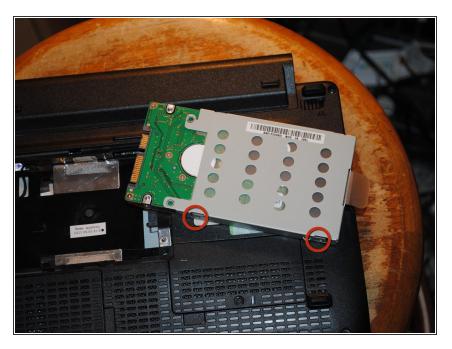

 Remove hard drive from computer and loosen 4 screws that hold it into it's metal housing.

Step 5

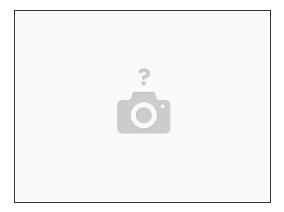

- Buy yourself a larger and/or faster 2.5in hard drive.
- Redo the steps in reverse to reassemble the hard drive.

To reassemble your device, follow these instructions in reverse order.