



# Uniden EXP 371 Teardown

Uniden EXP 371

Written By: Tim Reimer



---

## INTRODUCTION

This guide will help you to completely disassemble your phone in order to perform other repairs.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Uniden EXP 371 Teardown



- Uniden EXP371 900 MHz Cordless Phone.
- 900 MHz Extended Range with One Touch RocketDial/Find Handset Locator and is Desk or Wall Mountable.

## Step 2




- Remove the battery by first pressing down on the rear of the cover and pushing the cover towards the bottom of the phone.
- Next remove the battery by pulling on the connector.

### Step 3



- Next remove the two screws at the bottom of the phone with a PH1 philips screwdriver.
- Now remove the top portion of the case from the bottom. This may be difficult to do with your bare hands. The use of a plastic opening tool may come in handy.

## Step 4

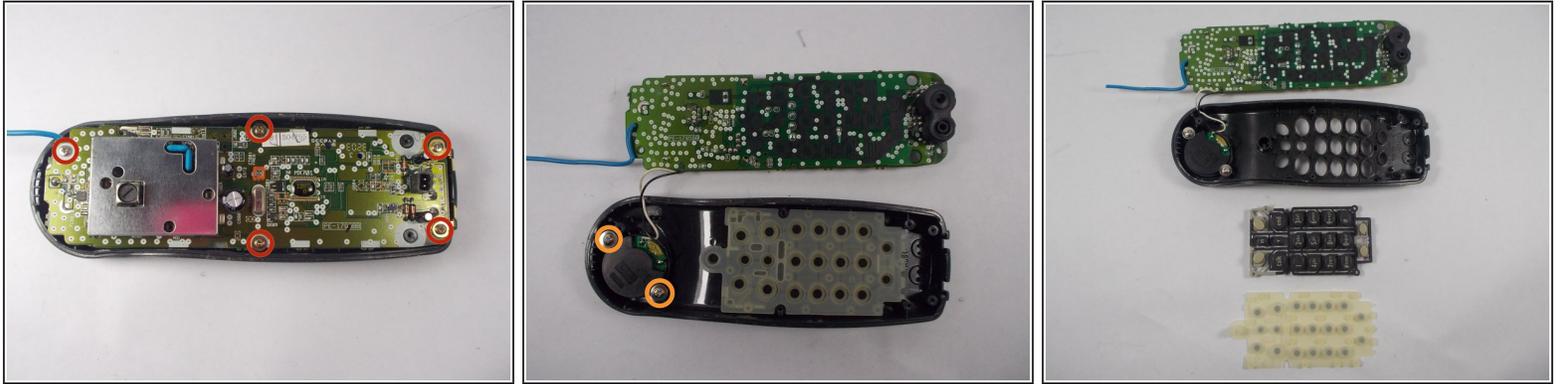

- Your next step is to remove the five screws holding down the motherboard. Use the PH1 philips screwdriver.
- Once you have removed the five screws you may lift the motherboard off of the front case.
- At this point you may also remove the dial pad. It simply lifts off.
- You may also remove the speaker if needed by unscrewing the two screws using the PH1 philips screwdriver.
- The whole phone is now disassembled at this point.

To reassemble your device, follow these instructions in reverse order.