



LG Optimus L7 P705 Display Replacement

LG Optimus L7 P705 Display Replacement.

Written By: Craig Lashley



INTRODUCTION

The following guide explains how to replace the display.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Display



- Insert a plastic opening tool between the seams of the device and pry the back cover away from the phone.
- Remove the battery and simcard.

Step 2




- Remove twelve 3mm screws (with the phillips head 000) around frame and near sim and sd cards.

Step 3




- Remove bottom plate where the charger port is located.

Step 4

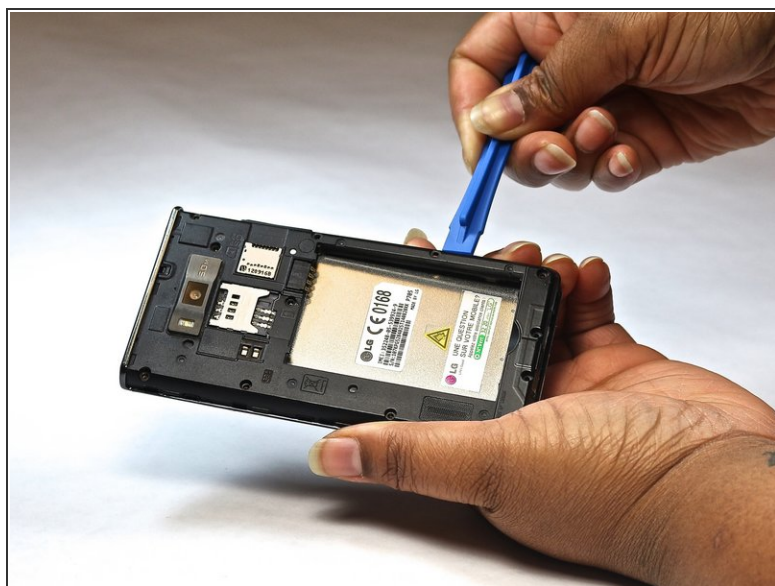

- Insert a plastic opening tool between the seams of the device and apply some pressure to lift off the cover.

Step 5

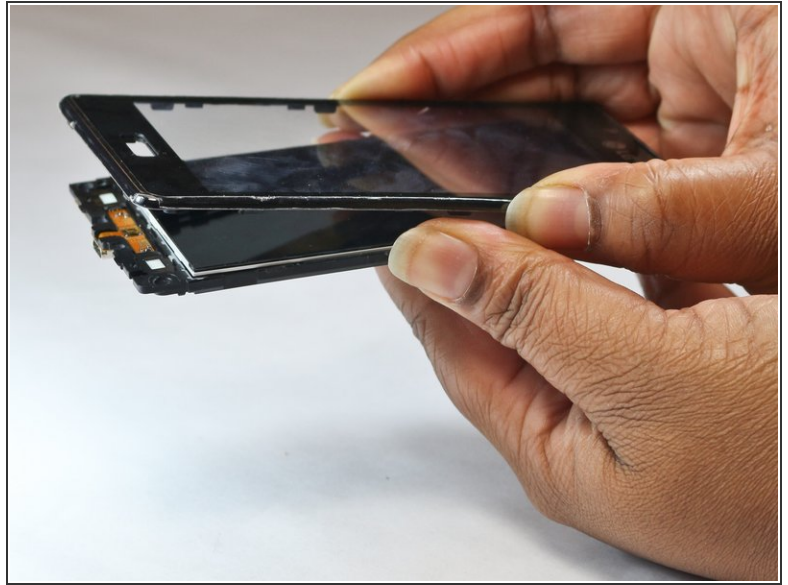

- Flip over to the face of the device.
- Lift off glass screen (display).

To reassemble your device, follow these instructions in reverse order.