




Acer Aspire V5-571 HDD (Hard Disk Drive) Replacement

Acer Aspire V5-571 HDD (Hard Disk Drive) Replacement

Written By: ZFix

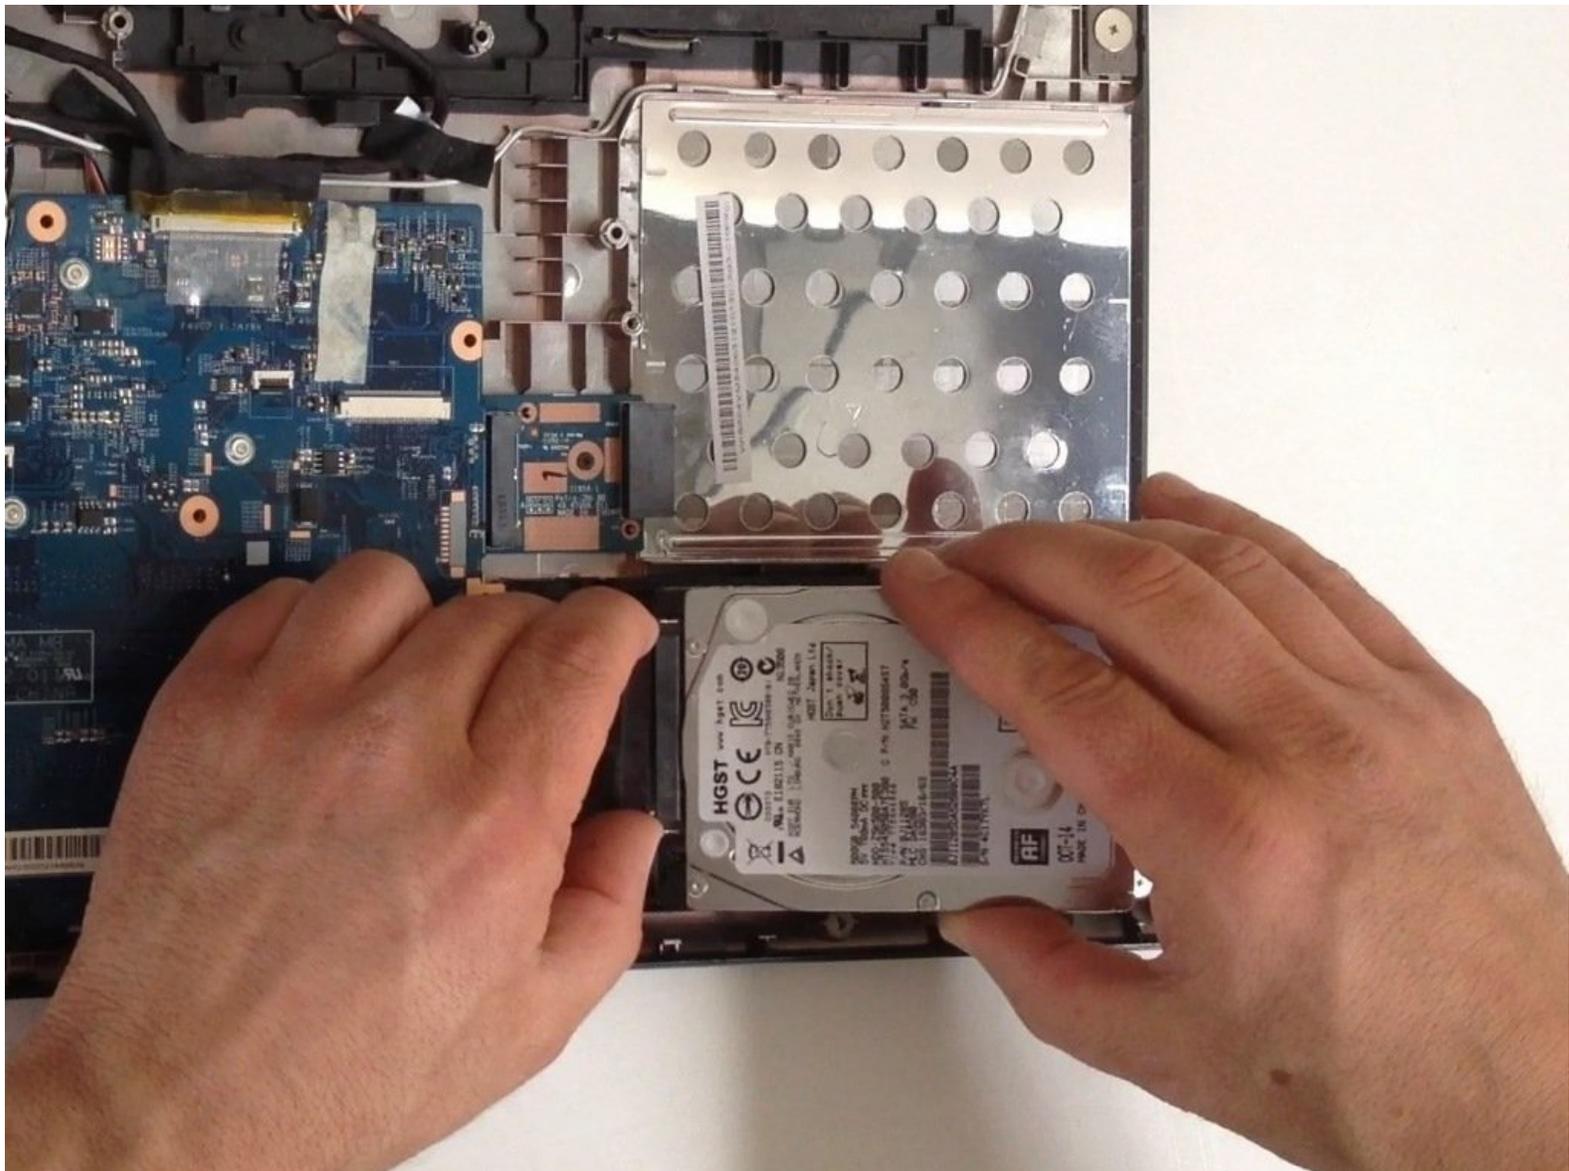

INTRODUCTION

How to replace or upgrade the Hard Drive.

[Please SUBSCRIBE to my channel ツ](#)

[video: <http://youtu.be/mrKPisD7H0U>]



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [Spudger](#) (1)



PARTS:


- [1 TB SSD / Upgrade Bundle](#) (1)
- [250 GB SSD / Upgrade Bundle](#) (1)
- [500 GB SSD / Upgrade Bundle](#) (1)
- [2 TB SSD](#) (1)

Step 1 — Keyboard



- Turn off the laptop and remove the battery.
- Remove two screws securing the Keyboard.
- The Keyboard is held by two locking clips, under the battery. Use the sharp tip of a plastic tool to release the keyboard.


Step 2

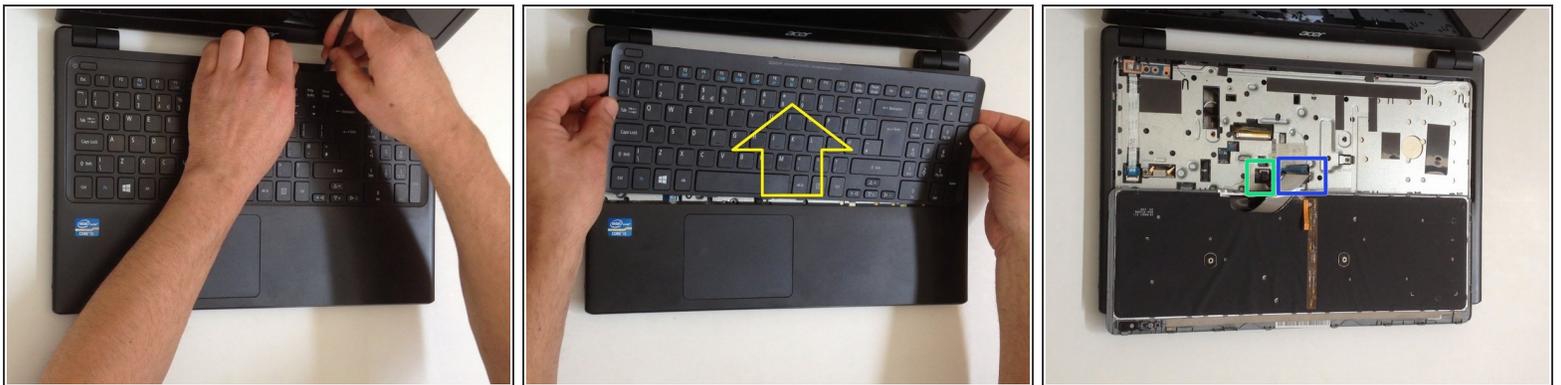

- Remove the Keyboard and disconnect the two flex cables:
 - Keyboard flex cable
 - Keyboard Light flex cable

 [Please SUBSCRIBE to my channel ツ](#)

Step 3 — Upper Cover

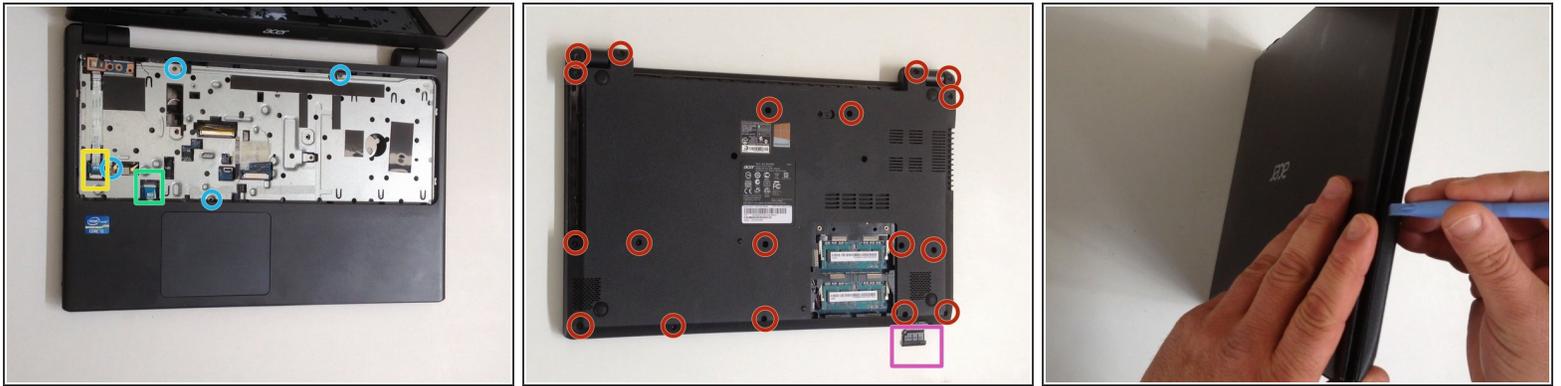

- Remove 4x phillips screws and disconnect:
 - Power On button flex cable
 - Touch pad flex cable
- Remove 18x Phillips screws from the bottom cover.
- Remove any memory SD Card from the Card reader.
- Start opening with a plastic opening tool.

Step 4



- Carefully separate the upper cover and remove it.

Step 5 — HDD (Hard Disk Drive)



- Gently remove the HDD and disconnect the SATA cable from it.
- [Please SUBSCRIBE to my channel ツ](#)

To reassemble your device, follow these instructions in reverse order.