

# MacBook Air 11" Early 2015 I/O Board Cable Replacement

Replace the I/O Board Cable in your MacBook Air 11" Early 2015.

Written By: Sam Goldheart



This document was generated on 2020-11-15 12:17:50 PM (MST).

#### **INTRODUCTION**

Remove or replace the I/O board cable.



# **TOOLS:**

- P5 Pentalobe Screwdriver Retina MacBook Pro and Air (1)
- Spudger (1)



# **PARTS:**

 MacBook Air 11" (Mid 2013 to Early 2015) I/O Board Cable (1)

#### Step 1 — Lower Case




- Shut down and close your computer. Lay it on a soft surface top-side down.
  - Remove the following ten screws:
    - Two 8 mm 5-point Pentalobe screws
    - Eight 2.5 mm 5-point Pentalobe screws
- i The special screwdriver needed to remove the 5-point Pentalobe screws can be found here.

# Step 2




 Wedge your fingers between the display and the lower case and pull upward to pop the lower case off the Air.

#### **Step 3** — **Battery Connector**

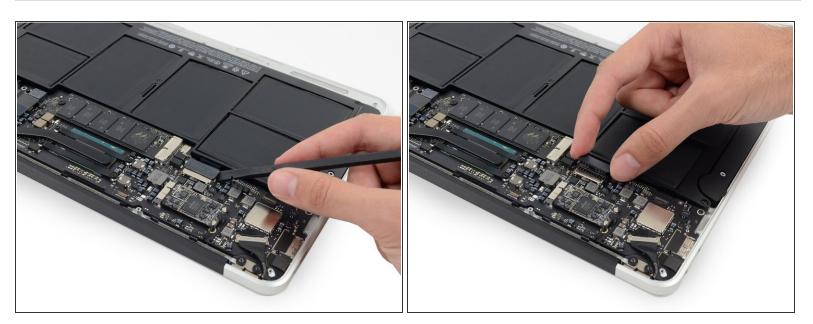

- In this step you will disconnect the battery to help avoid shorting out any components during service.
- Use the flat end of a spudger to pry both short sides of the battery connector upward to disconnect it from its socket on the logic board.
- Bend the battery cable slightly away from the logic board so the connector will not accidentally bend back and make contact with its socket.

# Step 4 — I/O Board Cable

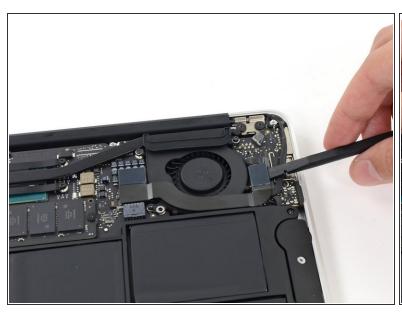



 Use the flat end of a spudger to pry the left and right I/O board cable connectors up off their respective sockets on the I/O board.

# Step 5



Lift and remove the I/O board cable.

To reassemble your device, follow these instructions in reverse order.