




Uniden D1688 Base Replacement

Detailed summary of how to disassemble the base of the Uniden D1688.

Written By: justin

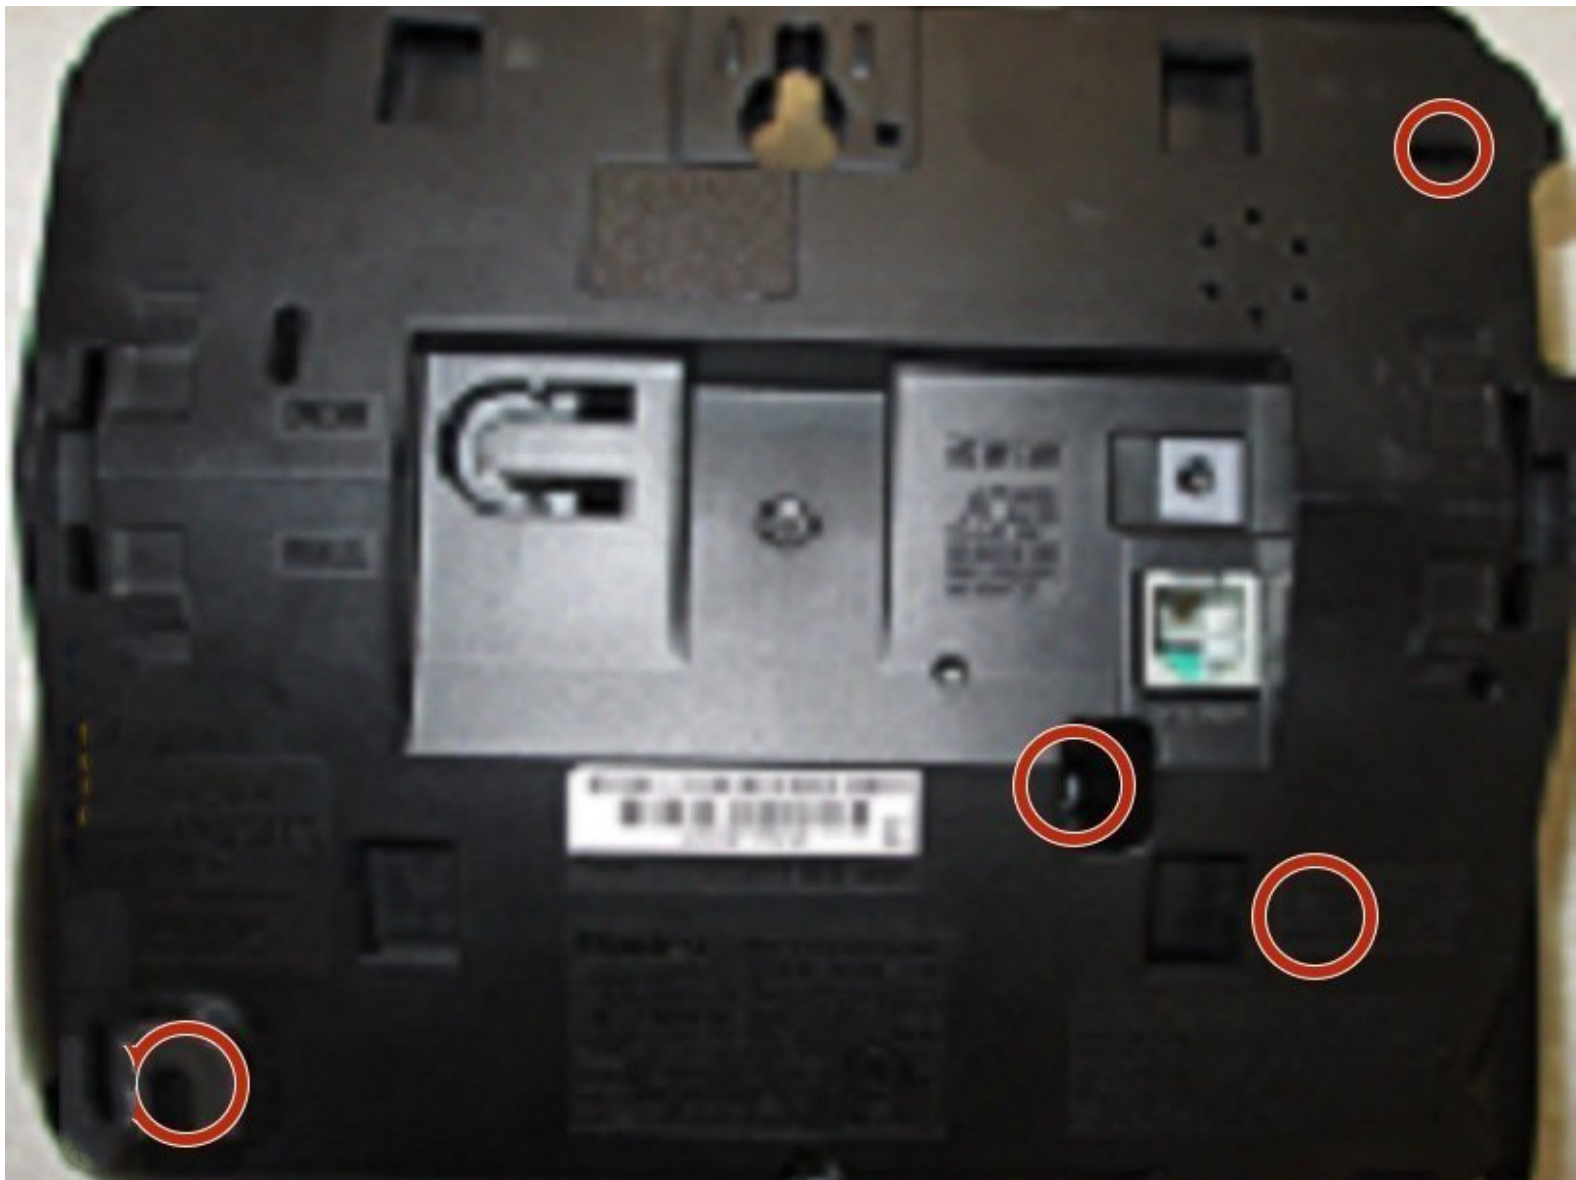

INTRODUCTION

In this guide, you will learn how to disassemble the the base of Uniden D1688. You will learn how to use the spudger to open the case.



TOOLS:


- [Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Uniden D1688 Base Replacement



- Unplug the phone from the base by detaching the RJ-11 plug.
- Flip the base upside down, and use the Phillips #01 screwdriver to unscrew the seven screws (Head size: 5.11mm, length: 8.6mm) on the underside of the base.

Step 2

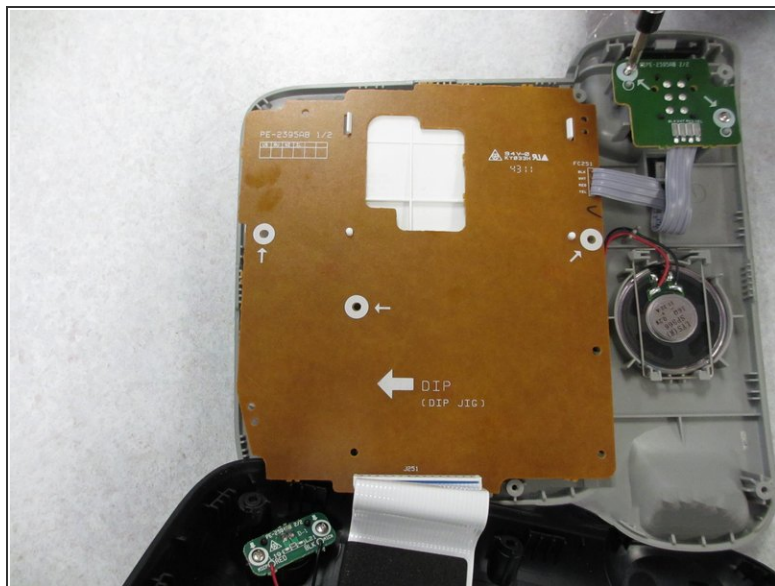

- Using the spudger, separate the top shell of the base from the bottom shell from the base.
- ⚠ Use care when separating the base so the ribbon cable between the top shell circuit board and the bottom shell circuit board is not damaged!
- Lift the top shell off the bottom, and you have successfully opened the phone base.

This document was generated on 2020-11-28 04:18:38 AM (MST).

To reassemble your device, follow these instructions in reverse order.