




HP Pavilion dv5000 RAM Replacement

If your memory is full or having memory...

Written By: Thanh Nguyen

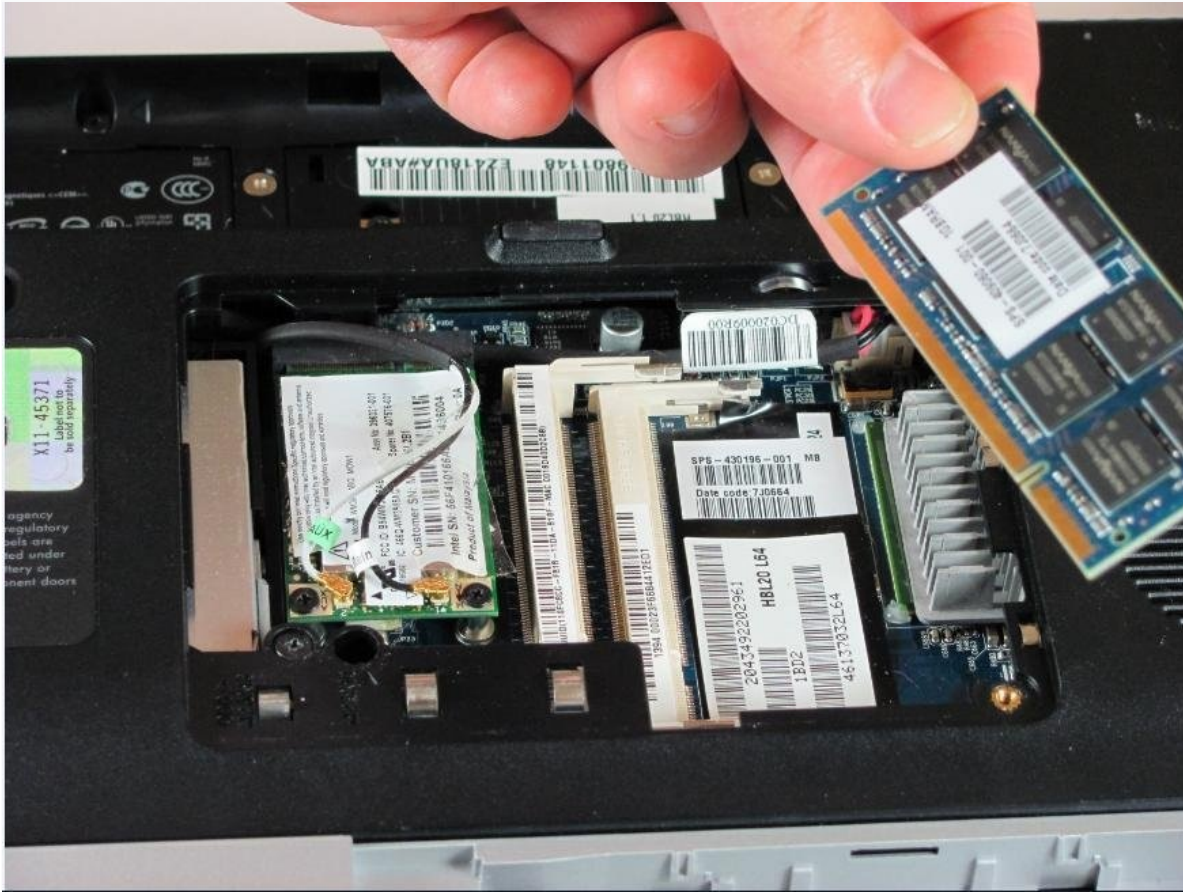

INTRODUCTION

If your memory is full or having memory problems, then you can easily replace the RAM.

Prerequisites:

Remove the battery and the Hard drive before starting this guide.

TOOLS:


Phillips #00 Screwdriver (1)

Spudger (1)

Tweezers (1)

Step 1 — Battery



 Turn off the computer, and unplug it from all external power sources.

- Lay the computer face-down on a flat surface. Orient the computer to match the image.
- Locate the battery release switch, as indicated in the image by the red rectangle. Slide the switch from right to left, and remove the battery.

Step 2 — RAM Cover



- Remove the two 5mm Phillips screws on the right side of the RAM cover.
- Lift the right side of the RAM cover, and remove it.

Step 3 — RAM



- Release the RAM by pressing the metal heads of the RAM clips to the sides. Use [tweezers](#) and the spudger to spread the clips until they are completely off the RAM.
- ⓘ There are two RAM cards in this device.

Step 4



- Remove the RAM.

Step 5



- As in step 3, press the clips on both sides to release the second RAM clip.

Step 6



- Remove the RAM.

To reassemble your device, follow these instructions in reverse order.