




Dell Inspiron E1705 Battery Replacement

How to remove your battery from the battery compartment.


Written By: Malik Shahbal

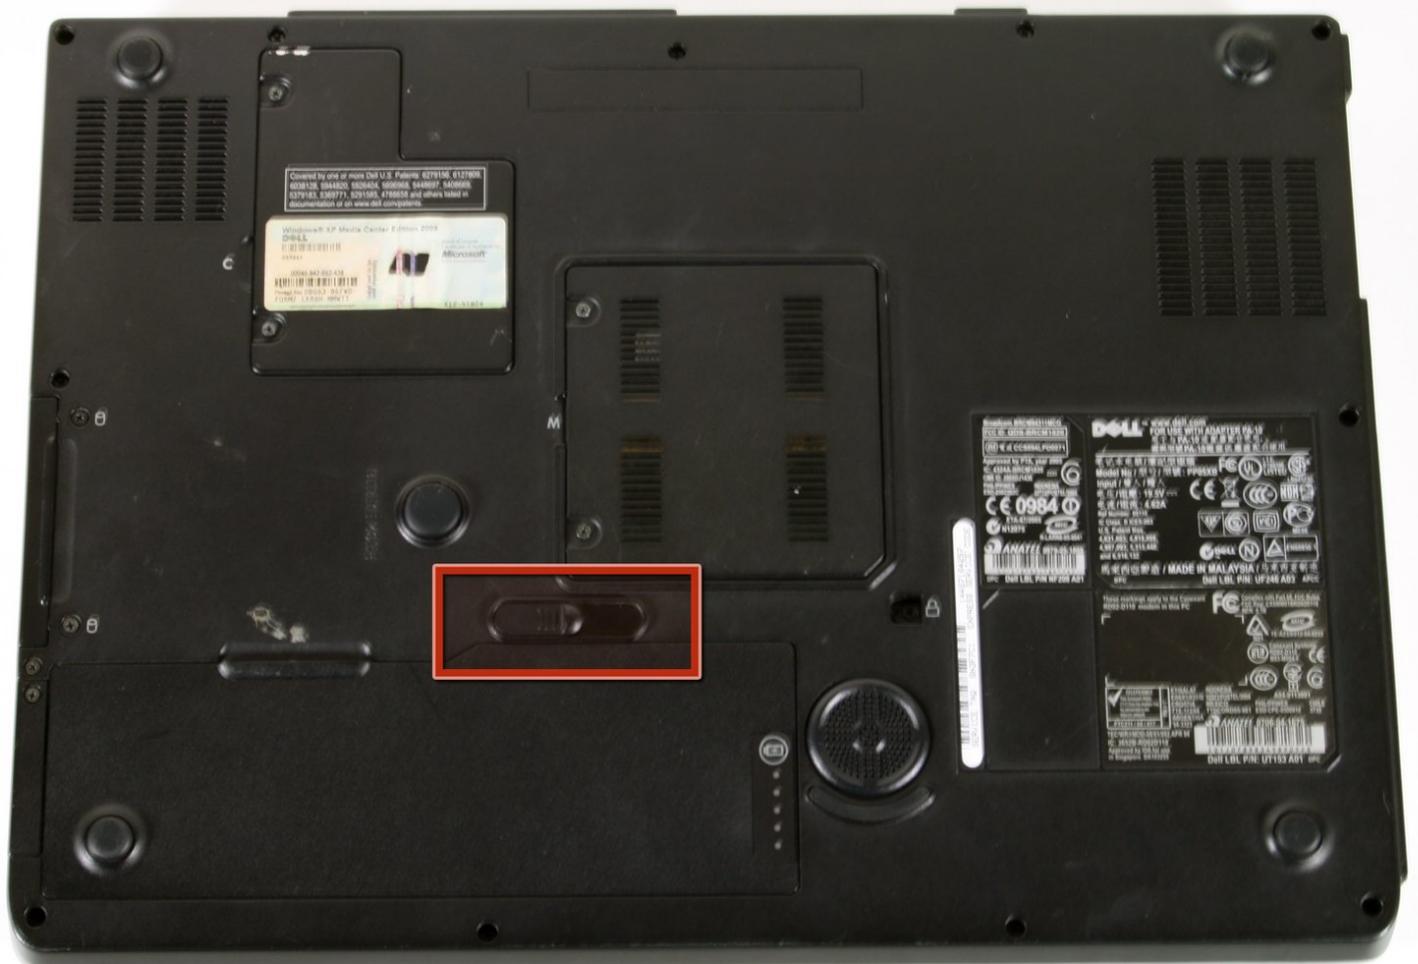

INTRODUCTION

This guide is very important for other guides, as the battery must be removed before dealing with electronic connections within the computers encasement.

Step 1 — Battery

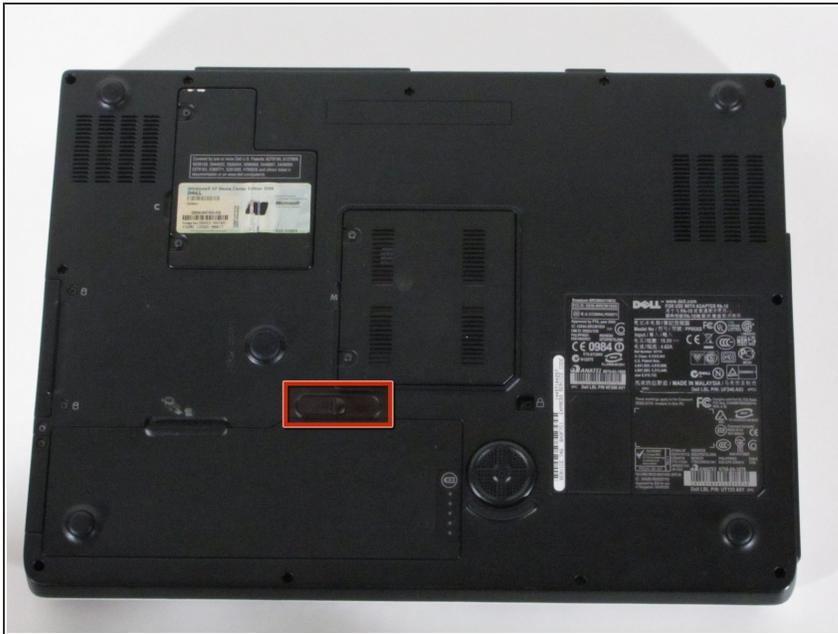

- ⚠ Make sure that the computer is turned off and is disconnected from external power source.
- Turn it upside down and locate the battery release switch.

Step 2



- While holding the switch in the open position, lift out the battery.
- ⓘ If you plan to work on any internal laptop components, press and hold the power button for 5 seconds. This will dissipate any residual charge on the motherboard to prevent electrical shock when you begin to handle it.

To replace your battery, follow these instructions in reverse order.