

# Arnova 7K G3 Rubber Feet Replacement

This guide will show how to remove and replace the rubber feet on the back of the Arnova 7K G3.

Written By: Tyler Sigafoose



#### **INTRODUCTION**

The rubber feet/bumpers on any device can get lost or damaged. This guide will show you how to replace those bumpers on an Arnova 7K G3. First, the disassembly guide to remove the rear cover must be completed and it is included in this guide.



## **TOOLS:**

- Phillips #00 Screwdriver (1)
- iFixit Opening Tools (1)
- Spudger (1)

## Step 1 — Rear Cover








Remove four 5 mm Phillips #00 screws from each corner of the tablet.

## Step 2

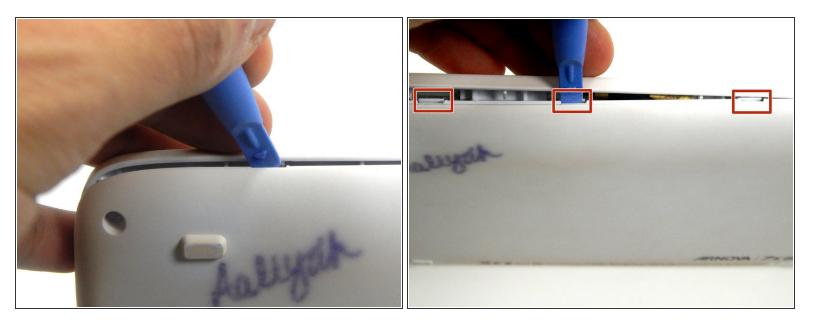


• Place the iFixit opening tool in the notches between the cases and pull the covers apart.

## Step 3



- Repeat step two until 3/4 of the rear cover is unlatched.
- Proceed to remove the rear cover by gently pulling it apart by hand.

## Step 4 — Rubber Feet

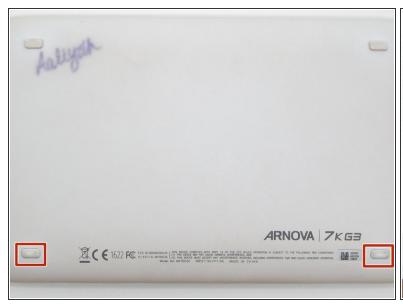



- Locate the two lower bumpers on the back cover. These are the rubber feet.
- Flip the cover over to reveal the inside.
- Locate the two rubber tabs, there are two for each rubber foot. They are located on the inside of the cover.

This document was generated on 2021-03-30 01:19:04 PM (MST).

## Step 5



- Push the two tabs on each foot down using the pointed end of a spudger.
  - it may take some force to push in the tabs. Prying with the pointed end of the spudger and wiggling the tab free may be necessary.

Guide ID: 40471 - Draft: 2021-03-22

## Step 6



 Flip the cover back over so you see the outside. Remove the rubber feet if they have not already fallen out.

To reassemble your device, follow these instructions in reverse order with the new rubber feet.