




Dell Inspiron 530 DCMF Bios Battery Replacement

Replacing a BIOS battery is a quick and easy...

Written By: Drew Cunningham

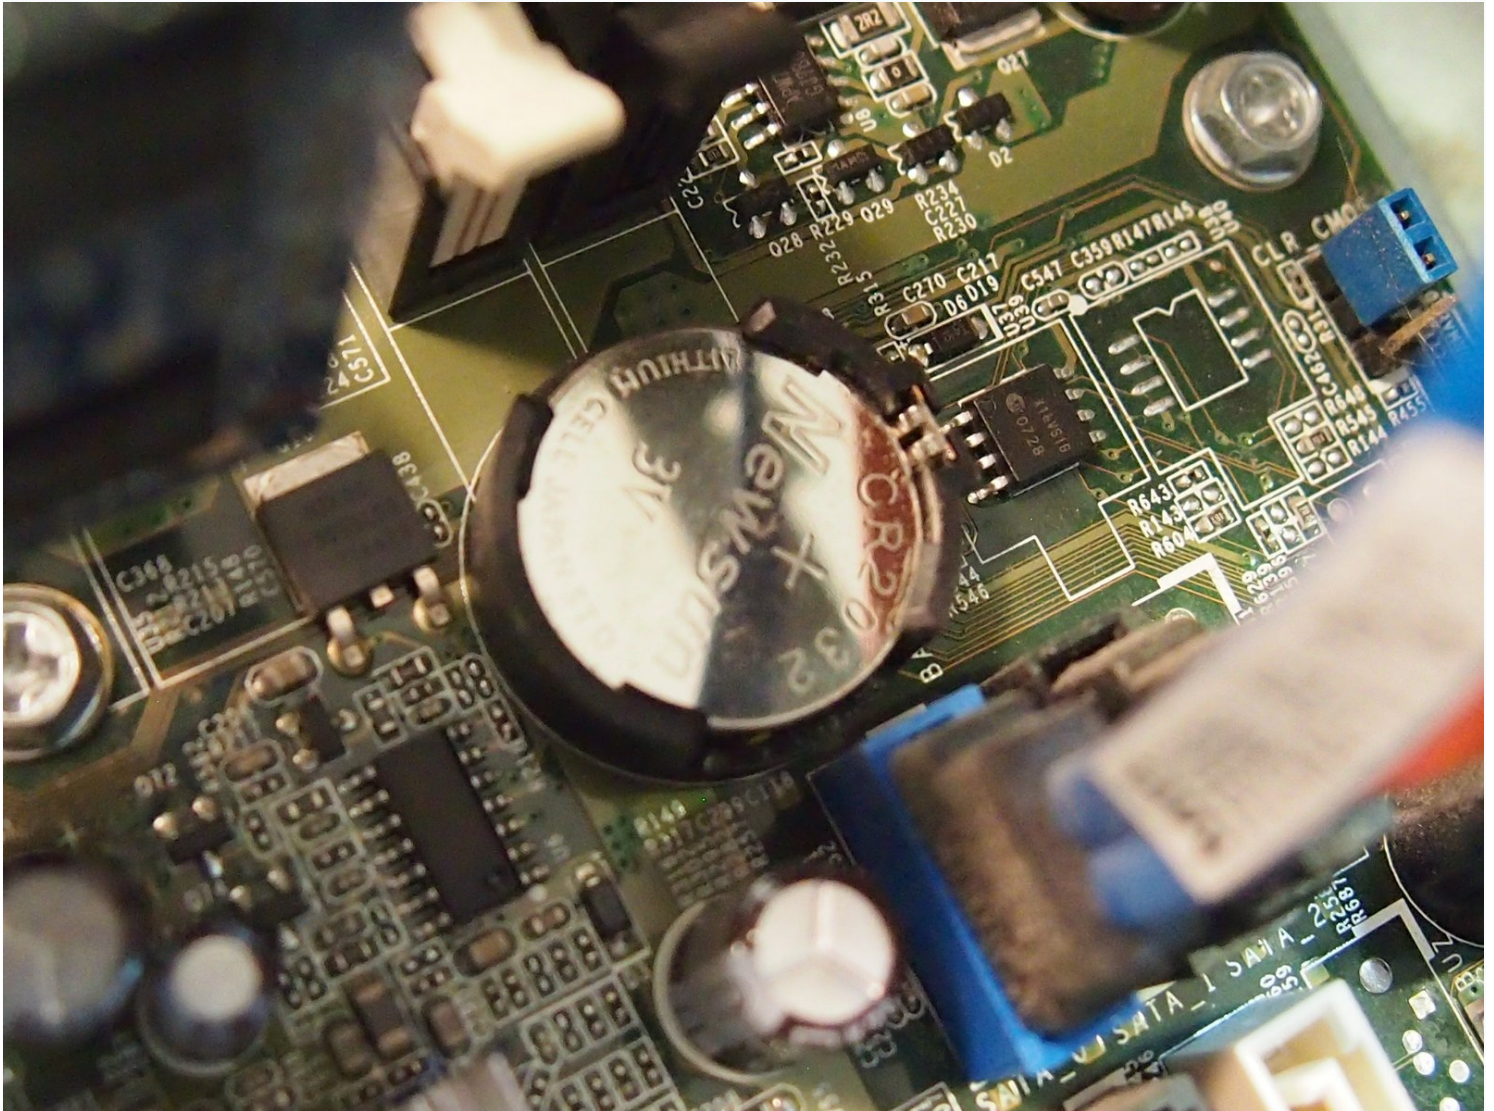

INTRODUCTION

Replacing a BIOS battery is a quick and easy fix. This guide will show how to open the case and replace the CMOS battery of your Dell Inspiron 530 DCMF desktop computer.

TOOLS:


[Screwdriver](#) (1)

[Spudger](#) (1)

PARTS:


[CR2032 Lithium Battery](#) (1)

Step 1 — Bios Battery

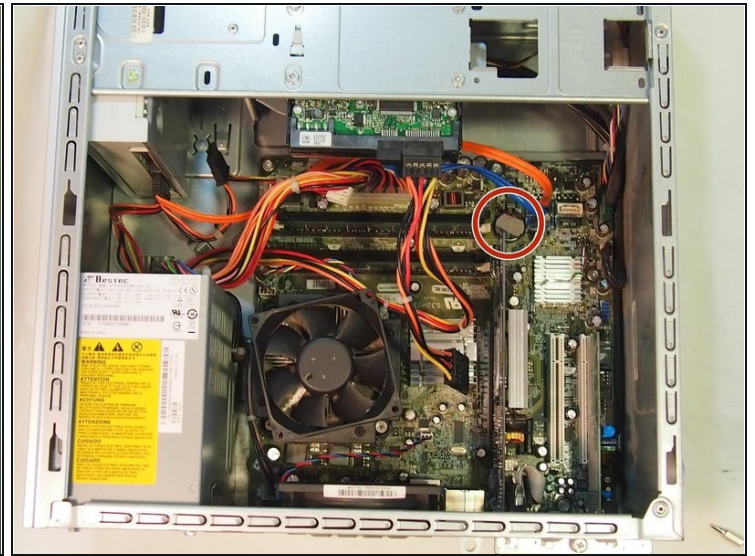

- Unscrew the two highlighted screws in this image
- Slide the side panel toward the back of the computer to open the case and access the internals of the device.

Step 2

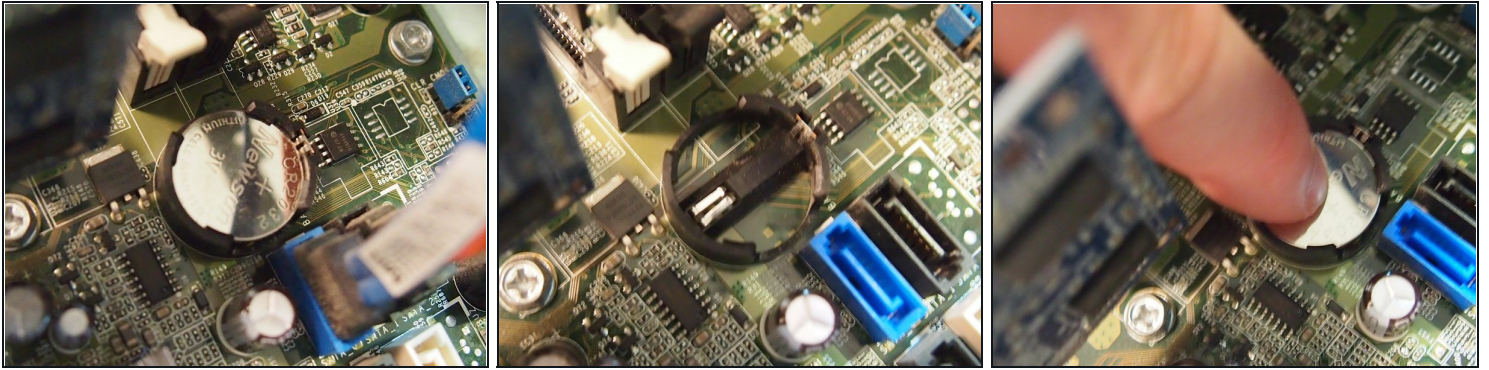

⚠ The CMOS battery has to be removed properly to avoid damaging the motherboard.

- Using either your fingers or a spudger, press the small metal tab securing the battery to remove it.
- ☑ Insert a new battery, reattach the side panel, and you've successfully replaced the BIOS battery.

To reassemble your device, follow these instructions in reverse order.